

Please Read and Save this Use and Care Book.

IMPORTANT SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed, including the following:
- Read all instructions.
 - Do not touch hot surfaces. Use handles or knobs.
 - To protect against fire, electric shock and injury to persons do not immerse cord, plugs or appliance in water or other liquid.
 - Close supervision is necessary when any appliance is used by or near children.
 - Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
 - Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment. Or, call the appropriate toll-free number on the cover of this manual.
 - The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
 - Do not use outdoors.
 - Do not let cord hang over edge of table or counter, or touch hot surfaces.
 - Do not place on or near a hot gas or electric burner, or in a heated oven.
 - Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to OFF, then remove plug from wall outlet.
 - Do not use this appliance for other than intended use.
 - Keep lid on the carafe when in use.
 - Special instructions covering lid placement and removal. Keep the lid of the appliance closed when the appliance operates.
 - Scalding may occur if the lid is removed during the brewing cycles.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the appliance.
 - Appliances with Glass Containers
 - A. The container is designed for use with this appliance. It must never be used on a range top. (Unless specific instructions for use on a range top are provided and include the precautions to be observed.)
 - B. Do not set a hot container on a wet or cold surface.
 - C. Do not use a cracked container or a container having a loose or weakened handle.
 - D. Do not clean container with cleansers, steel wool pads, or other

abrasive material.

SAVE THESE INSTRUCTIONS.

This product is for household use only.

POLARIZED PLUG (120V Models Only)

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

TAMPER-RESISTANT SCREW

Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

ELECTRICAL CORD

- a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cord or extension cord is used,
 - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
 - 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

Note: If the power-supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.



WARNING

RISK OF FIRE OR ELECTRIC SHOCK. DO NOT OPEN.

The lightning symbol refers to "dangerous voltage"; the exclamation symbol refers to maintenance instructions. See below.

WARNING: To reduce the risk of fire or electric shock, do not remove the cover of the coffeemaker. There are no user-serviceable parts inside. Repair should be done by authorized service personnel only.

NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this book. Please **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

TWO-YEAR LIMITED WARRANTY

(Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship provided; however, the liability will not exceed the purchase price of product.

For how long?

- Two years from the date of original purchase with proof of such purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.
- Visit the online service website at www.prodprotect.com/applica, or call toll-free 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

CLEANING TIPS

- Excessive steaming or a prolonged brewing cycle is a sign that a cleaning is needed.
- The frequency of flushing out deposits is determined by your usage and water hardness.
- During cleaning, more steaming occurs than when brewing coffee and there may be some spitting.

Product may vary slightly from what is illustrated.

IMPORTANT: WASH CARAFE BEFORE FIRST USE!



A

1. One-piece reservoir and brew basket cover
2. Brew basket
3. Water reservoir with cup-level markings
4. Water-fill and brewed coffee markings
5. 5-cup/25-oz. (740 ml) carafe
6. On/Off (I/O) switch
7. Nonstick "Keep Hot carafe" plate
8. Cord storage (not shown)
9. Permanent filter

How to Use

This unit is for household use only.

GETTING STARTED

- Remove all packing materials and any stickers from the product.
- Remove and save literature.
- Open one-piece cover for water reservoir and brew basket.
- Pour fresh cold water up to 5-cup level mark into the water reservoir.
- Place permanent filter into brew basket.
- Uncoil power cord and plug into standard electrical outlet.
- Brew water through appliance without adding coffee grounds. This removes any dust or residue that may remain in the system during the manufacturing process.
- Discard the water from the carafe.
- Wash all removable parts as instructed in CARE AND CLEANING section of this manual.
- Turn off the appliance; unplug it and allow appliance to cool down.

BREWING COFFEE

1. Open one-piece cover for water reservoir and permanent filter basket.
2. Pour fresh cold water up to desired level mark into water reservoir.
3. Insert permanent filter into brew basket.
4. Add desired amount of ground coffee.

Note: Not sure how much coffee to use. Begin by using 1 level tablespoon of medium grind coffee for each cup of coffee to be brewed.

5. Close lid securely.
6. Place empty carafe on the keep hot plate.
7. Plug cord into standard electrical outlet.
8. Press OFF/ON (I/O) switch; light comes on and brewing begins.
9. Replace the carafe on the "Keep Hot carafe" plate when not serving to keep coffee hot.

10. Unplug appliance when not in use.

COFFEE BREWING TIPS

- Stir coffee in carafe before serving to evenly distribute the flavor.
- For variety, add a 1-inch piece of lemon or orange peel to the coffee grounds before brewing.
- Add a 2-inch piece of vanilla bean to the sugar bowl. You'll be surprised at how good it tastes.
- Keep your coffeemaker very clean; you'll be pleased with the flavor.
- If coffee is left on the "Keep Hot carafe" plate, be sure to remove the coffee grounds from the filter basket as soon as they have cooled slightly.
- Ground coffee can be stored in an airtight container in the refrigerator up to 2 weeks and still make fresh tasting coffee.
- Use cold tap water; hot tap water that has been sitting in a water heater may give your coffee a metallic taste.

PÓLIZA DE GARANTÍA

(Válida sólo para México)

DURACIÓN

Spectrum Brands de México SA de CV garantiza este producto por 4 años a partir de la fecha original de compra.

¿Qué cubre esta garantía?

Esta Garantía cubre cualquier defecto que presenten las piezas, componentes y la mano de obra contenidas en este producto.

Requisitos para hacer válida la garantía

Para reclamar su Garantía deberá presentar al Centro de Servicio Autorizado la póliza sellada por el establecimiento en donde adquirió el producto. Si no la tiene, podrá presentar el comprobante de compra original.

¿Dónde hago válida la garantía?

Llame sin costo al teléfono 01 800 714 2503, para ubicar el Centro de Servicio Autorizado más cercano a su domicilio en donde usted podrá encontrar partes, componentes, consumibles y accesorios.

Procedimiento para hacer válida la garantía

Acuda al Centro de Servicio Autorizado con el producto con la póliza de Garantía sellada o el comprobante de compra original, ahí se reemplazará cualquier pieza o componente defectuoso sin cargo alguno para el usuario final. Esta Garantía incluye los gastos de transportación que se deriven de su cumplimiento.

Excepciones

Esta Garantía no será válida cuando el producto:

A) Se hubiese utilizado en condiciones distintas a las normales.

B) No hubiese sido operado de acuerdo con el instructivo de uso que le acompaña.

C) Cuando el producto hubiese sido alterado o reparado por personas no autorizadas por Spectrum Brands de México SA de CV.

Nota: Usted podrá encontrar partes, componentes, consumibles y accesorios en los centros de servicios autorizados. Esta garantía incluyen los gastos de transportación que se deriven de sus cumplimiento dentro de sus red de servicio.

MAINTAINING YOUR COFFEEMAKER


Mineral deposits left by hard water can clog your coffeemaker. Cleaning with vinegar is recommended every 3 months.

USING VINEGAR

1. Pour white vinegar into water reservoir up to the 2-cup level marking on water window.
2. Add cold water up to the 5-cup marking.
3. Set empty carafe on the keep hot plate.
4. Turn on coffeemaker and let half the cleaning solution brew into carafe (until water level goes down to around "3"). Turn off coffeemaker and let it soak for at least 15 minutes to soften the deposits.
5. Turn on coffeemaker and brew remaining cleaning solution into carafe.
6. Turn off coffeemaker, empty carafe and wash permanent filter.
7. Fill reservoir with cold water to 5-cup line, replace empty carafe, then turn on coffeemaker for a complete brew cycle to flush out remaining cleaning solution. You may have to repeat this to eliminate the vinegar smell/taste.
8. Wash the brew basket, the permanent filter and carafe as instructed in CLEANING.

CLEANING TIPS

- Excessive steaming or a prolonged brewing cycle is a sign that a cleaning is needed.
- The frequency of flushing out deposits is determined by your usage and water hardness.
- During cleaning, more steaming occurs than when brewing coffee and there may be some spitting.

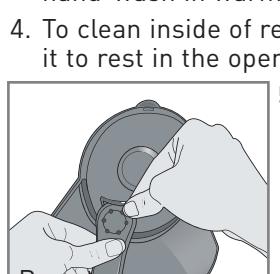

B