

Please Read and Save this Use and Care Book.

IMPORTANT SAFEGUARDS

When using your kettle, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons do not immerse cord, plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control off, then remove plug from wall outlet.
- Do not use this appliance for other than intended use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

THE KETTLE ONLY BE USED WITH THE SUPPORT THAT IS PROVIDED

SAVE THESE INSTRUCTIONS.

This product is for household use only.

TAMPER-RESISTANT SCREW

Warning: this appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. to reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-

30. Lift the filter out of the kettle.
31. Rinse the filter under a running tap while brushing with a soft brush.
32. Rinse the kettle, in case scale particles have fallen inside.
33. Lower the filter into the kettle, and engage the slot at the bottom of the filter in the bottom of the inside of the spout.
34. Press the filter down and towards you, to force the hooks on the top of the filter under the mounts on either side of the spout.
35. Close and lock the lid

Care and Cleaning

This product contains no user serviceable parts. Refer service to qualified service personnel.

1. Before cleaning, be sure the base is unplugged and the kettle has cooled completely. Empty any remaining water from the kettle.
2. Pull out the removable filter for cleaning. Wash the filter in hot, soapy water and rinse or place it in the utensil holder of the dishwasher.
3. Wash the inside of the kettle with hot, soapy water and rinse.

Important: Never immerse the kettle in water or other liquids or place in a dishwasher.

4. Wipe exterior of the kettle and base with a damp cloth or sponge and dry.

Note: The heating element at the bottom of the interior may discolor. This will not affect performance. Do not use abrasive soaps, cleansers, or scouring pads.

Note: Over time, the kettle may heat up but will not boil, depending on your use and the hardness of the water in your area. When this happens, it is time for descaling. Use a scale/lime remover and follow its manufacturer's directions..

serviceable parts inside. Repair should be done only by authorized service personnel.

ELECTRICAL CORD

- a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cord or extension cord is used,
 - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance,
 - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
 - 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel.

Product may vary slightly from what is illustrated.



1. Lid Latch
2. Lid
3. Switch (ON/OFF)
4. Handle
5. Connectors
6. Base
7. Water Level Window
8. Max Water Level
9. Spout
10. Filter

Póliza de Garantía

(Válida sólo para México)

Duración

Rayovac de México SA de CV garantiza este producto por 2 años a partir de la fecha original de compra.

¿Qué cubre esta garantía?

Esta Garantía cubre cualquier defecto que presenten las piezas, componentes y la mano de obra contenidas en este producto.

Requisitos para hacer válida la garantía

Para reclamar su Garantía deberá presentar al Centro de Servicio Autorizado la póliza sellada por el establecimiento en donde adquirió el producto. Si no la tiene, podrá presentar el comprobante de compra original.

¿Donde hago válida la garantía?

Llame sin costo al teléfono 01 800 714 2503, para ubicar el Centro de Servicio Autorizado más cercano a su domicilio en donde usted podrá encontrar partes, componentes, consumibles y accesorios.

Procedimiento para hacer válida la garantía

Acuda al Centro de Servicio Autorizado con el producto con la póliza de Garantía sellada o el comprobante de compra original, ahí se reemplazará cualquier pieza o componente defectuoso sin cargo alguno para el usuario final. Esta Garantía incluye los gastos de transportación que se deriven de su cumplimiento.

Excepciones

Esta Garantía no será válida cuando el producto:

- A) Se hubiese utilizado en condiciones distintas a las normales.
- B) No hubiese sido operado de acuerdo con el instructivo de uso que le acompaña.
- C) Cuando el producto hubiese sido alterado o reparado por personas no autorizadas por Rayovac de México SA de CV.

Nota: Usted podrá encontrar partes, componentes, consumibles y accesorios en los centros de servicios autorizados. Esta garantía incluyen los gastos de transportación que se deriven de sus cumplimiento dentro de sus red de servicio.

How to Use

This product is for household use only.

GETTING STARTED

- Fill to max, boil, discard the water, then rinse, to remove manufacturing dust, etc.

POSITIONING

1. Put the stand on a stable, level surface.
2. Route the cable so it doesn't overhang, and can't be caught or tripped over.
3. Wind excess cable beneath the stand.

FILLING

Caution keep clear, steam may escape from the lid

4. Remove the kettle from the stand.
5. Pull on the lid handle to open the lid.
6. Fill the kettle with at least 2 cups (0.5 liters) of water, but don't fill above max.
7. If you overfill, the kettle may spit boiling water.
8. Close the lid, and press it down, to lock it closed.
9. Check the lid is closed, or the kettle won't switch off when it boils.

SWITCHING ON

10. Put the kettle on the stand – take care not to spill.
11. Plug the stand into a power socket (switch the socket on, if it's switchable).
12. Move the switch to I – the light in the switch will glow, and the kettle will heat up.

SWITCHING OFF

13. When the water boils, the kettle will switch itself off, and the light will go out.
14. To switch off manually, move the switch to **0**.
15. Lifting the kettle off the stand will also switch it off.

GENERAL

16. Remove the kettle from the stand before pouring.
17. To avoid the risk of splashing, pour slowly and don't over-tilt the kettle.
18. Don't tilt the kettle backwards – water might get on to the control area.
19. If this happens, let the kettle dry before use – sit it somewhere to dry for 12 hours.
20. When you lift the kettle, you may see moisture on the stand. Don't worry – it's the steam used to switch the kettle off automatically, which then condenses and escapes via vents under the kettle. to the bonding of the element to the kettle floor.

USING WITH INSUFFICIENT WATER

21. This will shorten the life of the element.
22. A boil-dry cut-out will switch the kettle off.
23. To prevent the kettle cycling on and off, remove the kettle from the stand.
24. Sit the kettle on the work surface till it's cold.
25. Don't fill the kettle till it's cold, or it may spit.

CLEANING THE FILTER

26. Check your hands are free from soap, hand cream, or anything which might leave a stain.
27. Switch the kettle off, and let it cool.
28. Open the lid.
29. Push the top of the filter down and back, into the kettle, to release the hooks on the top of the filter from the mounts on either side of the spout.

Por favor llame al número correspondiente que aparece en la lista a continuación para solicitar que se haga efectiva la garantía y donde Ud. puede solicitar servicio, reparaciones o partes en el país donde el producto fué comprado. También puede consultarnos en el e-mail servicio@applicamail.com.mx

Argentina Servicio Técnico Menrore 3351 CABA Argentina Tel: 0800 – 444 - 7296 servicios@rayovac.com.ar	México Artículo 123 # 95 Local 109 y 112 Col. Centro, Cuauhtemoc, México, D.F. Tel. 01 800 714 2503
Chile SERVICIO DE MAQUINAS Y HERRAMIENTAS LTDA. Portugal N° 644 Santiago – Chile Fonos: 02-6355208 / 02-6341169 Email: servicio@spectrumbrands.cl Call center: 800-171-051	Nicaragua ServTotal De semáforo de portezuelo 500 metros al sur. Managua, Nicaragua, Tel. (505) 248-7001
Colombia Rayovac Varta S.A Carrera 17 Número 89-40 Línea gratuita nacional 018000510012	Panamá Servicios Técnicos CAPRI Tumbamuerto Boulevard El Dorado Panamá 500 metros al sur. Tel. 3020-480-800 sin costo (507) 2360-236 / 159
Costa Rica Aplicaciones Electromecánicas, S.A. Calle 26 Bis y Ave. 3 San Jose, Costa Rica Tel.: (506) 257-5716 / 223-0136	Perú Servicio Central Fast Service Av. Angamos Este 2431 San Borja, Lima Perú Tel. (511) 2251-388
Ecuador Servicio Master Dirección: Capitán Rafael Ramos OE 1-85 y Galo plaza lasso. Tel (593) 2281-3882 / 2240-9870	Puerto Rico Buckeye Service Jesus P. Piñero #1013 Puerto Nuevo, SJ PR 00920 Tel.: (787) 782-6175
El Salvador Calle San Antonio Abad 2936 San Salvador, El Salvador Tel. (503) 2284-8374	Republica Dominicana Prolongación Av. Rómulo Betancourt Zona Industrial de Herrera Santo Domingo, República Dominicana Tel.: (809) 530-5409
Guatemala MacPartes SA 3ª Calle 414 Zona 9 Frente a Tecun Tel. (502) 2331-5020 / 2332-2101	Venezuela Inversiones BDR CA Av. Casanova C.C. City Market Nivel Plaza Local 153 Diagonal Hotel Mella, Caracas. Tel. (582) 324-0969
Honduras ServTotal Contigua a Telecentro Tegucigalpa, Honduras, Tel. (504) 235-6271	www.applicaservice.com servicio@applicamail.com