

**Size: 19.685" x 17.5"**

1. Turn the temperature selector to OFF (O), unplugging the iron and allow to cool completely.
2. Store iron on its heel rest. Storing the iron on its soleplate can cause leaks or damage.
3. Wrap the cord.

#### STORAGE

1. Wipe the soleplate and outer surfaces with a soft cloth or sponge dampened in water. Never use abrasives, heavy duty cleansers, or scouring pads that may scratch or discolor the iron.
2. Move the temperature selector to OFF (O), unplugging the iron and allow the iron to cool completely.

#### CLEANING

This product contains no user serviceable parts. Refer service to qualified service personnel.

## Care and Cleaning

1. Use the fabric guide on the iron to select the proper temperature setting for the fabric.
2. Once you determine the fabric type, set the temperature selector to the appropriate setting for your fabric. Once the iron reaches the selected temperature, the power indicator light will turn off. The light will cycle on an off during ironing.
3. When finished ironing, place iron on its heel rest, turn temperature selector to OFF (O) and unplugging the iron.

#### SELECTING TEMPERATURE

1. Use the fabric guide on the iron to select the proper temperature setting for the fabric.
2. Once you determine the fabric type, set the temperature selector to the appropriate setting for your fabric.
3. When finished ironing, place iron on its heel rest, turn temperature selector to MIN and unplugging the iron.

#### DRY IRONING

1. Use the fabric guide on the iron to select the proper temperature setting before beginning to iron.
2. Important: For optimum performance, let the iron stand for 90 seconds before beginning to iron.

#### GETTING STARTED

Remove any labels, stickers or tags attached to the body or soleplate of the iron.

This product is for household use only.

## How to Use

#### NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on the cover of this book. Please DO NOT return the product to the place of purchase. Also, please DO NOT mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

#### TWO-YEAR LIMITED WARRANTY

(Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship provided; however, Spectrum Brands liability will not exceed the purchase price of product.

For how long?

- Two years from the date of original purchase with proof of such purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.
- Visit the online service website at [www.prodprotect.com/applica](http://www.prodprotect.com/applica), or call toll-free 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.



Product may vary slightly from what is illustrated.

**BLACK+DECKER**™

1. Temperature selector
2. Cord
3. Heel rest
4. Fabric guide
5. Button groove
6. Soleplate

## SAVE THESE INSTRUCTIONS.

This product is for household use only.

Sello del Distribuidor: Fecha de compra: Modelo:	<b>Comercializado por:</b> SPECTRUM BRANDS DE MÉXICO, SA de C.V Autopista México Querétaro No.3069-C Oficina 004 Col. Centro Industrial Tlalnepantla CP 54030  Municipio Tlalnepantla, Estado de México Teléfono: 01-800-714-2503  <b>Servicio y Reparación</b> Art. 123 No. 95 Col. Centro, C.P. 06050 Deleg. Cuauhtemoc  <b>Servicio al Consumidor, Venta de Refacciones y Accesorios</b> 01 800 714 2503
<b>Código de fecha / Date Code</b>	

<b>F54 / F54-50:</b>	<b>1100W 120V- 60 Hz</b>
<b>F54-PE :</b>	<b>1100W 220V- 60Hz</b>

#### Importado y Distribuido por:

Rayovac Argentina S.R.L.  
Humboldt 2495 Piso# 3  
C1425FUG) C.A.B.A. Argentina  
C.U.I.T No. 30-70706168-1

#### Importado por / Imported by:

SPECTRUM BRANDS  
DE MÉXICO, SA de C.V  
Autopista México Querétaro No.3069-C,  
Oficina 004 Col.  
Centro Industrial Tlalnepantla CP 54030  
Tlalnepantla, Estado de México  
Tel. 01-800-714-2503

#### Importado por / Imported by:

Spectrum Brands En Chile,  
Household Products Chile Ltda  
Av. Del Valle 570, Ofic. 704  
Ciudad Empresarial, Huechuraba  
Santiago - Chile  
Fono: (562) 2571 3700

#### Importado por / Imported by:

Spectrum Brands Colombia S.A.  
Carrera 17 No.89-40  
Bogotá, Colombia  
Línea de atención al cliente:  
018000510012

BLACK+DECKER and the BLACK+DECKER logos and product names are trademarks of The Black & Decker Corporation, used under license. All rights reserved.

BLACK+DECKER y los logos y nombres de productos de BLACK+DECKER son marcas registradas de The Black & Decker Corporation, usados bajo licencia. Todos los derechos reservados.

All other marks are Trademarks of Spectrum Brands, Inc.  
Todas la demás marcas son Marcas Registradas de Spectrum Brands, Inc.

© 2019 The Black & Decker Corporation and Spectrum Brands, Inc.  
Middleton, WI 53562.

Made in China  
Fabricado en China

T22-5001819

T22-9001340

2019/04/11

- If an extension cord is absolutely necessary, a cord with an amperage rating equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.
- To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

## SPECIAL INSTRUCTIONS

- The iron is not to be used if it has been dropped, if there is visible signs of damage or if it is leaking.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron must be used and rested on a stable surface.
- Burns can occur from touching hot metal parts, hot water, or steam near children. Do not leave iron unattended while connected or on an ironing board.
- Close supervision is necessary for any appliance being used by or used by children. Do not leave iron unattended while connected or on an ironing board.
- Close supervision is necessary for any appliance being used by or used by children. Do not leave iron unattended while connected or on an ironing board.
- Always disconnect iron from electrical outlet when not in use. Do not operate iron with a damaged cord or if the iron has been tripped over a longer cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a long detachable power-supply cord or extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
- If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.
- Note:** If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

#### ELECTRICAL CORD

Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

#### TAMPER-RESISTANT SCREW

To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

#### POLARIZED PLUG

This appliance has a polarized plug (120V model only).

When using electrical appliances, basic safety precautions should always be followed, including the following:

Read all instructions before using.

Use iron only for its intended use.

To protect against a risk of electric shock, do not immerse the iron in water or other liquid.

The iron should always be turned OFF [O] (refer to HOW TO USE section) before plugging into or unplugging from an outlet. Never yank cord to disconnect from outlet; instead grasp plug and pull to disconnect.

Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.

Always disconnect iron from electrical outlet when not in use.

Do not operate iron with a damaged cord or if the iron has been tripped over a longer cord.

Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

If a long detachable power-supply cord or extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.

If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

**Note:** If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

If an extension cord is absolutely necessary, a cord with an amperage rating equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

If an extension cord is absolutely necessary, a cord with an amperage rating equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

If an extension cord is absolutely necessary, a cord with an amperage rating equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

If an extension cord is absolutely necessary, a cord with an amperage rating equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

If an extension cord is absolutely necessary, a cord with an amperage rating equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

If an extension cord is absolutely necessary, a cord with an amperage rating equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

If an extension cord is absolutely necessary, a cord with an amperage rating equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

If an extension cord is absolutely necessary, a cord with an amperage rating equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

If an extension cord is absolutely necessary, a cord with an amperage rating equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

If an extension cord is absolutely necessary, a cord with an amperage rating equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

If an extension cord is absolutely necessary, a cord with an amperage rating equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

If an extension cord is absolutely necessary, a cord with an amperage rating equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

If an extension cord is absolutely necessary, a cord with an amperage rating equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

If an extension cord is absolutely necessary, a cord with an amperage rating equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

If an extension cord is absolutely necessary, a cord with an amperage rating equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

If an extension cord is absolutely necessary, a cord with an amperage rating equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

If an extension cord is absolutely necessary, a cord with an amperage rating equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

If an extension cord is absolutely necessary, a cord with an amperage rating equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

If an extension cord is absolutely necessary, a cord with an amperage rating equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

If an extension cord is absolutely necessary, a cord with an amperage rating equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

If an extension cord is absolutely necessary, a cord with an amperage rating equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

If an extension cord is absolutely necessary, a cord with an amperage rating equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.

#### MODEL/MODEL

○ **F54**

○ **F54-PE**

○ **F54-50**

**Size: 19.685" x 17.5"**

**Por favor lea este instructivo antes de usar el producto.**

## INSTRUCCIONES IMPORTANTES DE SEGURIDAD

Cuando se utilizan aparatos eléctricos, siempre se debe respetar ciertas medidas de seguridad a fin de reducir el riesgo de un incendio, un choque eléctrico y (o) lesiones a las personas, incluyendo las siguientes:

- Lea todas las instrucciones antes de utilizar el producto.
- Use la plancha únicamente para planchar.
- No sumerja la plancha en agua ni en ningún otro líquido para evitar el riesgo de un choque eléctrico.
- Siempre apague [0] la plancha (vea la sección COMO USAR) antes de conectarla o desconectarla del tomacorriente. Nunca tire del cable para desconectarlo, sujete el enchufe para hacerlo.
- No permita que el cable entre en contacto con superficies calientes. Permita que la plancha se enfríe antes de guardarla. Enrolle el cable holgadamente alrededor de la plancha.
- Siempre desconecte la plancha cuando no esté en uso.
- No haga funcionar la plancha si ésta tiene dañado el cable o si la plancha se ha dejado caer y se ha estropeado. A fin de reducir a un mínimo el riesgo de un choque eléctrico, no desarme la plancha. Acuda a una persona de servicio, calificada para revisar y efectuar las reparaciones necesarias. El armar la plancha incorrectamente puede ocasionar el riesgo de un choque eléctrico cuando la plancha esté en funcionamiento.
- Se requiere supervisión cuando cualquier unidad electrónica esté siendo usada cerca de los niños o por ellos mismos. No desatienda la plancha mientras esté conectada o cuando esté sobre la tabla de planchar.
- Pueden ocurrir quemaduras si se tocan las partes metálicas, el agua caliente, o el vapor.
- Este aparato no está diseñado para ser usado por personas (incluido niños) con capacidad limitada física, mental o sensoriales disminuidas y falta de experiencia o conocimiento que les impida utilizar el aparato con toda seguridad sin supervisión o instrucción.
- Se debe asegurar la supervisión de los niños para evitar que usen el aparato como juguete.
- La plancha debe usarse o colocarse en una superficie plana y firme.
  - Cuando se coloca la plancha sobre el talón de descanso, asegúrese de que la superficie sea plana y firme.
  - La plancha no se debe usar si se ha caído, si se ha dañado o si está goteando.

## Cuidado y limpieza

El aparato no contiene piezas reparables por el consumidor. Para servicio, acuda a personal de asistencia calificado.

##### LIMPIEZA

- Gire el control de temperatura a la posición APAGADO (0), desconecte la plancha y permita que se enfríe completamente.
- Limpie la suela y las superficies exteriores con un paño o una esponja húmeda. Nunca use limpiadores ni fibras abrasivas para no rayar ni decolorar la plancha.

##### ALMACENAJE

- Ajuste el selector de temperatura a la posición APAGADO (0), desconecte la plancha y permita que se enfríe.
- Guarde la plancha sobre su talón de descanso. El guardar la plancha sobre su suela puede causar fugas o daños.
- Enrolle el cable.

## INSTRUCCIONES ESPECIALES

- Para evitar sobrecargas, no opere ningún otro aparato de alto consumo de corriente en el mismo circuito.
- Si el uso de un cable de extensión es absolutamente necesario, un cable con un amperaje nominal igual o mayor que la potencia máxima de la plancha se utilizará. Un cable de menor capacidad puede resultar en un riesgo de choque eléctrico o incendio debido al sobrecalentamiento. Se debe tener cuidado de acomodar el cable de manera que nadie lo hale ni se tropiece.

## CONSERVE ESTAS INSTRUCCIONES.

**Este aparato eléctrico es para uso doméstico solamente.**

##### ENCHUFE POLARIZADO

Este aparato cuenta con un enchufe polarizado (solamente modelo de 120 V). A fin de reducir el riesgo de un choque eléctrico, este enchufe encaja en una toma de corriente polarizada en un solo sentido. Si el enchufe no entra en la toma de corriente, inviértalo y si aun así no encaja, consulte con un electricista. Por favor no trate de alterar esta medida de seguridad.

##### TORNILLO DE SEGURIDAD

Advertencia: Este aparato cuenta con un tornillo de seguridad para evitar la remoción de la cubierta exterior del mismo. A fin de reducir el riesgo de incendio o de choque eléctrico, por favor no trate de remover la cubierta exterior. Este producto no contiene piezas reparables por el consumidor. Toda reparación se debe llevar a cabo solamente por personal de servicio autorizado.

##### CABLE ELÉCTRICO

- a) El producto se debe de proporcionar con un cable eléctrico corto (o uno separable), a fin de reducir el riesgo de tropezar o de enredarse en un cable más largo.
- b) Existen cables eléctricos más largos y separables o cables de extensión que uno puede utilizar si toma el cuidado debido.
- c) Si se utiliza un cable separable o de extensión,
  - 1) el régimen nominal del cable separable o del cable de extensión debe ser, como mínimo, igual al del régimen nominal del aparato.
  - 2) Si el aparato es de conexión a tierra, el cable de extensión debe ser un cable de tres alambres de conexión a tierra.
  - 3) Uno debe de acomodar el cable más largo de manera que no cuelgue del mostrador o de la mesa, para evitar que un niño tire del mismo o que alguien se tropiece.

**Nota:** Si el cordón de alimentación esta dañado, en América Latina debe sustituirse por personal calificado o por el centro de servicio autorizado.

##### ¿NECESITA AYUDA?

Para servicio, reparaciones o preguntas relacionadas al producto, por favor llame al número del centro de servicio que se indica para el país donde usted compró su producto.

NO devuélva el producto al fabricante. Llame o lleve el producto a un centro de servicio autorizado.

##### DOS AÑOS DE GARANTÍA LIMITADA

**(No aplica en México, Estados Unidos y Canada)**

##### ¿Qué cubre la garantía?

- La garantía cubre cualquier defecto de materiales o de mano de obra que no haya sido generado por el uso incorrecto del producto.

##### ¿Por cuánto tiempo es válida la garantía?

- Por dos años a partir de la fecha original de compra mientras que tenga una prueba de la compra.

##### ¿Cómo se obtiene el servicio necesario?

- Conserve el recibo original como comprobante de la fecha de compra, comuníquese con el centro de servicio de su país y haga efectiva su garantía si cumple lo indicado en el manual de instrucciones.

##### ¿Cómo se puede obtener servicio?

- Conserve el recibo original de compra.
- Por favor llame al número del centro de servicio autorizado.

##### ¿Qué aspectos no cubre esta garantía?

- Los productos que han sido utilizados en condiciones distintas a las normales.
- Los daños ocasionados por el mal uso, el abuso o negligencia.
- Los productos que han sido alterados de alguna manera.
- Los daños ocasionados por el uso comercial del producto.
- Los productos utilizados o reparados fuera del país original de compra.
- Las piezas de vidrio y demás accesorios empacados con el aparato.
- Los gastos de tramitación y embarque asociados al reemplazo del producto.

- Los daños y perjuicios indirectos o incidentales.

##### ¿Qué relación tiene la ley estatal con esta garantía?

- Esta garantía le otorga derechos legales específicos y el consumidor podría tener otros derechos que varían de una región a otra.

Este producto puede variar ligeramente del que aparece ilustrado.



- Selector de temperatura**
- Cable**
- Talón de descanso**
- Guía de tejidos**
- Canal de botones**
- Suela**

##### Póliza de Garantía

**(Válida sólo para México)**

##### Duración

**Spectrum Brands de México SA de CV garantiza este producto por 2 años a partir de la fecha original de compra.**

##### ¿Qué cubre esta garantía?

Esta Garantía cubre cualquier defecto que presenten las piezas, componentes y la mano de obra contenidas en este producto.

##### Requisitos para hacer válida la garantía

Para reclamar su Garantía deberá presentar al Centro de Servicio Autorizado la póliza sellada por el establecimiento en donde adquirió el producto. Si no la tiene, podrá presentar el comprobante de compra original.

##### ¿Dónde hago válida la garantía?

Llame sin costo al teléfono 01 800 714 2503, para ubicar el Centro de Servicio Autorizado más cercano a su domicilio en donde usted podrá encontrar partes, componentes, consumibles y accesorios.

##### Procedimiento para hacer válida la garantía

Acuda al Centro de Servicio Autorizado con el producto con la póliza de Garantía sellada o el comprobante de compra original, ahí se reemplazará cualquier pieza o componente defectuoso sin cargo alguno para el usuario final. Esta Garantía incluye los gastos de transportación que se deriven de su cumplimiento.

##### Excepciones

Esta Garantía no será válida cuando el producto:

- A) Se hubiese utilizado en condiciones distintas a las normales.
- B) No hubiese sido operado de acuerdo con el instructivo de uso que le acompaña.
- C) Cuando el producto hubiese sido alterado o reparado por personas no autorizadas por Rayovac de México SA de CV.

**Nota:** Usted podra encontrar partes, componentes, consumibles y accesorios en los centros de servicios autorizados. Esta garantía incluyen los gastos de transportación que se deriven de sus cumplimiento dentro de su red de servicio.

## Como usar

Este product es solamente para uso doméstico.

##### PRIMEROS PASOS

- Despegue toda calcomanía o etiqueta adherida al cuerpo o a la suela de a plancha.

Importante: Para óptimo rendimiento al empezar a usar la plancha, enchúfela, enciéndala y déjela reposar en posición vertical por 90 segundos antes de usar.

- Enchufe la plancha y colóquea sobre su talón.

##### PLANCHADO EN SECO

1. Utilice la guía de tejidos que se encuentra en la plancha para seleccionar la temperatura apropiada para la tela que se va a planchar.

**Consejo:** Para evitar daño a las prendas, si desconoce la fibra de cierto tejido, ensaye primero sobre una superficie pequeña y planche una costura o ruedo interior.

2. Una vez que determine el tipo de tela, gire el selector de temperatura a la posición adecuada para su tela.

3. Cuando termine de planchar, coloque la plancha sobre su talón, gire el selector de temperatura a la posición APAGADO (0) y desconecte la plancha.

##### PARA SELECCIONAR LA TEMPERATURA

- Utilice la guía de tejidos que se encuentra en la plancha para seleccionar la temperatura apropiada para la tela que se va a planchar.
- Una vez que determine el tipo de tela, gire el selector de temperatura a la posición adecuada para su tela. Una vez que la plancha alcanza la temperatura programada, esta luz se apaga. Esta luz se ilumina y se apaga en intervalos durante el ciclo de planchado.
- Cuando termine de planchar, coloque la plancha sobre su talón y gire el selector de temperatura a la posición APAGADO (0) y desconecte la plancha.

<p>Por favor llame al número correspondiente que aparece en la lista a continuación para solicitar que se haga efectiva la garantía y donde Ud. puede solicitar servicio, reparaciones o partes en el país donde el producto fué comprado.</p>	
<p><b>Argentina</b> Atención al consumidor 0800 444 7296 Horario de atención: Lunes a viernes de 9 a 13 hs y de 14.30 a 17 hs. email: servicios@spectrumbrands.com Humboldt 2495 piso 3 C.A.B.A. – Argentina</p> <p><b>Chile</b> Servicios Tecnico Hernandez. Av. Providencia 2529, Local 26. Santiago-Chile. Tlf: 56 222333271 Email: servicioblackanddecker@gmail.com</p> <p><b>Colombia</b> Spectrum Brands Colombia SA Carrera 17 No. 89-40 Bogotá, Colombia Línea de atención al Cliente: 018000510012</p> <p><b>Costa Rica</b> Aplicaciones Electromecanicas Calle 22 y 24 en Avenida 3 BLV de la torre Mercedes Benz 200 mts norte y 50 mts este San José, Costa Rica Tel. (506) 2257-5716</p> <p><b>Ecuador</b> Servicio Master Dirección: Capitán Rafael Ramos OE 1-85 y Galo plaza lasso. Tel (593) 2281-3882 / 2240-9870</p> <p><b>El Salvador</b> Sedeblack Calle San Antonio Abad, Colonia Lisboa No 2936 San Salvador, Depto. de San Salvador Tel. (503) 2284-8374</p> <p><b>Guatemala</b> Kinal 17 avenida 26-75, zona 11 Centro comercial Novicentro, Local 37 - CiudadGuatemala Tel. (502)-2476-7367</p> <p><b>Honduras</b> Serviteca San Pedro Sula, B Los Andes,</p>	<p>2 calle-entre 11-12 Avenida Honduras Tel. (504) 2550-1074</p> <p><b>México</b> Artículo 123 # 95 Local 109 y 112 Col. Centro, Cuauhtemoc, México, D.F. Tel. 01 800 714 2503</p> <p><b>Nicaragua</b> LRM ELECTRONICA Managua - Sinsa Altamira 1.5 kilómetros al norte Nicaragua Tel. (505) 2270-2684</p> <p><b>Panamá</b> Supermarcas Centro comercial El dorado, Plaza Dorado, Local 2. Panama Tel. (507) 392-6231</p> <p><b>Perú</b> Servicio Central Fast Service Av. Angamos Este 2431 San Borja, Lima Perú Local (51) 2251 388</p> <p><b>Puerto Rico</b> Buckeye Service Jesús P. Piñero #1013 Puerto Nuevo, SJ PR 00920 Tel.: (787) 782-6175</p> <p><b>República Dominicana</b> Prolongación Av. Rómulo Betancourt Zona Industrial de Herrera Santo Domingo, República Dominicana Tel.: (809) 530-5409</p> <p><b>Venezuela</b> Inversiones BDR CA Av. Casanova C.C. City Market Nivel Plaza Local 153 Diagonal Hotel Melia, Caracas. Tel. (582) 324-0969</p>