

Size: 19.685" x 17.5"

© 2010 Black & Decker Corporation

Please Read and Save this Use and Care Book.

IMPORTANT SAFEGUARDS

When using your iron, basic safety precautions should always be followed, including the following:

- READ ALL INSTRUCTIONS BEFORE USING.**
- Only use iron for its intended use.
- To avoid risk of electric shock, do not immerse the iron in water or other liquids.
- Always turn iron off before plugging or unplugging from the electrical outlet. Never pull on the cord to disconnect the iron from the electrical outlet; instead, grasp the plug and pull on the plug to disconnect the iron.
- Do not let the cord touch hot surfaces. Let the iron cool completely before putting the iron away. Coil the cord loosely around the iron when storing.
- Always disconnect the iron from the electrical outlet before filling the iron with water, emptying the water from the iron, and when the iron is not in use.
- Do not operate the iron with a damaged cord or in the event the iron has been dropped or damged. To avoid the risk of electric shock, do not disassemble the iron. Take it to a qualified serviceman for examination and repair. Incorrect assembly might result in a risk of electric shock when the iron is used after reassembly.
- Close supervision is necessary for any appliance used by or near children. Do not leave the iron unattended while the iron is connected or on an ironing board.
- Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a steam iron upside down— there might be hot water in the reservoir.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The iron must be used and rested on a stable surface.
 - When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
 - The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

© 2010 Black & Decker Corporation

FABRIC GUIDE

The following chart is designed to help you select the best setting and method for the fabric you intend to iron. Check garment labels and follow recommendations given by the fabric manufacturer.

Position	Fabric	Recommendations
●	Acetate • Nylon	Dry iron, inside out.
●	Silk • Nylon	Dry iron, inside out.
●	Rayon	Check garment label and follow garment manufacturer’s instructions.
●●	Wool • Polyester	Steam iron on wrong side or use pressing cloth.
●●●	Cotton	While fabric is damp, use either steam or dry iron until fabric is dry. Iron dark fabrics inside out to avoid shine.
●●●	Linen	While fabric is damp, use either steam or dry iron until fabric is dry. Iron dark fabrics inside out to avoid shine. Iron table linens on right side.

© 2010 Black & Decker Corporation


Care and Cleaning

This product contains no user serviceable parts. Refer service to qualified service personnel.

CLEANING

- Make sure iron is unplugged and has cooled completely. Wipe the soleplate and outer surfaces with a soft cloth dampened with water and mild household detergent. Never use abrasives, heavy-duty cleansers, vinegar or scouring pads that may scratch or discolor the iron.
- After cleaning, steam iron over an old cloth to remove any residue from the steam vents.

STORING YOUR IRON

- Unplug the iron and let it cool completely.
- Check that the fabric select dial is set to .
- Store iron on its heel rest. Storing iron on its soleplate can cause leaks or damage.

SPECIAL INSTRUCTIONS

- To avoid a circuit overload, do not operate an iron on the same circuit with another high wattage appliance.
- If an extension cord is absolutely necessary, a cord with an ampere rating equal to or greater than the maximum rating of the iron should be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care shall be taken to arrange the cord so that it cannot be pulled or be tripped over.

SAVE THESE INSTRUCTIONS.

This product is for household use only.

POLARIZED PLUG (120V models only)
This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

TAMPER-RESISTANT SCREW

Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

Product may vary slightly from what is illustrated.



- Spray nozzle
- Water-fill opening
- Dry/variable steam selector
- Spray button
- 360° pivoting cord
- Heel rest
- Fabric guide
- Fabric select dial
- Water tank
- Soleplate

© 2010 Black & Decker Corporation

© 2010 Black & Decker Corporation

¿NECESITA AYUDA?
Para servicio, reparaciones o preguntas relacionadas al producto, por favor llame al número del centro de servicio que se indica para el país donde usted compró su producto. NO devuélva el producto al fabricante. Llame o lleve el producto a un centro de servicio autorizado.
DOS AÑOS DE GARANTÍA LIMITADA (No aplica en México, Estados Unidos o Canadá)
¿Qué cubre la garantía?

- La garantía cubre cualquier defecto de materiales o de mano de obra que no haya sido generado por el uso incorrecto del producto.

¿Por cuánto tiempo es válida la garantía?

- Por dos años a partir de la fecha original de compra mientras que tenga una prueba de la compra.

¿Cómo se obtiene el servicio necesario?

- Conserve el recibo original como comprobante de la fecha de compra, comuníquese con el centro de servicio de su país y haga efectiva su garantía si cumple lo indicado en el manual de instrucciones.

¿Cómo se puede obtener servicio?

- Conserve el recibo original de compra.
- Por favor llame al número del centro de servicio autorizado.

¿Qué aspectos no cubre esta garantía?

- Los productos que han sido utilizados en condiciones distintas a las normales.
- Los daños ocasionados por el mal uso, el abuso o negligencia.
- Los productos que han sido alterados de alguna manera.
- Los daños ocasionados por el uso comercial del producto.
- Los productos utilizados o reparados fuera del país original de compra.
- Las piezas de vidrio y demás accesorios empacados con el aparato.
- Los gastos de tramitación y embarque asociados al reemplazo del producto.
- Los daños y perjuicios indirectos o incidentales.

¿Qué relación tiene la ley estatal con esta garantía?

- Esta garantía le otorga derechos legales específicos y el consumidor podría tener otros derechos que varían de una región a otra.

How to Use

This appliance is intended for household use only.

GETTING STARTED

- Remove any labels, stickers or tags attached to the body or soleplate of the iron.
- Please go to www.prodprotect.com/applica to register your warranty.

Important: For optimum performance, let the iron stand for 90 seconds before beginning to iron.


Note: Use ordinary tap water for ironing. Do not use water processed through a home softening system.

FILLING WATER TANK

- Place iron on flat surface with the soleplate tilted up to about a 30 degree angle and using a clean measuring cup, pour water into water-fill opening until water reaches the MAX level mark on the side of the water tank. Do not overfill.
- Plug the iron into an electrical outlet.

STEAM IRONING

Steam is produced when you turn the fabric select dial between settings ●● and ●●●.

- Plug the iron into electrical outlet.
- Be sure there is water in the water tank.
- Turn the fabric select dial to appropriate setting for your fabric (between ●● and ●●●). Read garment’s label to help you determine fabric type.
- Set the steam/dry selector to desired steam setting.
- When finished ironing, turn the steam/dry selector to  and unplug the iron.


Important: Always stand the iron on its heel rest when powered on but not in use.

SPRAY

Use to dampen tough wrinkles at any setting.

- Be sure the iron is filled with water.
- On first use, pump the spray button several times.

DRY IRONING

- Turn the steam/dry selector to .
- Turn the fabric select dial to appropriate setting for your fabric.
- When finished ironing, make sure to unplug the iron.

Important: Always stand the iron on its heel rest when powered on but not in use.

© 2010 Black & Decker Corporation

<p>Por favor llame al número correspondiente que aparece en la lista a continuación para solicitar que se haga efectiva la garantía y donde Ud. puede solicitar servicio, reparaciones o partes en el país donde el producto fué comprado.</p>	
<p>Argentina Atención al consumidor 0800 444 7296 Horario de atención: Lunes a viernes de 9 a 13 hs y de 14.30 a 17 hs. email: servicios@spectrumbands.com Humboldt 2495 piso 3 C.A.B.A. – Argentina</p>	<p>Honduras Serviteca San Pedro Sula, B.Los Andes, 2 calle -entre 11-12 Avenida Honduras Tel. (504) 2550-1074</p>
<p>Chile SERVICIO DE MAQUINAS Y HERRAMIENTAS LTDA. Portugal N° 644 Santiago – Chile Fonos: 02-6355208 / 02-6341169 Email: servicio@spectrumbands.cl Call center: 800-171-051</p>	<p>México Artículo 123 # 95 Local 109 y 112 Col. Centro, Cuauhtemoc, México, D.F. Tel. 01 800 714 2503</p>
<p>Colombia Rayovac Varta S.A Carrera 17 Número 89-40 Línea gratuita nacional 018000510012</p>	<p>Nicaragua LRM ELECTRONICA Managua - Sinsa Altamira 1.5 kilómetros al norte Nicaragua Tel. (505) 2270-2684</p>
<p>Costa Rica Aplicaciones Electromecanicas Calle 22 y 24 en Avenida 3 BLV de la torre Mercedes Benz 200 mts norte y 50 mts este San José, Costa Rica Tel. (506) 2257-5716</p>	<p>Panamá Supermarcas Centro comercial El dorado, Plaza Dorado, Local 2. Panama Tel. (507) 392-6231 Perú Servicio Central Fast Service Av. Angamos Este 2431 San Borja, Lima Perú Tel. (511) 2251-388</p>
<p>Ecuador Servicio Master Dirección: Capitán Rafael Ramos OE 1-85 y Galo plaza lasso. Tel (593) 2281-3882 / 2240-9870</p>	<p>Puerto Rico Buckeye Service Jesús P. Piñero #1013 Puerto Nuevo, SJ PR 00920 Tel.: (787) 782-6175</p>
<p>El Salvador Sedeblack Calle San Antonio Abad, Colonia Lisboa No 2936 San Salvador, Depto. de San Salvador Tel. (503) 2284-8374</p>	<p>Republica Dominicana Prolongación Av. Rómulo Betancourt Zona Industrial de Herrera Santo Domingo, República Dominicana Tel.: (809) 530-5409</p>
<p>Guatemala Kinal 17 avenida 26-75, zona 11 Centro comercial Novicentro, Local 37 - Ciudad Guatemala Tel. (502)-2476-7367</p>	<p>Venezuela Inversiones BDR CA Av. Casanova C.C. City Market Nivel Plaza Local 153 Diagonal Hotel Melia, Caracas. Tel. (582) 324-0969</p>