

REMINGTON®

WETech™

Use and Care Guide
BG3500



Product Features

1. Body Groomer Attachment
2. Groomer Body
3. On/Off Switch
4. Body Groomer Comb
5. Full size trimmer Attachment
6. 2 Attachment Combs
[1.5mm (#0), 3mm (#1)]
7. Adjustable Comb
8. USB Cable (not shown)
9. Storage pouch (not shown)

Register Your New Product Today!

By registering your new Remington® product, you will receive special offers.
Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following.

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

DANGER

To reduce the risk of electric shock:

- Do not place or drop into liquid other than water.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.
- Do not charge product while wet. Dry off groomer before charging.
- Do not charge in shower or sink. The adaptor should not be exposed to water.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Spectrum Brands, Inc.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.

- Do not store this appliance in temperatures exceeding 140°F (60°C).
- Make sure the cord is disconnected from the groomer when storing.
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- Always attach plug to appliance, then adapter to outlet. To disconnect, remove adapter from outlet, then detach power cord from the clipper for storage.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- The power unit is intended to be correctly oriented in a vertical or floor mount position.

SAVE THESE INSTRUCTIONS

Before Using

- Included is a body groom head, full size trimmer, and combs. The groomer and attachments are wet/dry and can be used in the shower.
- After being used in water, it is recommended to dry off the groomer and attachments.

CHARGING

- Before using your groomer for the first time, charge the unit for 4 hours for optimal performance.
- Ensure the product is turned off.
- Connect the USB charging cable to the product. Plug into a USB port on a computer or a USB plug adaptor in an electrical outlet.
- The LED indicator light will flash blue when charging and turn solid blue when fully charged.
- The LED indicator light will turn red when the battery power is low.
- WARNING: Do not charge the groomer in the shower or near water.
- WARNING: Dry off any water and moisture before charging.

What Attachments to Use

	Full Size Trimmer	Body Groom Attachment
Beard	x - with combs	
Mustache	x - with combs	
Nape of neck	x	
Body	x	x - with comb
Head hair	x - with combs	

How To Use

NOTE: This product is for cordless use only.

NOTE: Always ensure the groomer is switched off before changing any attachments.

ATTACHING AND REMOVING TRIMMING ATTACHMENTS:

- To attach: Place the desired trimming head on top of the groomer and rotate clockwise to lock into place.
- To remove: Rotate the trimmer head counter-clockwise until it unlocks and then lift off the groomer.

ATTACHING AND REMOVING BODY GROOMER COMB:

- To attach: Select the desired cutting length by sliding the comb into one of the three slots on the side of the attachment until it snaps in place.
- To remove: With the trimmer blade facing away from you, carefully push the comb upwards and out of the trimmer.

ATTACHING AND REMOVING FIXED GUIDE COMBS ON FULL SIZE TRIMMER ATTACHMENT:

- To attach: With the trimmer blade facing away from you, hook front of comb onto blade teeth and pivot back end down until it clicks into position.
- To remove: With the trimmer blade facing away from you, carefully push the tab on the back of the guide comb upwards and away from the trimmer blade.

ATTACHING, ADJUSTING, AND REMOVING ADJUSTABLE COMB:

- To attach: Line up the rails on the comb with the slots on the sides of the groomer and slide the comb downwards onto the groomer.
- To adjust: Press and hold the adjustment button on the back of the comb and slide the comb up or down to desired position. Release the button to lock the comb in position. The length of cut is indicated by the scale on the side of the trimmer.
- To remove: With the trimmer blade facing away from you, carefully push the adjustment button down and slide comb off.

- Press On/Off Switch to power the groomer.

Cleaning, Care And Maintenance

NOTE: Always clean trimmer attachments after use to ensure maximum performance and a proper operating life.

- Care for your product to ensure a long lasting performance. It is recommended that you clean your groomer after each use.
- The easiest and most hygienic way to clean the groomer is by rinsing the product after use with warm water.

AFTER EACH USE

- Brush any accumulated hairs from the groomer and attachment heads.
- Place one or two drops of cutter oil or sewing machine oil on the blades.
- Turn the groomer on to distribute the oil evenly, wipe off any excess oil.
- Dry the groomer immediately after use.

Battery Disposal

This product contains a lithium-ion battery. To ensure proper disposal of the product, please refer to the battery removal instructions below.

When your rechargeable trimmer reaches the end of its useful life, the Lithium-Ion battery must be removed from the product and be recycled or disposed of properly in accordance with your state and local requirements. If this is not required by law, you may elect to dispose of the product with batteries.

CAUTION! Do not put in the fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do no short circuit as it may cause burns. Dispose of properly in accordance with your local and state requirements.

To Remove the Rechargeable Battery:

1. Make sure the appliance is unplugged.
2. Remove attachment head from trimmer (Press release button and pull head straight away from trimmer body).
3. Using a small screwdriver pry the inner body (white) out from the main body.
4. The inner body containing the motor, circuit, and battery will slide out from main body.
5. Cut the wires holding the battery.
6. Remove the battery of the device.
7. Dispose of batteries.

U.S. residents: To order accessories call 800-392-6544, visit your local retailer, or visit RemingtonProducts.com.

Warranty

Limited Five-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a five-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, DeForest, WI 53532. For more information call 800-736-4648 in the U.S. or Canada.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Any other conditions beyond our control

No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO FIVE YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the disputed Crimea region.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product from an authorized source, you are not satisfied and would like a refund, return it with the sales receipt indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

Remington Guarantees Satisfaction After 30 Days!

Remington 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

*Applies to U.S. and Canadian customers' returns only.

**Terms and conditions apply.

1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® product:
 - a. The Remington® product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at **RemingtonProducts.com/60day**.
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4–6 weeks to receive your refund by check.

100 – 240 Vac 50/60 Hz Type: PG05A

© Registered Trademark and TM Trademark of Spectrum Brands, Inc.

Questions or comments: Call 800-736-4648 in the U.S. or visit **RemingtonProducts.com**

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

© 2022 Spectrum Brands, Inc. All rights reserved. 6/22 29267

Made in China. T22-7002838-A