

# REMINGTON®

## BODY GROOMER

BHT-600 Use & Care Guide



### Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits: Proof of Ownership • Product Protection • Product Registration • Special Offers  
Register online at: [www.RemingtonProducts.com](http://www.RemingtonProducts.com)

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following.

### READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

## DANGER

#### To reduce the risk of electric shock:

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Charger unit is not for immersion or for use in shower.
- Do not use an extension cord with this appliance.
- Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.

## WARNING

#### To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children and persons with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual.
- Do not use the mini shaver on your scalp.
- Do not use attachments not recommended by the manufacturer.

- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store this appliance and electrical power adaptor in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Make sure the cord is disconnected from the groomer when storing.
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- Always attach plug to appliance, then adapter to outlet. To disconnect, turn all controls to OFF, then remove adapter from outlet, then detach power cord from the appliance for storage.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- The power unit is intended to be correctly oriented in a vertical or floor mount position.

## SAVE THESE INSTRUCTIONS

### Grooming System



### Body Groomer Checklist

- |                                     |                                |
|-------------------------------------|--------------------------------|
| 1. Groomer Body                     | 8. Vertical Trimmer Attachment |
| 2. On/Off Switch                    | 9. Vertical Comb               |
| 3. Extendable Handle                | 10. Foil Shaver Attachment     |
| 4. Extendable Handle Release Button | 11. Storage Bag                |
| 5. Charging Indicator Light         | 12. Electrical Power Adapter   |
| 6. Detail Trimmer Attachment        |                                |
| 7. Detail Comb                      |                                |

**NOTE:** When first becoming familiar with the Grooming System, begin with the comb in the longest setting. Adjust cutting length as desired.

### Before Using

Please refer to the safety instructions and warnings at the front of this manual before use.

Before using your Grooming System for the first time, charge the unit for 14-16 hours for optimal performance:


1. Connect the Power Adaptor cord to the bottom of Groomer Body.
2. Plug Power Adaptor into electrical outlet. The indicator light illuminates when the Groomer is charging.
3. This Groomer is intended for cordless operation only.

### What To Use

Detail Comb Settings	Length
1	4mm (1/8")
2	5mm
3	6mm
4	7mm
5	8mm
6	9mm
7	10mm
8	11mm
9	12mm (1/2")

Vertical Comb Settings	Length
1	3mm (1/8")
2	6mm
3	10mm (3/8")

### How To Use

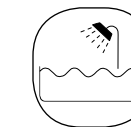

The groomer is a wet groomer, the hand-held part of which may be used in a bath or shower.

The Body Trimmer can be used in the shower or rinsed under water during cleaning. Therefore, to maintain performance of cutters, oil after rinsing.

#### EXTENDABLE HANDLE

This body groomer is equipped with an extendable handle to provide added extension to trim hard to reach areas such as the back.

#### To extend the handle:

1. Press the chrome Release Button in the middle of the groomer body
2. Pull the handle until locked into the fully extended position

#### To retract the handle:

1. Press against handle until it releases from the fully extended position
2. Slide the handle until it latches with the Release Button

#### REMOVING / ASSEMBLING ATTACHMENTS

All attachments can be assembled in 2 orientations, either facing forwards or backwards to provide added versatility.

1. Make sure Groomer is turned OFF.
2. To remove an attachment: Twist the attachment counter clockwise ¼ of a turn and pull head from Groomer Body.  
To assemble an attachment: Align grooves on the neck of the attachment with the Groomer Body in the desired orientation, insert attachment and twist clockwise ¼ turn.

#### DETAIL TRIMMER ATTACHMENT

Use the Detail Trimmer with the Detail Comb to control hair length. Remove comb to define hairline edges or precision blending.

#### VERTICAL TRIMMER ATTACHMENT

The Vertical Trimmer is designed to quickly trim hair over large areas such as the chest and back. Using the Vertical Trimmer with the handle extended is ideal for trimming all hard to reach areas. The Vertical Comb can be used in any of the three length settings by sliding the comb in the grooves on the trimmer or the comb can be removed for a close trim.

## FOIL SHAVER ATTACHMENT

1. Trim hair to shortest length (no comb) with either the Detail or Vertical Trimmer.
2. Pull skin taut with your free hand to force the trimmed hairs to stand on end.
3. Use short, circular strokes with the Foil Shaver Attachment over desired area. For best results only apply light pressure on the shaving head while shaving.
4. Always position the shaver foil so the center of the foil is in contact with the skin.
5. Due to the varying direction body hair grows the Foil Shaver may require multiple passes to remove all hair.

## Cleaning, Care & Maintenance

Always clean Grooming System attachments regularly to ensure maximum performance and a proper operating life. The trimmer is washable so it can be used in the shower or rinsed under water during cleaning. Therefore, to maintain performance of cutters, oil after rinsing.

### Cleaning Cautions

- The handheld unit should be detached from the power supply cord before cleaning.
- Only the attachments and combs may be removed for cleaning.
- Cleaning should be done with a soft brush.
- Only use a light-grade oil like sewing machine oil. These oils will not evaporate or slow down the blades.
- Do not use harsh or corrosive cleaners on the units or their cutters.
- Do not apply pressure or hard objects to cutters.
- Do not disassemble cutter assembly.
- There are no user serviceable parts.

### CLEANING TRIMMER ATTACHMENTS WITH BRUSH / WATER

- Thoroughly brush and blow out hair clippings from cutter system, attachment, and handle.
- Rinse the attachment under warm running water. Do NOT use extremely hot water as this might cause damage to components.

### CLEANING FOIL SHAVER

- Do NOT oil foil shaver attachment as this is permanently lubricated.
- Press release buttons inward at sides of screen head.
- Remove head and shake out clippings. Blow off cutter assembly.
- Replace head, snapping in place to secure.

## OILING BLADES & CAUTIONS

- Rinsing attachments under water requires lubricating the cutting blades. Using only light-grade oils (e.g. sewing machine oil), simply spread 1-2 drops lightly over cutters with fingertip. Wipe away all excess.
- Use only light-grade oils as these will not evaporate nor slow down speed of cutting blades.
- Do not use hair oil, grease, or any oil mixed with kerosene nor solvent as these too will evaporate.

## Troubleshooting

### Q: WHAT IF THE CUTTERS DON'T MOVE WHEN TURNED ON?

**A:** The cutting unit may be dirty or clogged. Clean and lubricate the groomer as described previously.

### Q: WHAT IF THE GROOMER DOESN'T WORK AT ALL WHEN TURNED ON?

**A:** The groomer might simply need charging. Follow instructions for charging as described previously. Should charging prove unsuccessful, contact customer service at 1-800-736-4648 for assistance.

### Q: WHAT IF THE GROOMER FAILS TO HOLD A CHARGE?

**A:** Fully discharge the groomer by running until completely stopping. Next, follow recharging instructions described previously. If time between recharging cycles fails to increase, the battery might require replacement. Contact customer service at 1-800-736-4648 for assistance.

## Product Disposal

**NOTE: Always recycle or properly dispose of batteries according to Local and State requirements.**

1. Unplug groomer from outlet to avoid risk of electrical shock.
2. Pry (2) screw covers from rear end of unit on either side of the charge socket and remove screws.
3. Remove attachment from the unit if applicable.
4. Under the attachment on main body remove (2) screws either side of motor shaft and remove the plastic cover.
5. Remove (2) screws from chrome ring and pry ring free of main body.
6. Remove (2) screws from behind chrome ring.
7. Press the Extendable Handle Release Button and slide the Extendable Handle to the extended position.



8. Separate the handle end of the unit from the attachment end at the remaining chrome ring.
9. Using wire cutters disconnect the battery from the circuit.
10. Remove battery and insulate battery ends by (1) placing battery into a plastic bag or (2) covering the terminals of the battery with plastic or non-conductive electrical tape.
11. Dispose in accordance with state and local regulations.

THIS DEVICE USES EITHER NICKEL METAL HYDRIDE (NiMH), OR NICKEL CADMIUM (Ni-Cd) RECHARGEABLE BATTERIES (see side of removed battery for indication of type).

**CAUTION: ALL RECHARGEABLE BATTERIES MUST BE RECYCLED OR DISPOSED OF IN ACCORDANCE WITH APPLICABLE STATE AND LOCAL REGULATIONS.** Do not put in fire or mutilate, as the battery may burst or release toxic materials. Do not short-circuit, as this may cause burns.

Spectrum Brands, Inc. is a proud participant in the EPA-approved Rechargeable Battery Recycling *Call2Recycle*™, which collects and recycles these batteries at the end of their useful life when taken out of services in the United States or Canada. The RBRC® program provides a convenient alternative to placing used batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-8-BATTERY™ or visit [www.call2recycle.org](http://www.call2recycle.org) for information on battery recycling and disposal bans/restriction in your area. Spectrum Brands, Inc.'s involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.

## Warranty

### Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokley Dr., P.O. Box 1, DeForest, WI 53532. For more information call 800-736-4648 in the U.S. or 800-268-0425 in Canada.

## KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

*No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.*

**SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.**

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

### Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or 800-268-0425 in Canada.

## Remington Guarantees Satisfaction After 30 Days!

### Remington Men's Shave and Groom 60-Day Money Back Guarantee\*

If within 60 days after purchasing any Remington® branded Men's Shave and Groom product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.\*\* For questions concerning the money-back guarantee, please call 800-736-4648 in the US or 800-268-0425 in Canada.

\*Applies to US and Canadian customers' returns only.

\*\*Terms and conditions apply.

### Terms and Conditions

1. Refund will be in the form of a check issued in US Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® branded Men's Shave and Groom product:
  - a. The Remington® product;
  - b. The original sales receipt indicating price and date purchased; and
  - c. The completed 60-day money back guarantee form located at [RemingtonProducts.com/60day](http://RemingtonProducts.com/60day).
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:  
Remington 60-Day MBG  
507 Stokely Drive, Box 1  
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

120 VAC 60 Hz

**Questions or comments:** Call 800-736-4648 in U.S. or 800-268-0425 in Canada or visit [www.RemingtonProducts.com](http://www.RemingtonProducts.com)

REMINGTON® is a Registered Trademark of Spectrum Brands, Inc. RBRC®, the RBRC logo, Call2Recycle™ and 1-800-8-BATTERY™ are the trademarks and service marks of Call2Recycle, Inc.

© 2015 Spectrum Brands, Inc. 7/15 12202-00

Dist By: Spectrum Brands, Inc., Middleton, WI 53562  
Dist. by: Spectrum Brands Canada, Inc.,  
131 Saramia Crescent, Vaughan, ON L4K 4P7

MADE IN CHINA

T22-28616

Contains a listed adaptor