

REMINGTON®

BEARD & GOATEE TRIMMER

PG6015

Use & Care Guide



Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits: Proof of Ownership • Product Protection • Product Registration • Special Offers
Register online at: www.RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following.

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

DANGER

To reduce the risk of electric shock:

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or in the shower.
- Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Spectrum Brands, Inc.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Never drop or insert any object into any of the appliance's openings.

- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Make sure the cord is disconnected from the groomer when storing.
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- Always attach plug to appliance, then adapter to outlet. To disconnect, turn all controls to OFF, then remove adapter from outlet, then detach power cord from the clipper for storage.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- The power unit is intended to be correctly oriented in a vertical or floor mount position.

SAVE THESE INSTRUCTIONS

Trimmer



Grooming System Checklist

1. Groomer Body
2. On/Off Switch
3. Charging Indicator Light
4. Trimmer Head
5. 3 Snap On Combs
 - #1 - 3mm
 - #2 - 6mm
 - #3 - 9mm
6. Power Port
7. Power Adapter

Before Using

Before using your Personal Groomer for the first time, charge the unit for 14-16 hours for optimal performance.

1. Connect the Power Adaptor cord to the trimmer. Plug into electrical outlet.
2. The indicator light illuminates when charging.

Normal charging time is 14-16 hours. Normal run time is 30 minutes.

How To Use

1. Select the guide comb that best fits your personal grooming needs.
2. While groomer is off, hook the teeth of the blade onto the guard comb first. Then press down on the back of the comb. When the comb is properly engaged you will hear a "click".
3. To remove guide comb, pull the small tab on rear of comb up and away from groomer.

Cleaning, Care and Maintenance

NOTE: Always clean groomer head regularly to ensure maximum performance and a proper operating life.

CLEANING ATTACHMENTS WITH WATER

1. Remove Groomer Head by turning in a counter clockwise direction.
2. Rinse ONLY the Groomer Head under warm running water. Do NOT use hot water as this might cause damage.

CLEANING WITH BRUSH

- Thoroughly brush and blow out hair clippings from Groomer Head.

OILING BLADES & CAUTIONS

- Rinsing Groomer head under water (above) requires lubricating the cutting blades 1x monthly. Using only light-grade oils (e.g. sewing machine oil), simply spread 1-2 drops lightly over cutters with fingertip. Wipe away all excess.
- Use only light-grade oils as these will not evaporate nor slow down speed of cutting blades.
- Do not use hair oil, grease, or any oil mixed with kerosene nor solvent as these too will evaporate.

RUNTIME/PERFORMANCE

- Failure to clean attachments of excess hair/dirt can result in reduced performance and runtime.

U.S. residents: To order accessories, contact us at 800-392-6544, visit us at www.RemingtonProducts.com, or visit your local retailer.

Canadian residents: To order accessories, please call 800-268-0425 or visit us at www.RemingtonProducts.com.

Product Disposal

NOTE: Always recycle or properly dispose of batteries according to Local and State requirements.

1. Unplug trimmer from outlet to avoid risk of electrical shock.
2. Pry the lower housing from the product with a flat head screw driver. This will expose the batteries.
3. With wire cutters, clip the wires leading to the batteries.
4. Remove the batteries from the product. Contact your local authorities for proper disposal.



THIS DEVICE USES EITHER NICKEL METAL HYDRIDE (NiMH), OR NICKEL CADMIUM (Ni-Cd) RECHARGEABLE BATTERIES (see side of removed battery for indication of type).

CAUTION: ALL RECHARGEABLE BATTERIES MUST BE RECYCLED OR DISPOSED OF IN ACCORDANCE WITH APPLICABLE STATE AND LOCAL REGULATIONS. Do not put in fire or mutilate, as the battery may burst or release toxic materials. Do not short-circuit, as this may cause burns.

Spectrum Brands, Inc. is a proud participant in the EPA-approved Rechargeable Battery Recycling *Call2Recycle*SM, which collects and recycles these batteries at the end of their useful life when taken out of services in the United States or Canada. The RBRC[®] program provides a convenient alternative to placing used batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-8-BATTERYSM or visit www.call2recycle.org for information on battery recycling and disposal bans/restriction in your area. Spectrum Brands, Inc.'s involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.

Warranty

Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the U.S. or call 800-268-0425 in Canada or visit www.RemingtonProducts.com.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear and breakage
- Any other conditions beyond our control

No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington[®] branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or call 800-268-0425 in Canada or visit www.RemingtonProducts.com.

Remington Guarantees Satisfaction After 30 Days!

Remington Men's Shave and Groom 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington[®] branded Men's Shave and Groom product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the US or 800-268-0425 in Canada.

*Applies to US and Canadian customers' returns only.

**Terms and conditions apply.

Terms and Conditions

1. Refund will be in the form of a check issued in US Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington[®] branded Men's Shave and Groom product:
 - a. The Remington[®] product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at RemingtonProducts.com/60day.
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

120 VAC 60 Hz

REMINGTON[®] is a Registered Trademark of Spectrum Brands, Inc. RBRC[®], the RBRC logo, Call2RecycleSM and 1-800-8-BATTERYSM are the trademarks and service marks of Call2Recycle, Inc.

Questions or comments: Call 800-736-4648 in the US or 800-268-0425 in Canada or visit RemingtonProducts.com

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562
Dist. by : Spectrum Brands Canada, Inc.
131 Saramia Crescent, Vaughan, ON L4K 4P7

© 2015 Spectrum Brands, Inc. 7/15 12203-00

Made in China

T22-0001809

Contains a listed adaptor