

F0050



Use and Care Guide

Register Your New Product Today!

By registering your new Remington® product, you will receive special offers.
Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following. **Read all instructions before using this shaver.**

DANGER

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS:

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning.
- Do not use while bathing or in the shower.
- Do not place in or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Always unplug this appliance from the electrical outlet immediately after using.
- Use only when the shaver is in dry condition.
- Detach the appliance from the power supply cord before cleaning.
- Do not submerge in water.

WARNING

 
To reduce the risk of burns, fire, electric shock, or injury to persons:

- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children, or individuals with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Spectrum Brands, Inc.
- Never operate this appliance if it has a damaged cord or plug or if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.

- Keep the cord away from heated surfaces.
- Never drop or insert any object into any of the appliance's openings.
- Household use only.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always attach the plug to the appliance, then to outlet. To disconnect, turn all controls to OFF, then remove plug from outlet.
- Always pull on cord plug to unplug from wall socket. Never pull on electric cord.
- Do not plug or unplug this appliance when your hands are wet.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Detach removable cords from appliance for storage.
- Do not use this appliance with a damaged or broken head or cutters, as facial injury may occur.
- Shavers are for use on facial hair only. They should not be used for shaving the hair on your head or any other part of your body.
- If travelling outside of North America use an attachment plug adaptor of the proper configuration for the power outlet, if needed.

SAVE THESE INSTRUCTIONS

Product Features

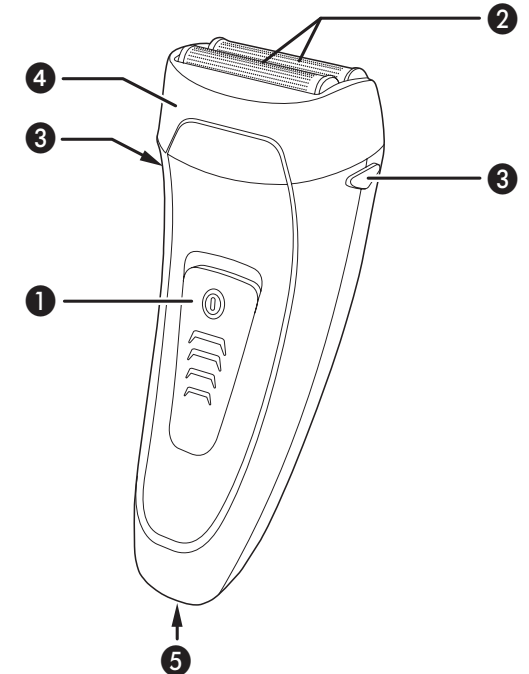

SHAVER PARTS

- | | |
|-------------------------|---------------------------|
| 1. On/off switch | 5. Adapter socket |
| 2. Foil screens | 6. Adapter (not shown) |
| 3. Head release buttons | 7. Head guard (not shown) |
| 4. Hairpocket | |

Product may vary slightly from what is illustrated.

Power System

Corded – shaver can only be used with the power cord.

Voltage Type

Worldwide Voltage – shaver automatically adapts to an outlet voltage between 120V and 240V.

Instructions for Use

- Ensure your skin is free of oils.
- Wait at least 15 minutes after getting up before shaving, to ensure your face is free of puffiness that may be present from sleeping.
- Connect the shaver to the adapter and then to the power outlet.
- Switch the shaver on by sliding up the on/off switch.
- Always hold the shaver at a right angle to the skin so that the screens are touching the skin with equal pressure.
- Stretch skin with the free hand so hairs stand upright, making it easier for them to enter the cutting chamber.
- Use moderate to slow, circular stroking movement.
- The use of short, circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- Do not press hard against the skin to avoid skin irritation and/or damage to the shaver head.

 
 
We recommend that you use your new shaver daily for up to four weeks to allow time for your hair and skin to become accustomed to the new shaving system.

Cleaning and Care

Cleaning Your Shaver

Note: We recommend following these steps after each use.

1. Ensure the shaver is switched off and unplugged from the power outlet.
2. Open the shaver head (FIG A).
3. Tap out excess hair shavings and use a cleaning brush if necessary (FIG B).
4. Replace the head assembly.

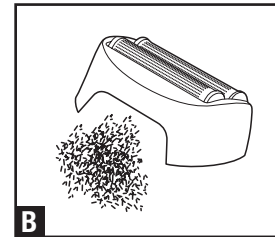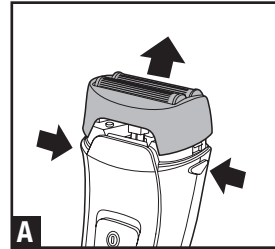

Warranty

Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the U.S.

Warranty excludes:

- Foils and cutters

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear and breakage
- Any other conditions beyond our control

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S.

Remington Guarantees Satisfaction After 30 Days!

Remington® 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® branded product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S.

*Applies to U.S. customers' returns only.

**Terms and conditions apply.

Terms and Conditions

1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington branded product:
 - a. The Remington product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at **RemingtonProducts.com/60day**.
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

Voltage: 100-240V 50/60 Hz TYPE: F06A

Questions or comments: Call 800-736-4648 in the U.S.
Or visit **RemingtonProducts.com**

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562
® Registered Trademark of Spectrum Brands, Inc.

© 2019 Spectrum Brands, Inc. 4/19 24831 Made in China

T22-7000966-A



REMINGTON®

TRIM & DETAIL GROOMING KIT

Use and Care Guide

Model: PG6010



Register Your New Product Today!

By registering your new Remington® product, you will receive special offers.
Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following.

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

DANGER

To reduce the risk of electric shock:

- Do not reach for an appliance that has fallen into water.
- Do not use while bathing or in the shower.
- Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.

WARNING

 
To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual.
- Do not use the mini shaver on your scalp.
- Do not use attachments not recommended by Spectrum Brands, Inc.
- Never operate this appliance if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Never drop or insert any object into any of the appliance's openings.

- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store this appliance in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.

SAVE THESE INSTRUCTIONS

Replacing the Batteries

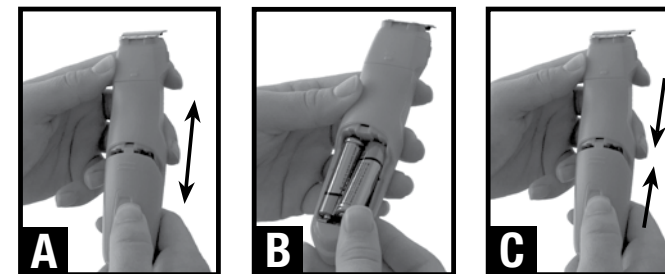


This Remington® detail trimmer runs on two "AA" ALKALINE batteries.

Inserting the Batteries

1. Make sure the trimmer is "OFF".
2. To open the battery compartment, slide the lower back panel off of the unit. (Figure A)
3. Insert two "AA" ALKALINE batteries, positive ends first. Make sure to match the battery positive symbols (+) to the positive symbols (+) on the unit. (Figure B)
4. Slide back panel onto the unit, making sure it snaps into place. (Figure C)

Use of any batteries other than alkaline will negatively affect the unit's operating performance. Batteries should not be left in the unit if the unit is not in use for long periods. To prevent battery corrosion the unit should be kept in a dry environment. Dead batteries should be removed immediately and disposed of properly. Do not use rechargeable batteries. The lower voltage in recharged batteries impairs the performance of the cutting unit.

 Product Features

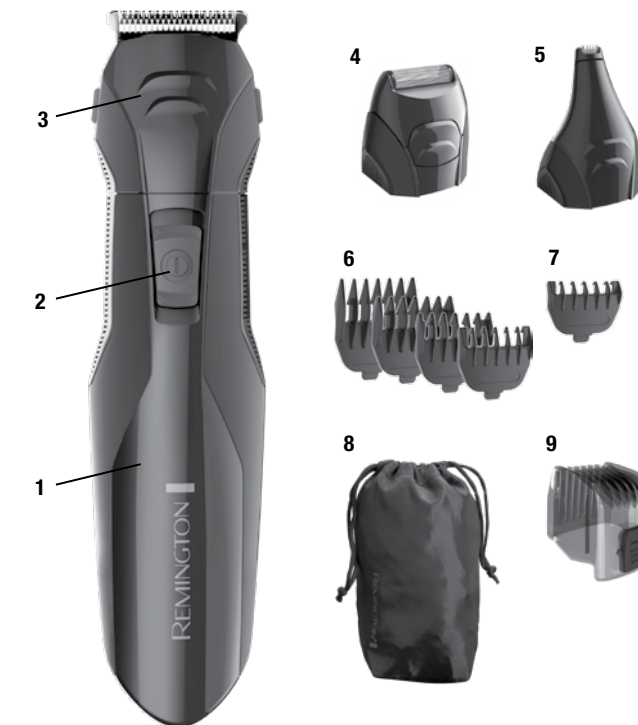

1. Groomer Body
2. On/Off Switch
3. Full-Size Trimmer Attachment
4. Detail Shaver Attachment (not included with F0050GPHOL)
5. Nose, Ear & Detail Trimmer Attachment
6. 4 Beard Combs (3mm, 6mm, 9mm, 12mm)
7. Stubble Comb (1.5mm)
8. Storage Bag
9. Adjustable Comb (included with F0050GPHOL only)
10. 2 AA Batteries (not shown)

Before Using

What Attachments to Use

	Full Size Trimmer	Nose/Ear Trimmer	Hair Length Combs	Foil Shaver
Beard	x		x	
Beard line	x			x
Ear		x		
Eyebrow		x	x	
Mustache	x		x	
Nape of neck	x			
Nose		x		
Sideburns	x		x	x
Head Hair	x		x	

How to Use

1. Select attachment that best fits your personal grooming needs.
2. Place attachment atop Groomer Body. Secure by carefully inserting and turning attachment in a clockwise direction.
3. To remove attachment, follow Step 2 in reverse order.
4. Slide On/Off Switch upward to power the Personal Groomer.
5. To use the Beard and Stubble Combs, hook the front edge of the comb to the front teeth of the main trimmer blade. Then push the back of the comb down until it snaps in place.

Cleaning, Care and Maintenance

NOTE: Always clean trimmer attachments regularly to ensure maximum performance and a proper operating life.

DO NOT RINSE TRIMMER HANDLE.

CLEANING ATTACHMENTS WITH WATER

1. Remove attachment.
2. Rinse **ONLY** the attachment under warm running water. Do **NOT** use hot water as this might cause damage.

CLEANING DETAIL SHAVER

(Do **NOT** rinse nor oil detail shaver attachment as this is permanently lubricated.)

1. Remove attachment by pressing security latches on front of detail shaver.
2. Remove head, shake to remove excess clippings.
3. Replace attachment by gently snapping into place.

OILING BLADES AND CAUTIONS

- Rinsing attachments under water (above) requires lubricating the cutting blades 1x monthly. Using only light-grade oils (e.g. sewing machine oil), simply spread 1-2 drops lightly over cutters with fingertip. Wipe away all excess.

Warranty

Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, DeForest, WI 53532. For more information call 800-736-4648 in the U.S. and Canada or visit RemingtonProducts.com.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Any other conditions beyond our control

No responsibility, obligations, or liability are assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. and Canada or visit RemingtonProducts.com.

Remington Guarantees Satisfaction After 30 Days!

Remington 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. and Canada.

*Applies to U.S. and Canadian customers' returns only.

**Terms and conditions apply.

Terms and Conditions

1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® branded product:
 - a. The Remington® product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at RemingtonProducts.com/60day.
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

Questions or comments: Call 800-736-4648 in the U.S. and Canada or visit RemingtonProducts.com.

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

Dist. by: Spectrum Brands Canada Inc.
255 Longside Drive, Unit 101
Mississauga, ON L54 1L8

® Registered Trademark of Spectrum Brands, Inc.

© 2019 Spectrum Brands, Inc. 7/19 26666 TYPE: PG6010

Made in China

T22-0005495-B