

REMINGTON®

Rechargeable Cordless Foil Shaver

F3010



Use and Care Guide

Register Your New Product Today!

By registering your new Remington® product, you will receive special offers.
Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following. Read all instructions before using this shaver.

DANGER

To reduce the risk of electric shock:

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or in the shower.
- Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Use only when the shaver is in dry condition.
- Detach the appliance from the power supply cord before cleaning.
- Do not submerge in water.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children, or individuals with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug or if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any of the appliance's openings.
- Household use only.

- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always attach the plug to the appliance, then to outlet. To disconnect, turn all controls to OFF, then remove plug from outlet.
- Always pull on cord plug to unplug from wall socket. Never pull on electric cord.
- Do not plug or unplug this appliance when your hands are wet.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.

- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Detach removable power cords from appliance for storage.
- Do not use this appliance with a damaged or broken head or cutters, as facial injury may occur.
- Shavers, including the trimmer, are for use on facial hair only. They should not be used for shaving the hair on your head or any other part of your body.
- The power unit is intended to be correctly oriented in a floor mount position.

SAVE THESE INSTRUCTIONS

Product Features



Shaver Parts

- On/Off Slide Switch
- Foils
- Cutter Assembly
- Hair Pocket: the space inside the cutter assembly
- Charging Port
- Pop-up Trimmer
- Protective Head Guard
- Cleaning Brush
- USB Charging Cable (not shown)

Product may vary slightly from what is illustrated.

About Your Shaver

FEATURE	F3010
POWER SYSTEM	Cordless/Rechargeable
BATTERY TYPE	NiMH
FULL CHARGE TIME	10 hours
CORDLESS SHAVE TIME	up to 40 minutes
INDICATORS	Single LED when charging
VOLTAGE	5Vdc
REPLACEMENT PART NO.	SPF-PF73A

Cordless/Rechargeable - The shaver can only be used without the power cord.
Indicators:
Single LED - Solid green light indicates shaver is charging. Light will stay on at full charge until unplugged.

Charging

Before using, read the important safety instructions in front of the manual.

- Plug USB charging cable into shaver (A).
- Plug USB charging cable into a standard USB type-A wall adaptor (output: 5Vdc). The LED charging indicator will glow green.

NOTE: Your shaver will have a partially charged battery. We recommend giving the battery a full charge prior to your first use.

Use the product until the battery is low. To preserve the life of the batteries, let them fully run out every six months, then recharge them for a full 24 hours.

 
 
CAUTION!

- Make sure the shaver and your hands are dry when placing the shaver on charge.
- Always charge the shaver in a cool, dry place.

Shave

Before using, read the important safety instructions in front of the manual.

- Begin by removing the protective head guard from your shaver.
- Slide up On/Off slide switch to turn on (B).
- Stretch the skin with your free hand so the hairs stand upright.
- Hold the shaving head so all screens touch your skin simultaneously. The independently floating foils automatically adjust to the contours of your face. Only apply light pressure on the shaving head while shaving and use short, circular strokes (C).
- After shaving, turn the shaver off (B).

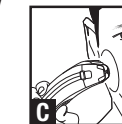



Remington recommends that you use your new shaver daily for up to three weeks to allow time for your hair and skin to become accustomed to the new shaving system.

Shaving Tips

- Ensure your skin is dry and free of oils.
- Wait at least 15 minutes after getting up before shaving, to ensure your face is free of puffiness that may be present from sleeping.
- Always hold the shaver at a right angle to the skin so the screens are touching the skin with equal pressure.
- Stretch skin with the free hand so hairs stand upright, making it easier for them to enter the cutting chamber.
- Shave with short, circular strokes. The use of short, circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- Do not press hard against the skin in order to avoid damage to the foil heads.

Trim

  - Slide trimmer release button up to engage the trimmer (D).
- Trim long, difficult hairs and side burns (E).
- Close trimmer by sliding the button down (F).

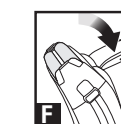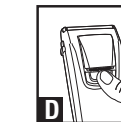

Cleaning and Care

NOTE: When cleaning your shaver, make sure the shaver is turned off and disconnected from the power cord.

For optimal shaver performance, clean your shaver after each use.

- Do not remove or replace head assembly while shaver is running as it may cause damage to the unit's screens and cutters.
- To clean the external surfaces of the shaver, use a damp cloth. Do not use strong detergents or other chemicals.
- To dry, wipe the surface of the shaver with a dry towel. Do not use a hair dryer or heater to dry the shaver.
- The shaver should not be used until it has dried.
- Lubricate each cutter with household oil.
- This shaver has no user serviceable parts.



Daily Cleaning:

1. Grasp the raised grips on the cutter assembly and pull away from the shaver body. The raised grips are on the front and back (G).
2. Tap the stubble from the foils and cutters.
3. Replace the cutter assembly.

Monthly Cleaning:

1. Grasp the raised grips on the cutter assembly and pull away from the shaver body. The raised grips are on the front and back (G).
2. Tap the stubble from the foils and cutters.
3. Use the cleaning brush to sweep away loose hairs from the cutters and from inside the hair pocket (H).
4. Replace the cutter assembly.

Power Adaptor

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS

For connection to a power supply not in the U.S.A., use an attachment plug adapter of the proper configuration for the power outlet.

Battery Removal

When your rechargeable shaver reaches the end of its useful life, the batteries must be removed from the shaver and recycled or disposed of properly in accordance with your state and local requirements. If this is not required by law, you may elect to dispose of the shaver with the batteries.

This device uses one of the following types of rechargeable batteries: nickel metal hydride (NiMH), nickel cadmium (Ni-Cd) or Lithium Ion (Li-Ion) (see included battery for indication of type).

CAUTION: ALL RECHARGEABLE BATTERIES MUST BE RECYCLED OR DISPOSED OF IN ACCORDANCE WITH APPLICABLE STATE AND LOCAL REGULATIONS. DO NOT PUT IN FIRE OR MUTILATE, AS THE BATTERY MAY BURST OR RELEASE TOXIC MATERIALS. DO NOT SHORT-CIRCUIT, AS THIS MAY CAUSE BURNS.

1. Remove phillips head screw at the base of the shaver.
2. Pry the outer sleeve off the shaver handle.
3. Pry back the housing cover off the shaver.
4. Snip the battery wires and remove the batteries.
5. Dispose of batteries properly.

How to Order Shaver Accessories

Please refer to the shaver comparison and features chart near the front of this manual that lists the correct replacement part number for your shaver.

It is very important to replace your head and cutters when necessary to ensure a close, comfortable shave without irritation. We recommend they be replaced every 6 months. Here are some signs of head and cutter wear, indicating that replacement is needed:

- **Irritation:** As the heads get excessively worn you may experience some skin irritation. This would be especially noticeable when you apply moisturizing lotion.
- **Pulling:** When the cutters wear you may feel a sense of pulling and a loss of closeness when you shave. This is an indication that it is time to replace your heads and cutters.

Warranty

Limited Three-Year Warranty

Empower Brands, LLC warrants this product to the original purchaser against any defects that are due to faulty material or workmanship for a three-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge.

For more information call 800-736-4648 in the U.S. or Canada.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Any other conditions beyond our control

No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.

EMPOWER BRANDS, LLC SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO THREE YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the disputed Crimea region.

Empower Brands, LLC Money-back Offer

If within 30 days after you have purchased your Remington® branded product from an authorized source, you are not satisfied and would like a refund, return it with the sales receipt indicating purchase price and date of purchase to the retailer from whom it was purchased. Empower Brands, LLC will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

Remington Guarantees Satisfaction After 30 Days!

Remington 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, keep your receipt and contact us at contactus@remingtonproducts.com or call 800-736-4648 in the U.S. or Canada.**

*Applies to U.S. and Canadian customers' returns only.

**Terms and conditions apply.

1. Refund will be in the form of a check issued in U.S. Dollars and will include applicable taxes, if any, paid by customer.
2. Please allow 4–6 weeks to receive your refund by check.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Please do not throw this product away with normal household waste. If possible, take it to an official collection point in your area that recycles this type of product. Thank you for considering the environment.

5Vdc TYPE: F22B

Questions or comments: Call 800-736-4648 in the US or visit RemingtonProducts.com.

Dist. by: Empower Brands, LLC, Middleton, WI 53562

® Registered Trademark and ™ Trademark of Empower Brands, LLC.
© 2024 Empower Brands, LLC All rights reserved. 03/24 30493

Made in China.

T22-7003208-A