

# REMINGTON®

## T-Series Ultimate Precision Haircut Kit

*Use and Styling Guide*  
HC3160



### Register Your New Product Today!

By registering your new Remington® product, you will receive special offers.  
Register online at: [RemingtonProducts.com](http://RemingtonProducts.com)

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following. Read all instructions before using this appliance.

### DANGER

**To reduce the risk of electric shock:**

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or in the shower.
- Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.

### WARNING

**To reduce the risk of burns, fire, electric shock or injury to persons:**

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in.
- Close supervision is necessary when this appliance is used on or near children or persons with special needs.
- This appliance is not to be used by a child.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Spectrum Brands, Inc.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Never drop or insert any object into any of the appliance's openings.

- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not plug or unplug this appliance when your hands are wet.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not place this appliance on any surface while operating.
- Do not use this appliance with a damaged or broken cutting unit, as injury may occur. Always make certain blades are aligned properly.

## SAVE THESE INSTRUCTIONS

## Product Features

Thank you for choosing Remington. Your clipper is designed to perform dependably and efficiently for years to help you to maintain a range of hair styles.

1. Clipper
2. Foil Shaver
3. Storage Pouch
4. 12 Guide Combs

Comb Guide	Length
#0	1.5mm (1/16")
	2.0mm
	2.5mm
#1	3.0mm (1/8")
	4.5mm
#2	6.0mm (1/4")
#3	9.0mm (3/8")
#4	12mm (1/2")
#5	15mm (5/8")
#6	18mm (3/4")
#7	22mm (7/8")
#8	25mm (1")



## How to Use the Clipper

### Worldwide Voltage

This clipper works with 100V to 240V power source.

 
### Line Cord Safety Tips

1. To insert plug, grasp it firmly and guide it into outlet.
2. To disconnect the appliance, grasp the plug and remove it from outlet. Do not pull or yank on the cord or appliance. **Do not wrap the cord around the appliance.**

### To Attach And Remove the Trimming Attachments

**Note:** Always ensure the trimmer is switched off before changing any attachments. The trimmer comes with the Precision T-Blade attached.

- To remove the T-Blade attachment, pull upwards.
- To attach the Foil Shaver push the head down until you hear a click.
- The Precision T-Blade can be used facing forward or away from you for enhanced visibility and control (A).

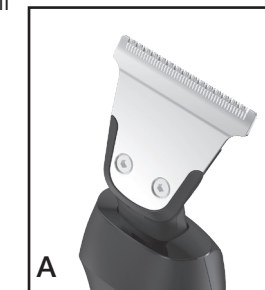

### To Attach Guide Combs

1. Select the trimming guide that matches the length you want the hair to be after the cut. The trimming guides are numbered and marked with specific lengths. (See preceding product features to determine which combs are included.)
2. While the clipper is off and the T-Blade attachment on the clipper, hold the guide comb with the teeth up. Hook the front edge of the comb to the teeth of the clipper blade. Then push the back of the comb down until it snaps in place.

### To Remove Guide Combs

Pull small tab on rear of comb up and away from clipper.

## Styling Guide

### Giving a Comfortable, Even Cut

Allow the clipper to cut through the hair at a moderate pace. Moving the clipper too quickly may result in discomfort or an inadequate cut. Use short strokes when cutting, and initially use longer guide combs until you are comfortable with the length of the cut.

 
### How to Give a Haircut

#### Select three combs.


##### Example:

Longest length: 1"  
Medium length: 3/4"  
Shortest length: 1/4"


- Put the longest guide comb on the clipper and cut hair on the top of the head from front to back.

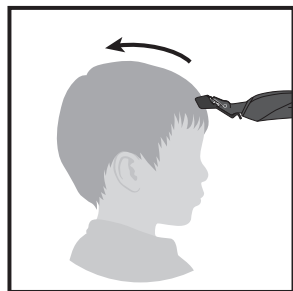

 
- With the same comb attached, trim the upper sides and back of the head with upward strokes.

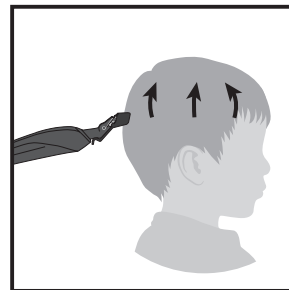

 - Put on the medium length guide comb. Imagine a horizontal line where you want to transition between the medium and longer lengths. Cut hair on the sides and back of the head with upward strokes from the neck almost to the line. When you get to the line, rock the clipper back and pull away from the head to create a gradual transition. Check over and even up your work.

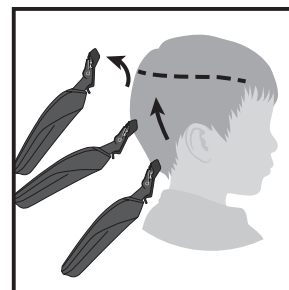

 - Put on the shortest length guide comb. Imagine another horizontal line, about even with the base or middle of the ears, to transition between the shortest and the medium length. Use the same technique as in step 3 to create another gradual transition.

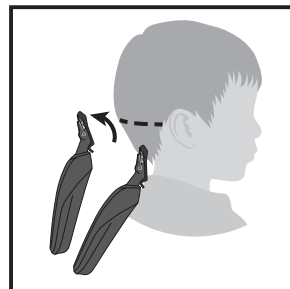

- To complete the cut, comb and inspect for missed or uneven hairs. Use a scissors to cut if necessary. To clean up edge around ears and neckline, use the clipper without a guide comb to trim down to skin level.

## Cleaning & Maintenance

#### After Each Use:

- Remove the accumulated hair from the cutters. **Do not submerge the trimmer in water.**

#### Cleaning Cautions:

- Do not use liquid cleaners on the cutters or harsh or corrosive chemicals on the cutter casing.
- Unplug the trimmer from the power outlet when not in use and when cleaning.

#### Storage

- Always store this appliance and cord in a moisture-free area.
- Do not wrap the cord around the appliance.
- Do not store in temperatures above 140°F.

#### Blades

- It is recommended to oil the blades after every use.
- Place 1 to 2 drops of lubricating oil on the moving blade and turn on the trimmer. The oil should distribute on its own. Wipe off any excess oils.

#### Troubleshooting

##### Clipper cutters do not move:

- The cutting unit may be dirty and clogged. Clean the unit as directed in Cleaning & Maintaining section.
- Always clean the blade and trimmer before storing.
- Always place the blade protection guard back on the clipper blades before storing.

U.S. residents: To order accessories, contact us at 800-392-6544, visit us at [RemingtonProducts.com](http://RemingtonProducts.com), or visit your local retailer.

## Performance Guarantee

### Limited Five-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a five-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the U.S. or Canada.

#### KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Any other conditions beyond our control

*No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.*

**SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO FIVE YEARS FROM DATE OF ORIGINAL PURCHASE.**

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

**This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the disputed Crimea region.**

### Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product from an authorized source, you are not satisfied and would like a refund, return it with the sales receipt indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

#### Remington Guarantees Satisfaction After 30 Days!

##### Remington 60-Day Money Back Guarantee\*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.\*\* For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

\*Applies to U.S. and Canadian customers' returns only.

\*\*Terms and conditions apply.

- Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
- The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® product:
  - The Remington® product;
  - The original sales receipt indicating price and date purchased; and
  - The completed 60-day money back guarantee form located at [RemingtonProducts.com/60day](http://RemingtonProducts.com/60day).

- In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).

- Returns should be mailed prepaid (no collect returns accepted) to:  
Remington 60-Day MBG  
507 Stokely Drive, Box 1  
DeForest, WI 53532

- Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.

- No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.

- Please allow 4–6 weeks to receive your refund by check.

At the end of this product's life, you can mail it to Spectrum Brands at 507 Stokely Drive, Deforest, WI 53532 marked "Product Takeback: Please Recycle!"

100-240VAC 50/60Hz

Type: HC12A

**Questions or comments:** Call 800-736-4648 in the U.S. or visit [RemingtonProducts.com](http://RemingtonProducts.com).

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

®/TM are owned by Spectrum Brands, Inc.

© 2020 Spectrum Brands, Inc. 8/20 27924

**Made in China.**  
**T22-7001695-A**