REMINGTON®

VIRTUALLY

INDESTRUCTIBLE

HAIRCUT AND BEARD TRIMMER

HC5855

Use and Care Guide



Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits: Proof of Ownership • Product Protection • Product Registration • Special Offers Register online at: www.RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following; read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

- Keep away from water. Do not use in area that can be dropped into a sink
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or in the shower.
- Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Unplug this appliance before cleaning it.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by the manufacturer.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. If any of these things happen, return the appliance to an authorized service center for examination and repair.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.

- Make sure the cord is disconnected from the clipper while storing this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.

SAVE THESE INSTRUCTIONS

Product Features

Developed to combine professional grade blades with premium guide combs, this Indestructible Haircut and Beard Trimmer enables you to achieve customized, modern looks and traditional hairstyles. To help you create those styles, and to extend the life of your trimmer, please read all instructions before using.

- Trimmer
- **2.** 1" (25mm)
- **3.** 7/8" (22mm)
- **4.** 3/4" (18mm)
- **5.** 5/8" (16mm)
- **6.** 1/2" (12mm)
- **7.** 3/8" (9mm)
- **8.** 1/4" (6mm)

- - 11. Storage Pouch 12. Blade Guard
- 13. Oil Bottle
 - 14. Styling Comb
 - 15. Beard Brush

9. 1/8" (3mm)

10. 1/16" (1.5mm)

To Install Blade

THE TAP

Removeable Blade

■ To reattach blade, slide cartridge back into clipper body.

Place blade guard onto the blades before removing.

■ The blade can be easily brushed for cleaning

■ To remove blade, hold the trimmer with front of blade teeth facing away.


NOTE: DO NOT CLEAN BLADE OR CLIPPER HANDLE WITH WATER OR UNDER

■ Push the blade cartridge out, using the thumb cut out on the back of

■ When pushing blade back into position, ensure that you do not push on the metal blades; there is a plastic portion of the blade cartridge that should be pushed in.



Attaching Guide Comb

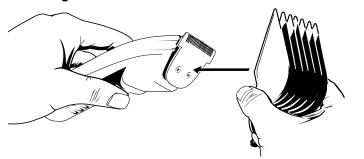

- Guide combs should be installed by first hooking the blade teeth to front side of guide comb. Then press the back of the guide comb down until it snaps into place.
- 2. Ensure comb is attached before beginning to cut hair.
- **3.** To remove, pull the snap tab on back side of guide comb and pull the comb off.

Hair Length Settings

Comb Guide Number:	Length:
0	1/16" (1.5mm)
1	1/8" (3mm)
2	1/4" (6mm)
3	3/8" (9mm)
4	1/2" (12mm)
5	5/8" (16mm)
6	3/4" (18mm)
7	7/8" (22mm)
8	1" (25mm)

Line Cord Safety Tips

NOTE: This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug.

If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

- 1. To insert plug, grasp it firmly and guide it into outlet.
- To disconnect the appliance, grasp the plug and remove it from outlet. Do not pull or yank on the cord or appliance. Do not wrap the cord around the appliance.
- The clipper comes with a 8 foot cord. Care should be taken when storing the product in its case to not bend or crimp in a way to put stress on it.

Cleaning & Maintenance

Cleaning & Maintaining Your Clipper

After each use:

 Remove the accumulated hair from the cutters. Do not submerge the trimmer in water.

Cleaning Cautions:

- Do not use liquid cleaners on the cutters or harsh or corrosive chemicals on the cutter casing.
- Unplug the trimmer from the power outlet when not in use and when cleaning.

Storage

- Always store this appliance and cord in a moisture-free area.
- Do not wrap the cord around the appliance.
- Do not store in temperatures above 140°F.

ne.

- It is recommended to oil the blades after every use.
- Place 1 to 2 drops of lubricating oil on the moving blade and turn on the trimmer. The oil should distribute on its own. Wipe off any excess oils.

Troubleshooting

Clipper cutters do not move:

- The cutting unit may be dirty and clogged. Clean the unit as directed in Cleaning & Maintaining section.
- Always clean the blade and trimmer before storing.
- Always place the blade protection guard back on the clipper blades before storing.

U.S. residents: To order accessories, contact us at 800-392-6544, visit us at RemingtonProducts.com, or visit your local retailer.

Canadian residents: To order accessories, please call 800-268-0425 or visit us at RemingtonProducts.com.

Warrantv

Lifetime Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for the life of the product. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective, we will replace it free of charge. Return your product with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the US or 800-268-0425 in Canada.

Warranty excludes:

■ The blades are not included in lifetime warranty

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO THE LIFE OF THE PRODUCT.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the US or 800-268-0425 in Canada.

Remington Guarantees Satisfaction After 30 Days!

Remington Men's Shave and Groom 60-Day Money Back Guarantee*
If within 60 days after purchasing any Remington branded Men's Shave and
Groom product, you are not completely satisfied and would like a refund, return
it with the original dated sales receipt directly to Remington and receive a full
refund.** For questions concerning the money-back guarantee, please call
800-736-4648 in the US or 800-268-0425 in Canada.
**Terms and conditions apply.

Terms and Conditions

at the time of purchase).

- Refund will be in the form of a check issued in US Dollars and will be provided only if all Terms and Conditions are met.
- 2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington branded Men's Shave and Groom product:
 - a. The Remington product;
 - b. The original sales receipt indicating price and date purchased; and c. The completed 60-day money back guarantee form located at ReminatonProducts.com/60day.
- In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product
- 4. Returns should be mailed prepaid (no collect returns accepted) to: Remington 60-Day MBG

507 Stokely Drive, Box 1 DeForest, WI 53532

- Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
- No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
- **7.** Please allow 4-6 weeks to receive your refund by check.
- *Applies to US and Canadian customers' returns only.

Questions or comments: Call 800-736-4648 in the US or 800-268-0425 in Canada or visit **RemingtonProducts.com.**

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562 Dist. by: Spectrum Brands Canada Inc., 131 Saramia Crescent, Vaughan, ON L4K 4P7

® Registered Trademark of Spectrum Brands, Inc. (SBI)

© 2014 SBI 9/14 Job# 10951-00

Made in China



T22-0002799 120 VAC 60 Hz