

REMINGTON®

Adjustable Beard and Mustache Trimmer

MB2500



Use and Care Guide

Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits:
Proof of Ownership • Product Protection • Product Registration • Special Offers
Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following.

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

DANGER

To reduce the risk of electric shock:

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or in the shower.
- Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Spectrum Brands, Inc.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Never drop or insert any object into any of the appliance's openings.

- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- Always attach plug to appliance, then adapter to outlet. To disconnect, turn all controls to OFF, then remove adapter from outlet, then detach power cord from the clipper for storage.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- The power unit is intended to be correctly oriented in a vertical or floor mount position.

SAVE THESE INSTRUCTIONS

Grooming System



Grooming System Checklist

- | | |
|-----------------------------|--|
| 1. 8 Length Adjustable Comb | 5. Fixed guide combs –
1.5mm, 3mm, 6mm, 9mm |
| 2. Trimmer Body | 6. Storage Pouch |
| 3. On/Off Switch | 7. Scissors |
| 4. Charging Indicator Light | 8. Power Adapter |

NOTE: The Comb Attachments have various length settings. When first becoming familiar with the Trimmer, begin with a higher numbered setting. Adjust cutting length, as desired.

Before Using

Before using your Trimmer for the first time, charge the unit for 4 hours for optimal performance:

1. Ensure the product is turned off.
2. Connect the Power Adaptor cord to the product. Plug into electrical outlet. The indicator light illuminates when plugged in.

How To Use

NOTE: This product is for cordless use only.

Adjustable Comb

1. To attach the Adjustable Comb, align the Comb side rails with slots of Trimmer head. Secure Comb by sliding downward. (NOTE: a clicking sound means Comb attachment is secure and ready for use).
2. Select length that best fits your personal grooming needs.
3. Slide On/Off Switch upward to power the Trimmer.

Fixed Guide Combs

To attach:

With the trimmer blade facing away from you, hook front of comb onto blade teeth and push back and down until it clicks into place.

To remove:

With the trimmer blade facing away from you, carefully push the tab on the back of the guide comb upwards and away from trimmer blade.

Grooming Tips

BEARD / MUSTACHE:

- Use small comb to straighten hairs for trimming.
- When TRIMMING, first select desired comb attachment. Starting under chin, follow the jaw line back toward ear. Trim in multiple directions to capture all stray hairs.
- When THINNING or TAPERING, use a small comb to hold beard in place. In opposite hand, hold Trimmer with cutting system facing outward while slowly moving Trimmer along length of comb. The Adjustable Comb Attachment can also be used to achieve desired look.

NAPE OF NECK:

- Using a hand-held mirror is necessary if self-trimming.
- Lift hair off neck, using index finger to cover and protect hairs NOT needing trimming.
- Carefully touch cutting blade to neck, slowly moving the trimmer in an upward direction until stopped by index finger.

Cleaning, Care and Maintenance

NOTE: Always clean attachments regularly to ensure maximum performance and a proper operating life.

CLEANING ATTACHMENTS WITH WATER

1. Remove attachment.
2. Rinse **ONLY** the attachment under warm running water. Do **NOT** use hot water as this might cause damage.

CLEANING ATTACHMENTS WITH BRUSH

- After first removing attachment, thoroughly brush and blow out hair clippings from cutting system, attachment, and top of power handle.

OILING BLADES AND CAUTIONS

- Rinsing attachments under water (above) requires lubricating the cutting blades 1x monthly. Using only light-grade oils (e.g. sewing machine oil), simply spread 1-2 drops lightly over cutters with fingertip. Wipe away all excess.
- Use only light-grade oils as these will not evaporate nor slow down speed of cutting blades.
- Do not use hair oil, grease, or any oil mixed with kerosene nor solvent as these too will evaporate.

Troubleshooting

Q: WHAT IF THE CUTTERS DON'T MOVE WHEN TURNED ON?

A: The cutting unit may be dirty or clogged. Clean and lubricate the trimmer as described previously.

Q: WHAT IF THE TRIMMER DOESN'T WORK AT ALL WHEN TURNED ON?

A: The trimmer might simply need charging. Follow instructions for charging as described previously. Should charging prove unsuccessful, contact customer service at 1-800-736-4648 in the U.S.

Q: WHAT IF THE TRIMMER FAILS TO HOLD A CHARGE?

A: Fully discharge the trimmer by running until completely stopping. Next, follow recharging instructions described previously. If time between recharging cycles fails to increase, the battery might require replacement. Contact customer service at 1-800-736-4648 in the U.S.

Product Disposal

NOTE: Always recycle or properly dispose of batteries according to Local and State requirements.

1. Unplug trimmer from outlet to avoid risk of electrical shock.
2. Remove rear trimmer cover by first prying the rubber panel from the product with a flat head screwdriver.
3. Next, pry the back panel from the product with a flat head screwdriver. This will expose the batteries.
4. With wire cutters, clip the wires leading to the batteries.
5. Remove the batteries from the product. Contact your local authorities for proper disposal.

CAUTION: THIS LITHIUM BATTERY MUST BE RECYCLED OR DISPOSED OF IN ACCORDANCE WITH STATE AND LOCAL REGULATIONS.

Do not burn or mutilate, as they may burst or release toxic materials. Do not short-circuit, as this may cause burns.

Spectrum Brands, Inc. is a proud participant in the EPA-approved Rechargeable Battery Recycling *Call2Recycle*[™], which collects and recycles these batteries at the end of their useful life when taken out of services in the United States or Canada. The RBRC[®] program provides a convenient alternative to placing used LiFePO4 batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-8-BATTERY[™] or visit www.call2recycle.org for information on LiFePO4 battery recycling and disposal bans/restriction in your area. Spectrum Brands, Inc.'s involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.

Warranty

Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the U.S.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear and breakage
- Any other conditions beyond our control

No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington[®] branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S.

Remington Guarantees Satisfaction After 30 Days!

Remington Men's Shave and Groom 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington[®] branded Men's Shave and Groom product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington[®] and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S.

*Applies to U.S. and Canadian customers' returns only.

**Terms and conditions apply.

Terms and Conditions

1. Refund will be in the form of a check issued in US Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington[®] branded Men's Shave and Groom product:
 - a. The Remington[®] product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at RemingtonProducts.com/60day.
3. In addition, Remington[®], in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).

4. Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

120 VAC 60 Hz

Questions or comments: Call 800-736-4648 in U.S. or visit RemingtonProducts.com

REMINGTON is a Registered Trademark of Spectrum Brands, Inc.

©2016 Spectrum Brands, Inc. 9/16 16446-00

Dist. By: Spectrum Brands, Inc., Middleton, WI 53562
Made in China
T22-0004586-A