

Use and Care Guide

MB4046



Register Your New Product Today!

By registering your new Remington® product, you will receive special offers.
Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

DANGER

As with most electrical appliances, electrical parts are electrically live even when switch is off. To reduce the risk of death by electric shock:

- Do not reach for a trimmer that has fallen into water. Unplug immediately.
- Do not use while bathing or in a shower.
- Do not place or store trimmer where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Except when charging, always unplug this trimmer from the electrical outlet immediately after using.
- Unplug this trimmer before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- Do not crush, disassemble, expose to excessive heat or incinerate the appliance.
- Your trimmer should never be left unattended when plugged in, except when charging your rechargeable trimmer.
- Close supervision is necessary when this trimmer is used by, on, or near children or persons with certain disabilities.
- Use this trimmer only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Keep the cord away from heated surfaces.

- Never operate this trimmer if it has a damaged cord or if it is not working properly, if it has been dropped or damaged, or dropped into water.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this trimmer with a damaged or broken cutting unit, as injury may occur.
- Always attach plug to trimmer, then adapter to outlet. To disconnect, turn all controls to OFF, then remove adapter from outlet, then detach power cord from the trimmer for storage.
- Always store your trimmer and adapter in a moisture-free area. Make sure the cord is disconnected from the trimmer.
- Keep trimmer out of extreme heat and cold. Product must be stored at 0° F to 120° F.
- Dispose of used batteries properly. Do not incinerate. Batteries may explode if overheated. Do not wrap in metal or aluminum foil. Wrap in newspaper before discarding. It is suggested that you contact local town/city officials to determine proper battery redemption site(s) in your area.
- For household use only.

KEEP AWAY FROM CHILDREN

SAVE THESE INSTRUCTIONS

Product Features

Feature Checklist

1. Length Indicator
2. On/Off Switch
3. Charging Indicator
4. Power Port
5. Beard Blade
6. Quick Release Button
7. Zoom Wheel
8. Goatee Blade
9. Stubble Blade
10. Stubble comb (1-5mm)
11. Short length adjustable comb (1.5-18mm)
12. XL adjustable comb (20-35mm)
13. Beard brush
14. Scissors
15. Cleaning brush (not shown)
16. Pop-up trimmer (other side of unit)



Before Using

Before Using Your Trimmer

- Before using your trimmer for the first time, charge the unit 16 hours for optimal performance.
- Make sure your face and facial hair are clean and dry.
- Double check that the Adjustable Comb is in the desired position. Cutting length is visible in Length Indicator.

Charging/Recharging

- To recharge this trimmer, use only the charging adapter provided.
- Turn the trimmer off. Insert the adapter plug into the Power Port, then plug the adapter into an electric wall outlet. The Charging Indicator will illuminate, indicating unit is charging. A full charge will take approx. 16 hours.

- Your trimmer cannot be overcharged. You may leave it plugged in between uses. However, if the trimmer is not going to be used for an extended period (2 weeks), unplug the unit and recharge when resuming use.
- Charge the trimmer at temperatures between 40 – 90°F, to avoid adversely affecting battery life.
- In order to preserve the life of the batteries, they should be fully discharged every six months and then fully charged for 16 hours.
- In cordless mode, your trimmer will run up to 90 minutes before additional charging is required.

Rechargeable Operation

Plugging in the adapter cord will not provide power to the trimmer, but only recharge the batteries.

Quick Release Blades

Quick Release Blades

- The blade assembly can be removed to change blades or for easy cleaning.
- To remove blade assembly, press the Quick Release Button and pull blade away from trimmer body.
- To replace blade, align the guide rails of the blade assembly with the slots on the trimmer body and snap into place. Make sure blade is secure before turning on trimmer.

Operating Your Trimmer

Trimming Length with Short Length Adjustable Comb

Setting	Style	Length
1	Stubble	1.5mm 1/16"
2		2.5mm 3/32"
3	Short	4mm 5/32"
4		5.5mm 13/64"
5	Medium	7mm 17/64"
6		9mm 11/32"
7		11mm 27/64"
8	Long	14mm 35/64"
9		18mm 45/64"

Trimming Length with XL Length Adjustable Comb

Setting	Length
1	20mm 6/8"
2	21mm 13/16"
3	22mm 7/8"
4	23.5mm 15/16"
5	25.5mm 1"
6	27.5mm 1 1/16"
7	29.5mm 1 3/16"
8	32mm 1 1/4"
9	35mm 1 3/8"

Zoom Wheel and Removable Adjustable Combs

NOTE: The Adjustable Combs must be attached to the trimmer in order to use the Zoom Wheel.

- To adjust, roll the Zoom Wheel toward the top of the trimmer for a longer length, and toward the bottom of the trimmer for a shorter length. The wheel will click into one of nine positions.
- Begin trimming at one of the longest settings 8 or 9 to avoid accidentally trimming hair too short. As you become familiar with the settings, you can then select your desired length setting.
- Remove Adjustable Combs if you are: defining hairline edges such as sideburns, trimming the nape of your neck, trimming your beard line on front of neck, or if you want to clean cutter assembly.
- To remove the comb, with the adjustable zoom wheel set to 1, pull the comb off the beard trimmer.

NOTE: The Adjustable Combs can only be placed on the trimmer one way; if a comb does not fit properly, remove and reverse it.

How to Use

Creating the “Stubble Look”

- For a precision stubble look, attach the stubble blade and the adjustable stubble comb which can trim hair between 1 to 5mm.
- Please note that the adjustable zoom wheel does not increase the length settings on the stubble comb. To adjust these length settings, turn the dial found on the back of the stubble comb which will then indicate the different trimming lengths to choose from.

To Thin And Taper The Beard/ Moustache

- Turn the unit on.
- Make sure the short length adjustable comb and beard blade are on. Place the flat top of the short length adjustable comb against the skin.
- Slowly slide the trimmer through the hair. Repeat from different directions as necessary.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush off.

Detailing

- To create sharp lines around your beard, remove adjustable comb from trimmer, then press the pop-up trimmer release button.
- Start with the edge of the beard/ moustache line and gently lower the trimmer blade onto your skin.

Use motions towards the edge of the beard/moustache line to trim to the desired locations in the facial area and away from beard in neck area.

Trimming Beards

- Before you begin, comb your hair in the direction that it grows so that the hairs are at their maximum height and facing in the same direction.
- Determine how much hair you want to cut and position the hair length selector accordingly. Remember, until you are familiar with using the trimmer, it is always better to select a longer hair setting initially in order not to trim too much hair.

Trimming and Styling Shorter Beards

- Make sure the short length adjustable comb and beard blade are on.
- Turn the trimmer so the front of the cutting unit (zoom wheel side) is facing away from you.
- Start trimming under your chin and, following your jawbone line, work toward your ear and upper beard line using an upward motion. Allow the short length adjustable aomb to follow the contours of your face. You may trim either against or with the direction of beard growth, whichever is preferred.

Trimming and Styling Longer Beards

- To take out volume from your beard or if you want to take down the length significantly, select your desired length setting on the XL comb (please see the table for trimming length settings). Place the flat top of the trimmer comb against the skin. Slowly slide through the hair. Repeat from different directions as necessary.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush the hair off.

To Define the Beard Line

- Remove comb.
- Hold trimmer vertically with cutting blades facing you.
- Start with edge of beard line. With the cutting blades resting lightly against your skin, use motions towards edge of beard line to trim it to desired location in facial area and away from beard in neck area.
- For trimming in tight spots or small areas attach Goatee Blade.

To Trim Sideburns

- Comb sideburns following the direction of your hair growth.
- Be certain short length adjustable comb attachment is on.
- Hold trimmer vertically with front of trimmer facing you.

- Trim sideburns using a downward motion.

Trimming the Nape of Your Neck

- You will need a hand mirror for this operation if performing it alone. The mirror is not necessary if trimming is performed by a second person.
- Make sure stubble blade and comb are attached.
- Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by trimmer.
- Using your other hand, hold the trimmer horizontally to the base of your neck with the cutting unit facing up, and move the trimmer along the length of the neck until the unit touches your finger covering the hair roots at the base of your head. Repeat this procedure for the entire area of the neck. Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer.
- Use the hand mirror to inspect the results of the operation and ensure all hairs along the nape of the neck have been trimmed.

Cleaning and Maintenance

Cleaning and Maintaining Your Trimmer

Clean your trimmer regularly to ensure that the unit's operating life is not prematurely shortened.

- Unplug adapter from wall outlet and insure that your trimmer is turned off.
- Do not use liquid cleaners on the cutters or harsh or corrosive chemicals on the unit's main body.
- Remove adjustable comb. Tap or blow out any excess hairs that may be on the comb.
- Use cleaning brush to brush away excess hair clippings from trimmer blade.
- The removable blades can be rinsed under water (do not rinse the main trimmer body). Rinse blade under warm running water for several seconds, making sure hair debris is removed from blade. Dry any excess water that may be on blade before reattaching. See "Quick Release Blades" for information on detaching and reattaching blade assembly. Do not rinse the trimmer body under water.
- If blade is rinsed, we recommend adding to the blade 1 or 2 drops of sewing machine oil or any standard hair clipper oil.

Troubleshooting

The trimmer does not work when turned on:

- Charge the trimmer for 24 hours.

Trimmer cutters do not move:

- The cutting unit may be dirty and clogged. Clean the unit as directed in Cleaning and Maintenance section.

Trimmer does not hold charge:

- Fully discharge battery by running trimmer until it stops; then follow recharging instructions (see section on "Operating Your Trimmer").

Product Disposal

The MB4046 contains a NiMH battery. To ensure proper disposal of the product, please refer to the product WARNINGS in this instruction booklet.

At the end of this product's life, you can mail it to Spectrum Brands at 507 Stokely Drive, Deforest, WI 53532 marked "Product Takeback: Please Recycle!"

U.S. residents: To order accessories call 800-392-6544, visit RemingtonProducts.com, or visit your local retailer.

Performance Guarantee

Limited Five-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a five-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the U.S. or Canada.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Any other conditions beyond our control

No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO FIVE YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the disputed Crimea region.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product from an authorized source, you are not satisfied and would like a refund, return it with the sales receipt indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

Remington Guarantees Satisfaction After 30 Days!

Remington 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

*Applies to U.S. and Canadian customers' returns only.

**Terms and conditions apply.

- Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
- The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® product:
 - The Remington® product;
 - The original sales receipt indicating price and date purchased; and
 - The completed 60-day money back guarantee form located at RemingtonProducts.com/60day.
- In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
- Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
- Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
- No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
- Please allow 4–6 weeks to receive your refund by check.

100–240V~ 50/60Hz Type: RG019A

Questions or comments: Call 800-736-4648 in the U.S. or visit RemingtonProducts.com.

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

®/TM are owned by Spectrum Brands, Inc.

© 2021 Spectrum Brands, Inc. All rights reserved. 4/21 28503

Made in China.
T22-7001947-B