

# REMINGTON®

Trim & Fit™  
Detail Trimmer

Use and Styling Guide  
NE8000



**Register Your New Product Today!**

By registering your new Remington® product, you will receive special offers.  
Register online at: [RemingtonProducts.com](http://RemingtonProducts.com)

## IMPORTANT SAFETY INSTRUCTIONS

When using your Detail Trimmer, basic precautions should always be observed, including the following. Read all instructions before using this trimmer.

**READ ALL INSTRUCTIONS BEFORE USING.**

 
### WARNING

To reduce the risk of burns or injury:

- This appliance is for household use only.
- This appliance should never be left unattended when it's running.
- Close supervision is necessary when this appliance is used on or near children or invalids.
- Use the trimmer only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never drop or insert any foreign object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this trimmer with a damaged or broken cutting unit, as injury may occur.
- Dispose of used batteries properly. Do not incinerate. Batteries may explode if overheated. Do not wrap in metal or aluminum foil. Wrap in newspaper before discarding. It is suggested that you contact local town/city officials to determine proper battery redemption site(s) in your area.
- Do not attempt to recharge alkaline, heavy-duty or regular batteries in battery charger.
- Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped into water.

## SAVE THESE INSTRUCTIONS

## Your New Trimmer

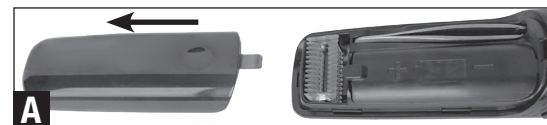

### Inserting the Battery

This Remington® trimmer runs on one "AA" ALKALINE battery.

1. Slide the storage cover off the trimmer handle. (A)
2. Lift the tab on the battery compartment cover. (B)
3. Insert one AA battery, aligning the + and - symbols in the battery compartment.
4. Slide battery cover back on.
5. Slide the battery cover back on.

 
### Battery Cautions

Use of any batteries other than alkaline will negatively affect the unit's operating performance. Batteries should not be left in the unit if the unit is not in use for long periods. To prevent battery corrosion the unit should be kept in a dry environment. Dead batteries should be removed immediately and disposed of properly. Do not use rechargeable batteries. The lower voltage in recharged batteries impairs the performance of the cutting unit.

**NOTE:** Trimmer will not operate if battery is inserted incorrectly. The trimmer should not be submerged in water, bath or sink.



## Product Features

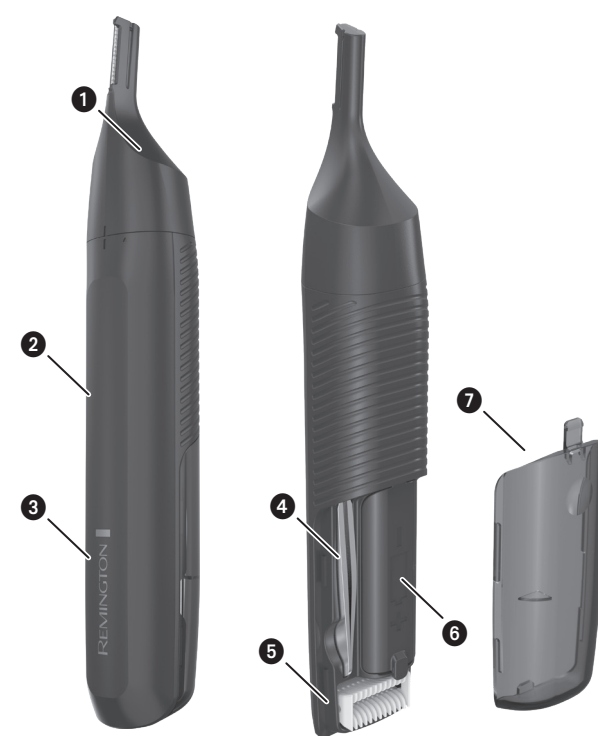

1. Vertical detail trimmer
2. On/Off switch
3. Trimmer handle
4. Tweezers

5. Dual sided comb (3mm, 6mm)
6. Battery compartment cover
7. Storage cover
8. AA Battery (included, not shown)

## Operating Your Trimmer

### Before Using Your Trimmer

**NOTE:** Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e., upwards, downwards, or across). Practice is best for optimum results.

**NOTE:** Use slow and light pressure. Too much pressure may trim off more hair than desired.

- Before you begin. Comb your hair in the direction that it grows so that the hairs are at their maximum height and facing in the same direction.
- For best results, sideburns, beard and moustache hair should be dry.
- Never use trimmer with damaged or broken cutter units.

**For assistance or help, call our customer service at 1-800-736-4648.**

### Trimming Hair Length

 
 
**Optional** - to control length, use the dual sided comb. (C)

- Remember, it's always better to select a longer hair setting initially in order not to trim too much hair.
- Turn on the unit with the On/Off switch
- Gently guide trimmer to stray, unwanted hairs.
- When finished trimming, turn the unit's power off.

### Attaching and Removing the Trimming Attachment

**NOTE:** Always ensure the trimmer is switched off before changing any attachment

- To attach place the trimming head on top of trimmer and rotate clockwise to lock into place. (D)
- To remove rotate the trimmer head counter-clockwise until it unlocks and then lift off the trimmer. (D)

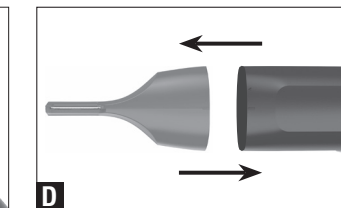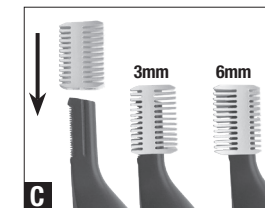

## Cleaning and Maintenance

### Cleaning and Maintaining Your Trimmer

Clean and lubricate your trimmer regularly to insure your unit's operating life is not prematurely shortened.

- Do not apply pressure or hard objects to cutters.
- Do not use harsh or corrosive cleaners on unit or cutters.
- If trimmer is not used regularly, remove battery to prevent possible chemical leakage.

### Weekly

Your trimmer has rust-resistant stainless steel cutting blades that permit the cutting assembly to be rinsed under running water, if desired. Or, you can clean your unit with a small, soft brush.

### Cleaning with water

- Rinse attachments under running water. Use warm water. DO NOT use hot water. Hot water may cause damage to components.
- Make sure to dry off attachments completely before reassembly onto the trimmer.

 
**NOTE:** *do not rinse or submerge the body of the unit.*

### Cleaning the Vertical Trimmer

- After each use, brush or blow accumulated hair from the cutting unit.
- If the trimmer needs additional cleaning, the cutting head can be removed by turning it 1/4 inch counterclockwise and pulling it off. Then blow out the accumulated hair or rinse it more thoroughly under running water.
- Afterward, shake excess water from the cutter head, making sure that all parts are held together.
- Replace the head in the same position as it was removed, turning it 1/4 inch clockwise until it locks into place

### Lubricating the cutters - Optional

- After rinsing the trimmer head, apply a drop of mineral oil to the cutting teeth.
- Don't apply too much oil, or it may spray.
- Finally, point the trimmer down and away from you, and turn it on. This spreads the oil evenly and expels any excess.
- When the dual sided comb and tweezers are clean and dry place them back into their places in the storage compartment. (E) Close storage cover.

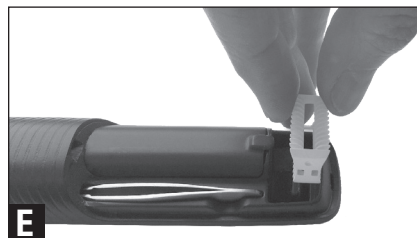

### Troubleshooting

#### The trimmer does not work when turned on:

- Be certain battery has been properly installed. Trimmer will not operate unless battery is correctly positioned.
- If battery power has been depleted, replace with 1 "AA" alkaline battery (see Your New Trimmer section).

#### Trimmer cutters do not move:

- The cutting unit may be dirty and clogged. Clean and lubricate the unit as directed in Cleaning section.

## Performance Guarantee

### Limited Three-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a three-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, DeForest, WI 53532. For more information call 800-736-4648 in the U.S. or Canada.

#### KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Any other conditions beyond our control

No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.

**SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO THREE YEARS FROM DATE OF ORIGINAL PURCHASE.**

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

**This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the disputed Crimea region.**

### Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product from an authorized source, you are not satisfied and would like a refund, return it with the sales receipt indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

#### Remington Guarantees Satisfaction After 30 Days!

##### Remington 60-Day Money Back Guarantee\*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.\*\* For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

\*Applies to U.S. and Canadian customers' returns only.

\*\*Terms and conditions apply.

1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® product:
  - a. The Remington® product;
  - b. The original sales receipt indicating price and date purchased; and
  - c. The completed 60-day money back guarantee form located at **RemingtonProducts.com/60day.**
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:  
Remington 60-Day MBG  
507 Stokely Drive, Box 1  
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4–6 weeks to receive your refund by check.

At the end of this product's life, you can mail it to Spectrum Brands at 507 Stokely Drive, DeForest, WI 53532 marked "Product Takeback: Please Recycle!"

#### 1.5VDC Type: RG032A

**Questions or comments:** Call 800-736-4648 in the U.S. or visit **RemingtonProducts.com.**

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

© Registered Trademark and TM Trademark of Spectrum Brands, Inc.

© 2021 Spectrum Brands, Inc. All rights reserved. 9/21 28645

**Made in China.**  
**T22-7002474-A**