

 
 
 
REMINGTON®

EST. NEW YORK 1937



X7 Limitless X Rotary Shaver XR1770-1TV (R34B)

 RemingtonProducts.com

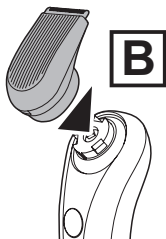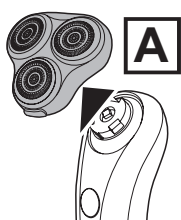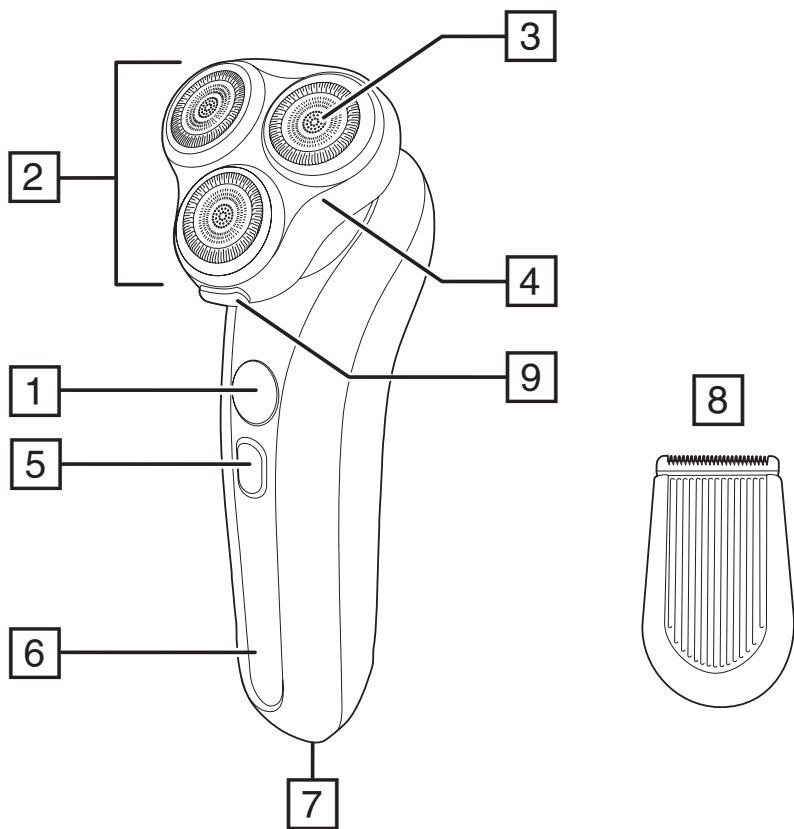

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

DANGER

To reduce the risk of electric shock:

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use a plugged in appliance while bathing or in the shower.
- Do not place in or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Detach the appliance from the power supply cord before cleaning.
- Do not submerge in water.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to people:

- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children, or individuals with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug or if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any of the appliance's openings.
- Household use only.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always attach the plug to the appliance, then to outlet. To disconnect, turn all controls to OFF, then remove plug from outlet.
- Always pull on cord plug to unplug from wall socket. Never pull on electric cord.
- Do not plug or unplug this appliance when your hands are wet.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- Always store this appliance and cord in a moisture-free area.
- Do not store it in temperatures exceeding 140°F (60°C).
- Detach removable power cords from appliance for storage.
- Do not use this appliance with a damaged or broken head or cutters, as facial injury may occur.
- Shavers, including the trimmer, are for use on facial hair only. They should not be used for shaving the hair on your head or any other part of your body.

SAVE THESE INSTRUCTIONS

PARTS

- | | |
|--------------------------------------|------------------------|
| 1. On/off switch | 8. Detail trimmer |
| 2. Pivoting head and cutter assembly | 9. Head release button |
| 3. Individual flexing heads | <i>Not shown</i> |
| 4. Hairpocket | • USB charging cable |
| 5. Turbo button | • Cleaning brush |
| 6. Charging indicator lights | • Head guard |
| 7. Power connector | • Travel pouch |
-

GETTING STARTED

CHARGING

- It is recommended to fully charge your appliance before using it for the first time.
- Ensure the product is switched off.
- Connect the product to the USB cable and then connect the USB end of the cable to a powered USB port.

CHARGING INDICATOR LIGHTS

- The bottom two (red) lights show charging status during charging. When the charging level is below 50%, the bottom light will fade on and off. When charging is over 50%, the bottom light will stay on and the next light will fade on and off. Once charging is complete, the green light will turn on briefly, then switch off.
- If your shaver does not run when you switch it on, and the bottom led flashes rapidly 5 times, your shaver needs charging.
- Run time from fully charged is up to 60 mins.
- Charge time from empty is 90 minutes.
- Do not recharge your product after each use as this will shorten the life of the battery.
- Note: To preserve the life of your batteries, let them run out every 6 months then fully charge.

QUICK CHARGE FEATURE

- Your shaver has a 5 minute quick charge feature that will provide enough charge for 1 shave (3 minutes).
-

INSTRUCTIONS FOR USE

SHAVING

1. Switch the shaver on by pressing the on/off button.
2. Stretch the skin with your free hand so the hairs stand upright.
3. Only apply light pressure on the shaving head while shaving (pressing too hard can cause skin irritation).
4. Use short, circular strokes.

SHAVING WITH SHAVING GEL

- Follow the same instructions as dry shaving if using shaving gel.

- **CAUTION** After use with shaving gel, please rinse the head and cutters under warm water to clean away any excess gel and debris.

TURBO FEATURE

Use the Turbo feature to shave thick stubble. Press the turbo button to operate the shaver in Turbo mode. The turbo button will light up blue. Press the turbo button again to deactivate turbo mode.

DETAIL TRIMMER ATTACHMENT

To fit the detail trimmer attachment:

1. Switch off your shaver.
2. Pull the head and cutter assembly away from the body of your shaver (Fig A).
3. Clip the detail trimmer onto the body of your shaver (Fig. B).

TIPS FOR BEST RESULTS

- Always hold the shaver at right angles to the skin so that all three heads are touching the skin with equal pressure.
- Use moderate to slow stroking movements. The use of short circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- **DO NOT** press hard against the skin in order to avoid skin irritation.

CARE FOR YOUR SHAVER

Care for your shaver to ensure a long lasting performance. We recommend you clean your shaver after each use.

- Ensure your shaver is switched off before cleaning.
1. Open the shaver head by pressing the release button (Fig. C).
 2. The head assembly will open (Fig. D).
 3. Rinse under a tap to wash away hair trimmings.
 4. Carefully brush away any hairs from the cutters.
 5. Snap the head assembly closed.

Note: The individual cutters are designed to be permanently retained in the shave head and flushed out with water. Do not remove the individual cutters for cleaning.

DETAIL TRIMMER

Lubricate the teeth of the detail trimmer every six months with a drop of sewing machine oil.

PRODUCT DISPOSAL

Please do not throw this product away with normal household waste. If possible, take it to an official collection point in your area that recycles this type of product. Thank you for considering the environment.

WARRANTY

LIMITED FIVE-YEAR WARRANTY

Empower Brands, LLC warrants this product to the original purchaser against any defects that are due to faulty material or workmanship for a five-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge. Keep your sales receipt and call 800-736-4648 in the U.S. or Canada or contact us at: contactus@remingtonproducts.com for warranty information.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

EMPOWER BRANDS, LLC SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO FIVE YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the disputed Crimea region.

EMPOWER BRANDS, LLC MONEY-BACK OFFER

If within 30 days after you have purchased your Remington® branded product from an authorized source, you are not satisfied and would like a refund, return it with the sales receipt indicating purchase price and date of purchase to the retailer from whom it was purchased. Empower Brands, LLC will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S.

REMINGTON GUARANTEES SATISFACTION AFTER 30 DAYS!

Remington 60-Day Money Back Guarantee¹

If, within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, keep your receipt and contact us at contactus@remingtonproducts.com or call 800-736-4648 in the U.S. or Canada.²

¹Applies to U.S. and Canadian customers' returns only.

²Terms and conditions apply.

1. Refund will be in the form of a check issued in U.S. dollars and will include applicable taxes, if any, paid by customer.
2. Please allow 4–6 weeks to receive your refund by check.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

NOTE: This equipment has been tested and found to comply within the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

TYPE: R34B

5V ---

Questions or comments: Call 800-736-4648 in the U.S.
or visit **RemingtonProducts.com**.

T22-7003309 Version 04 /24

Dist. by Empower Brands, LLC, Middleton, WI 53562

® Registered Trademark and ™ Trademark of Empower Brands, LLC

© 2024 Empower Brands, LLC. All rights reserved.

Made in China