



Register Your New Product Today!

By registering your new Remington® product, you will receive special offers.
 Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following. **Please read all instructions before using this shaver.**

WARNINGS

To reduce the risk of burns, fire, electric shock, or injury to persons:

- When connecting the charging unit to a power source outside of the USA or Canada, use a plug adapter suitable for the power outlet. This device has a charging adapter that will work with worldwide 100V-240V power outlets.
- Only use the power adapter provided with this device.
- Do not reach for the appliance if it has fallen into water while plugged into the power source. Unplug from the power source at the wall immediately.
- Shaver may be rinsed under water or used in the shower, but never use the charging unit in the shower.
- Detach the shaver and charging unit from the power source before cleaning.
- Except when charging, always unplug this appliance immediately after using.
- When recharging place in a safe position, out of the reach of children and pets.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities or special needs.
- Use this appliance only for its intended use as described in this manual.

- Do not use attachments not recommended or provided by the supplier.
- Never operate this appliance if the electrical cord is frayed or the plug is damaged.
- Keep the electrical cord away from heated surfaces.
- Never drop or insert objects into any of the appliances openings.
- This appliance is intended for household use only.
- Do not use outdoors, or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always attach the plug to the appliance, then to the wall outlet. To disconnect, turn all controls to OFF, then remove plug from outlet.
- Always pull on the plug body to unplug the appliance from the wall socket. Never pull on the electrical cord.
- Do not plug in or unplug this appliance when your hands are wet.
- Do not use extension cords or a voltage converter with this appliance.
- Do not wrap the power cord around the appliance.
- Always store the appliance and charger in low moisture area.
- Do not expose the appliance to temperatures over 140° F (60° C).
- Detach removable power cords from the appliance during storage.
- Do not use this shaver if the cutting head surfaces are damaged or broken as skin injury could occur.
- This shaver and trimmer are intended for use on scalp hair only. It should not be used for facial hair or longer hair on your body.

SAVE THESE INSTRUCTIONS

Product Features



SHAVER PARTS

1. On/Off Switch
2. Shaving Heads/Cutters
3. Pop Up Trimmer (not shown)
4. 360° Pivoting Neck
5. LED Battery Indicators
6. Hair Pocket

7. Charging Pins
 8. Power Adaptor
 9. Head Guard
- Also Includes:**
- Cleaning Brush
 - Shaver Lubricant

Specifications

Power System	Cordless
Initial Charge Time	4 Hours
Full Charge Time	4 Hours
Cordless Run Time	Up to 50 Minutes
Indicators	2 LEDs (Low / Charging / Full Charge)
Voltage Type	Worldwide 100 - 240V
Waterproof	YES Fully Waterproof
Replacement Head and Cutters	SPR-XR7000

Power System: Cordless - shaver can only be used when disconnected from the charging adaptor. The shaver will not run while it is charging.

To preserve the life of the battery: do not charge the battery after each use. The best practice is to use the shaver until the red low charge indicator appears and then recharge.

Indicators:

- Low Charge: Flashes red when the shaver needs to be recharged.
- Charging: When plugged in, the charging indicator will light up green.
- Full Charge: Green LED indicator will turn off.

Note: Some countries will require the use of a plug adaptor that is not included with your shaver.

Charging

Before using, read the important safety instructions in this manual.

1. Ensure the product is switched off. Connect the shaver to the adaptor
2. Connect to a power outlet and charge for 4 hours when using for the first time. This first charge is important to the shaver's battery life.
3. When plugged in, the charging indicator will light up green.
4. When empty, the battery should be charged for 4 hours for a full charge and will provide up to 50 minutes of shaving time.
5. To preserve the life of the battery do not charge the battery after each use. Best practice is to use the shaver until the red low charge indicator appears and then recharge.

Caution:

- Make sure the shaver and your hands are dry when charging the shaver.
- Always charge the shaver in a cool, dry place.

Shaving Your Head

GUIDELINES

- **Do not attempt to shave head hair that is longer than 4 days growth or 2.0 mm.** The Ultimate Series XR7000 head shaver is intended to maintain the shaved look and can be used daily or every two or three days.
- The Ultimate Series XR7000 head shaver cannot shave long hair down to the shaved length. If your hair is longer than 2.0 mm you should trim it down with a hair clipper first before using the head shaver.
- The Ultimate Series XR7000 head shaver can be used dry or it can be used with shaving cream or gel in the shower.


1. Hold the head shaver body in the palm of your hand. Press the On/Off switch to turn the head shaver on.
2. Press the five cutting heads against your scalp. It is not necessary to press hard to shave. Pressing hard does not cut closer and could increase irritation. The cutting head will flex to follow the contours of your head.
3. Move the shaver slowly around your head. You may use linear strokes, or rotating motion, whichever you feel is most effective picking up and cutting your hair.
4. Use a hand held mirror to check the back of your head to confirm a complete and thorough shave. You may also use your other hand to feel for complete and consistent cutting.
5. It is not recommended to use the head shaver for facial hair.
6. When finished turn the shaver off. Check for the red low charge indication.

Pop-Up Trimmer

The pop-up trimmer is located at the back of the shaver handle. It can be used for trimming edges of beards, sideburns or ears.

1. To activate the trimmer, turn the shaver on. Slide the release button for the trimmer down to pop the trimmer up (A).
2. Use cutting strokes in the direction opposite of the trimmers spring release (B).
3. When finished press the trimmer down and snap it back into the stored position (C).

Note: Lubricate teeth with oil every 6 months.

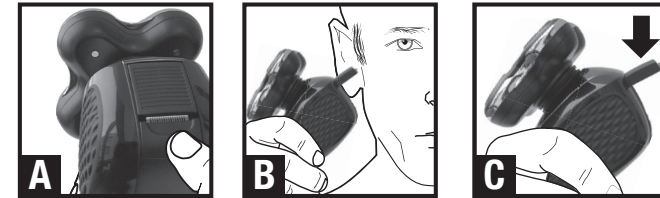


Cleaning Your Shaver

The Balder Shaver is designed to collect all the hair clippings while it cuts. This avoids clippings from spilling onto bathroom counters or shower stalls, making clean up easy.

- When cleaning the shaver make sure it is turned off and disconnected from the charging adapter cord.
- The shaver is washable and can be cleaned by rinsing under warm water.
- When using shave creams or gels with the shaver it is especially important to clean after each use to prevent the gel from drying and clogging the cutters.

After every use:

1. Hold the shaver over the garbage can and remove the top of the cutting head. Remove the head by gripping in the areas between the four outer cutters and pulling up and away from the handle (D).
2. Thoroughly brush and tap the excess clippings that have been collected inside the cutting head and hair pocket into the garbage can (E).
3. Rinse the cutting head thoroughly by running water through the cutters from both sides of the head.
4. Rinse the hair pocket under running water.
5. Leave the cutting head detached and let it air dry. Reattach the shaving head when dry and you are ready for the next use (F).

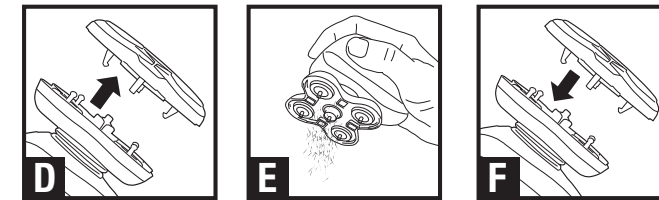

6. **Important:** Lubricate the cutters on the inside surface with one drop of lubricant per cutter **after each use** to maintain performance.

CAUTION: Heads and Cutters are assembled in one piece (blades are not removable). Do not twist the hairpocket at the neck.

Deep Clean: After rinsing away bulk debris, reassemble the razor and turn on, submerge cutter head in warm water (add a few drops of dish soap) and run for 15 sec. Remove the shaver head from hair pocket, thoroughly rinse and brush away loosened build up.

Note: Cleaning and lubricating after each use are essential with this device. Critical if wet shaving with foams or gels.

Troubleshooting

If the shaver is making a chugging noise, clean and re-lubricate the inside surface of the cutting heads. Be sure to clean and lubricate shaver after each use.

If your shaver will not turn on after deep cleaning, please do the following:

Make sure shaver is fully charged.

1. Remove head per instructions in this manual.
2. Plug Shaver in until the green light comes on.
3. Unplug the Shaver and turn on while head is not attached.
4. Run Shaver for a short time and then turn off.
5. Place clean head on Shaver and turn back on.

If the Shaver still does not turn on, please contact us at 1-800-736-4648, Monday-Friday, 8:00 am - 4:30 pm Central Time.

Shaver Replacement Parts

Please refer to the specifications' table in this manual that lists the correct replacement part number for your shaver.

It is very important to replace the cutting head (Heads and Cutters are assembled in one piece) when necessary to ensure a close, comfortable shave without irritation. We recommend they be replaced every 12 months. Here are some signs of head and cutter wear, indicating that replacement is needed:

- Irritation: As the heads get excessively worn you may experience some skin irritation. This would be especially noticeable when you apply moisturizing lotion.
- Pulling: When the cutters wear you may feel a sense of pulling and a loss of closeness when you shave. This is an indication that it is time to replace the shaving heads and cutters.



The replacement cutting head for your shaver is model number **SPR-XR7000**.

Two Easy Ways to Order!

1. U.S. residents call 1-800-392-6544
2. U.S. residents order online at RemingtonProducts.com

Product Disposal

When your rechargeable shaver reaches the end of its useful life, the batteries must be removed from the shaver and be recycled or disposed of properly in accordance with your state and local requirements. If this is not required by law, you may elect to dispose of the shaver with the batteries.

CAUTION! Do not put in fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns. Dispose of properly in accordance with your local and state requirements.

To Remove the Rechargeable Battery:

1. Unplug the shaver
2. Run shaver until the motor stops
3. Pull off the shaver head assembly.
4. Unscrew the screw on the top of the unit.
5. Pry off the upper decorative panel.
6. Pry off the two decorative side panels.
7. Unscrew the 6 screws on the inner housing.
8. Pry off the inner housing to expose the printed circuit board.
9. Take out the printed circuit board assembly.
10. Disconnect the battery from the circuit board.
11. Dispose of battery properly

Warranty

Limited Five-Year Warranty

Empower Brands, LLC warrants this product to the original purchaser against any defects that are due to faulty material or workmanship for a five-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge. For more information call 800-736-4648 in the U.S. or Canada.

Warranty excludes:

- Heads and cutters

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Any other conditions beyond our control

No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.

EMPOWER BRANDS, LLC SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO FIVE YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the disputed Crimea region.

Empower Brands, LLC Money-back Offer

If within 30 days after you have purchased your Remington® branded product from an authorized source, you are not satisfied and would like a refund, return it with the sales receipt indicating purchase price and date of purchase to the retailer from whom it was purchased. Empower Brands, LLC will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

Remington Guarantees Satisfaction After 30 Days!

Remington 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, keep your receipt and contact us at contactus@remingtonproducts.com or call 800-736-4648 in the U.S. or Canada.**

*Applies to U.S. and Canadian customers' returns only.

**Terms and conditions apply.

1. Refund will be in the form of a check issued in U.S. Dollars and will include applicable taxes, if any, paid by customer.
2. Please allow 4–6 weeks to receive your refund by check.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Please do not throw this product away with normal household waste. If possible, take it to an official collection point in your area that recycles this type of product. Thank you for considering the environment.

100-240V AC, 50/60 Hz Type: R17A

Questions or comments: Call 800-736-4648 in the U.S. or visit RemingtonProducts.com.

Dist. by: Empower Brands, LLC, Middleton, WI 53562

® Registered Trademark and ™ Trademark of Empower Brands, LLC.

© 2024 Empower Brands, LLC. All rights reserved. 12/2023 30153

Made in China

T22-7002354-D

Contains a Listed Adaptor