

## Use and Care Guide

XR7100  
XR7200



Product may vary slightly from what is illustrated.

### Register Your New Product Today!

By registering your new Remington® product, you will receive special offers.  
Register online at: [RemingtonProducts.com](http://RemingtonProducts.com)

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following. **Please read all instructions before using this shaver.**

### WARNINGS

 
**To reduce the risk of burns, fire, electric shock, or injury to persons:**

- Do not reach for the appliance if it has fallen into water while plugged into the power source. Unplug from the power source at the wall immediately.
- Shaver may be rinsed under water or used in the shower, but never use the USB charging cable in the shower.
- Detach the shaver and USB cable from the power source before cleaning.
- When recharging, place in a safe position, out of the reach of children and pets.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities or special needs.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended or provided by the supplier.
- Never attempt to charge this appliance if the USB cable is frayed or the plug is damaged.
- Keep the USB cable away from heated surfaces.
- Never drop or insert objects into any of the appliances openings.

- This appliance is intended for household use only.
- Do not use outdoors, or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not plug in or unplug this appliance when your hands are wet.
- Do not use extension cords or a voltage converter with this appliance.
- Do not wrap the USB cable around the appliance.
- Always store the appliance and charger in low moisture area.
- Do not expose the appliance to temperatures over 140° F (60° C).
- Detach removable USB cable from the appliance during storage.
- Do not use this shaver if the cutting head surfaces are damaged or broken as skin injury could occur.
- This shaver and trimmer are intended for use on scalp hair only. It should not be used for facial hair or longer hair on your body.

## SAVE THESE INSTRUCTIONS

### Product Features

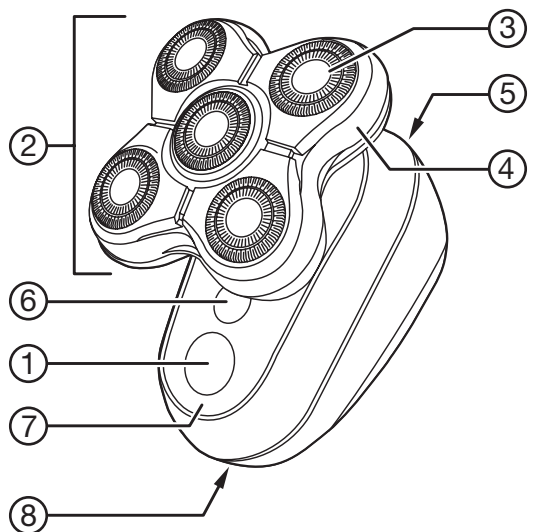

- On/Off Button
- Head assembly
- Individual flexing blades
- Hair Pocket
- Pop Up Trimmer
- Turbo button
- Charging indicator lights
- Charging port

#### Not shown:

- Head Guard
- Cleaning Brush
- USB cable
- Lubricating oil (not included with all models)
- Storage Bag (not included with all models)

### Specifications

Power System	Cordless (Rechargeable)
Initial Charge Time	2 Hours
Full Charge Time	2 Hours
Cordless Run Time	Up to 60 Minutes
Indicators	4 LEDs
Voltage Type	5V dc with USB cable
Waterproof	Yes
Replacement Head and Cutters (fits both XR7100 and XR7200)	SPR-XR7100 (without titanium) SPR-XR7100-T (with titanium)

**Power System:** Cordless - shaver can only be used when disconnected from the USB cable. The shaver will not run while it is charging.

### Charging

Before using, read the important safety instructions in this manual.

- Ensure the product is switched off.
- Connect the shaver to the USB cable and then connect the USB end of the cable to a powered USB port.
- Charge for 2 hours when using for the first time. This first charge is important to the shaver's battery life.
- When empty, the battery should be charged for 2 hours for a full charge and will provide up to 60 minutes of run time.

#### Caution:

- Make sure the shaver and your hands are dry when charging the shaver.
- Always charge the shaver in a cool, dry place.

### Charging Indicator Lights

#### During charging

Lights	Charge level
○	0-25%
● ○	25-50%
● ● ○	50-75%
● ● ● ○	75-99%

Once fully charged, all 4 lights will stay on for 5 minutes and then go off.

#### Charge remaining

After use, when you switch off your shaver, the charging indicator lights show the remaining charge for 5 seconds.

Lights	Charge remaining
● ● ● ○	99-75%
● ● ○	75-50%
● ○	50-25%
○	25% or less

#### During use

The lights will illuminate backwards and forwards during use in a cycling pattern.

- Your head shaver cannot be used when it is charging.
- When empty, the battery should be charged for 2 hours for a full charge and will provide up to 60 minutes of run time.
- To preserve the life of the battery do not charge the battery after each use. The best practice is to use the shaver until there is only a single light left flashing and then recharge.

### Shaving Your Head

#### Guidelines

- Do not attempt to shave head hair that is longer than 4 days growth or 2.0 mm. The head shaver is intended to maintain the shaved look and can be used daily or every two or three days.
  - The head shaver cannot shave long hair down to the shaved length. If your hair is longer than 2.0 mm you should trim it down with a hair clipper first before using the head shaver.
  - The head shaver can be used dry or it can be used with shaving cream or gel in the shower.
- Hold the head shaver body in the palm of your hand. Press the On/Off switch to turn the head shaver on.
  - Press the five cutting heads against your scalp. It is not necessary to press hard to shave. Pressing hard does not cut closer and could increase irritation. The cutting head will flex to follow the contours of your head.
  - Move the shaver slowly around your head. You may use linear strokes, or rotating motion, whichever you feel is most effective picking up and cutting your hair.
  - Use a hand held mirror to check the back of your head to confirm a complete and thorough shave. You may also use your other hand to feel for complete and consistent cutting.
  - It is not recommended to use the head shaver for facial hair.
  - When finished turn the shaver off.

### Turbo Feature

 
 
 
Use the Turbo feature to shave thick hair. Press the turbo button to operate the shaver in Turbo mode. The charging indicator light pattern will speed up. Press the turbo button again to deactivate turbo mode.

### Pop-Up Trimmer

The pop-up trimmer is located at the back of the shaver body. It can be used for trimming edges of beards, sideburns or ears.

- To activate the trimmer, turn the shaver on. Slide down the release button to pop the trimmer up (A).
- Use cutting strokes in the direction opposite to the direction that the trimmer folds away (B).
- When finished, press the trimmer down and snap it back into the stored position. (C)

**Note:** Lubricate teeth with oil every 6 months.

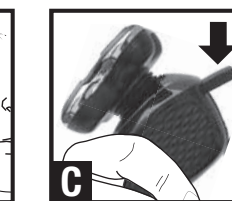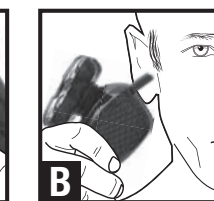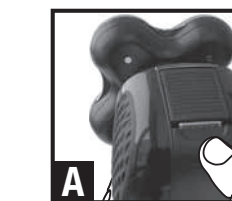

## Maintenance

Care for your product to ensure a long lasting performance. We recommend that you clean it after each use.

The Balder Shaver is designed to collect all the hair clippings while it cuts. This avoids clippings from spilling onto bathroom counters or shower stalls, making clean up easy.

 
- When cleaning the shaver, make sure it is turned off and disconnected from the charging cable.
- The shaver is washable and can be cleaned by rinsing under warm water.
- When using shave creams or gels with the shaver, it is especially important to clean after each use to prevent the gel from drying and clogging the cutters.
- When cleaning the external surfaces of the shaver, do not use strong detergents or other chemicals.
- To dry, wipe the surface of the shaver with a dry towel. Do not use a hair dryer or heater to dry the shaver.
- The shaver head and neck assembly is designed to be detachable from the shaver body. Simply pull upwards from the neck of the shaver for easy release. To reattach the neck, align it with the neck attachment cavity so that it clips back into position.

## Safety Mode

- Your head shaver will turn itself off and enter safety mode if the demand on the battery is too high. This can be because of inadequate cleaning or excessive hair clippings in the hair pocket.
- If this occurs, open and clean your shaver. The left and right charging indicator lights will flash for ten seconds. After an additional 5 seconds your shaver will reset itself and be ready to operate as normal.

## Cleaning and Lubrication

1. After each use, hold the shaver over a bin and remove the top of the shaving head.
2. Pull the cutting head unit off the head assembly (A).
3. Empty the clippings that have collected inside the hair pocket into the bin.
4. The head can be rinsed under a running tap (B).
5. Use a cleaning brush to remove any shaving debris.
6. Shake off excess water and allow to dry before reassembly.
7. To maintain optimum performance, the blades must be kept lubricated. Place a small drop of oil onto a fingertip and then touch the oiled fingertip to each cutter head, gently wiping the oil onto the cutter. Wipe any excessive oil off the surface of the cutters. Hair clipper oil or sewing machine oil are suitable for this purpose.
8. Oil should be applied weekly or if the shaver begins to 'pulse' indicating lubrication is required. (Silicone based pressure pack lubricants are not recommended.)

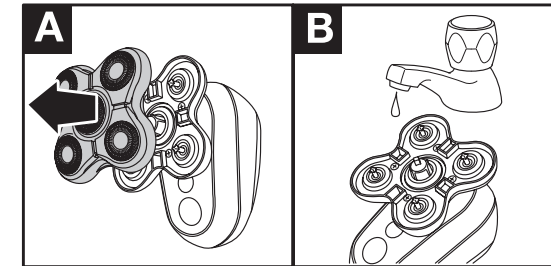

## Shaver Replacement Parts

Please refer to the specifications' table in this manual that lists the correct replacement part number for your shaver.

It is very important to replace the shaving heads and cutters when necessary to ensure a close, comfortable shave without irritation. We recommend they be replaced every 12 months. Here are some signs of head and cutter wear, indicating that replacement is needed:

- Irritation: As the heads get excessively worn you may experience some skin irritation. This would be especially noticeable when you apply moisturizing lotion.
- Pulling: When the cutters wear you may feel a sense of pulling and a loss of closeness when you shave. This is an indication that it is time to replace the shaving heads and cutters.

**The replacement cutting head for your shaver is model number SPR-XR7100.**

### How to Order Parts and Accessories

- Order Online: [RemingtonProducts.com](http://RemingtonProducts.com)



## Product Disposal

When your rechargeable shaver reaches the end of its useful life, the batteries must be removed from the shaver and be recycled or disposed of properly in accordance with your state and local requirements. If this is not required by law, you may elect to dispose of the shaver with the batteries.

**CAUTION!** Do not put in fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns. Dispose of properly in accordance with your local and state requirements.

### To Remove the Rechargeable Battery:

1. Ensure the device is discharged of all power. To do this, switch it on and allow it to run until it stops.
2. Remove the head assembly by pulling it off.
3. Using a small screwdriver, pry the front panel off the handle.
4. Pry off then remove the two side panels.
5. Using a small flat screwdriver, pry off the display panel.
6. Unscrew the 4 screws and open the front housing.
7. Unscrew the 4 screws and remove the rear housing.
8. Pry the battery from the circuit board.
9. Disconnect the battery from the two connection wires.

## Warranty

### Limited Five-Year Warranty

Empower Brands, LLC warrants this product to the original purchaser against any defects that are due to faulty material or workmanship for a five-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge. For more information call 800-736-4648 in the U.S. or Canada.

Warranty excludes:

- Heads and cutters

### KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Any other conditions beyond our control

No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.

**EMPOWER BRANDS, LLC SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO FIVE YEARS FROM DATE OF ORIGINAL PURCHASE.**

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

**This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the disputed**

### Crimea region.

### Empower Brands, LLC Money-back Offer

If within 30 days after you have purchased your Remington® branded product from an authorized source, you are not satisfied and would like a refund, return it with the sales receipt indicating purchase price and date of purchase to the retailer from whom it was purchased. Empower Brands, LLC will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

### Remington Guarantees Satisfaction After 30 Days!

### Remington 60-Day Money Back Guarantee\*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, keep your receipt and contact us at [contactus@remingtonproducts.com](mailto:contactus@remingtonproducts.com) or call 800-736-4648 in the U.S. or Canada.\*\* \*Applies to U.S. and Canadian customers' returns only. \*\*Terms and conditions apply.

1. Refund will be in the form of a check issued in U.S. Dollars and will include applicable taxes, if any, paid by customer.
2. Please allow 4–6 weeks to receive your refund by check.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
– Reorient or relocate the receiving antenna.  
– Increase the separation between the equipment and receiver.  
– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
– Consult the dealer or an experienced radio/TV technician for help.

Please do not throw this product away with normal household waste. If possible, take it to an official collection point in your area that recycles this type of product. Thank you for considering the environment.

**5V dc with USB cable Type: R29A, R29B**

**Questions or comments:** Call 800-736-4648 in the U.S. or visit [RemingtonProducts.com](http://RemingtonProducts.com).

Dist. by: Empower Brands, LLC, Middleton, WI 53562

® Registered Trademark and ™ Trademark of Empower Brands, LLC.

© 2023 Empower Brands, LLC. All rights reserved. 08/2023 30114

Made in China

**T22-7002937-D**