

Use and Care Guide  
D31A



Register Your New Product Today!

By registering your new REMINGTON® product, you will receive special offers.  
Register online at: [RemingtonProducts.com](http://RemingtonProducts.com)

IMPORTANT SAFETY  
INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be observed, including the following:

**READ ALL  
INSTRUCTIONS  
BEFORE USING.**

**KEEP AWAY FROM  
WATER.**

**DANGER**

To reduce the risk of electric shock:

- Always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning it.

**WARNING**

To reduce the risk of burns, fire, electric shock, or injury to people:

- An appliance should never be left unattended when it is plugged in.
  - This appliance is not intended for use by people (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
  - Children should be supervised to ensure they do not play with the appliance.
  - Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
  - Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- NOTE:** If the power supply cord is damaged, it should be replaced by qualified personnel or, in Latin America, by an authorized service center.
- Keep the cord away from the heated surfaces. **Do not wrap the cord around the appliance.**
  - Never use while sleeping.
  - Never drop or insert any object into any of the appliance's openings.

- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
  - Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
  - Do not use with an extension cord.
  - Do not direct hot air toward eyes or other heat-sensitive areas.
  - Do not place the appliance on any surface while it is operating.
  - Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140° F (60° C).
- This appliance is for household use only.
  - Attachments may be hot during use. Allow them to cool before handling.
  - Do not plug or unplug this appliance when your hands are wet.
  - For additional protection the installation of a residual current device (RDC) with a rated residual operating current not exceeding 30mA is advisable. Ask an electrician for advice (Argentina/Chile).
  - While using the appliance, keep your hair away from the air inlets.
  - Do not operate with a voltage converter.



**CAUTION:** This product is not suitable for use in bath or shower.

SAVE THESE INSTRUCTIONS

Safety Instructions

ALCI Safety Device

This hair dryer is provided with an appliance leakage circuit interrupter (ALCI) safety device built into the plug. This device is designed to make the appliance inoperable under some abnormal conditions, such as accidental immersion in water. The ALCI safety device is equipped with a test button so that its operation can be checked.

This appliance should be tested before each use to confirm that the safety device is operational.

To test:

After plugging in your hair dryer:

1. Press the reset button on the ALCI device.
2. Press the test button. The reset button will pop out. This verifies that the safety device is operating properly.
3. Press the reset button to reactivate your ALCI safety device.
4. Your hair dryer is now ready for use.

**Note:** This appliance may automatically trip when unplugged. If so, the appliance must be reset after it is plugged in. If the dryer does not reset after following the above testing procedure, call 800-736-4648.

1. If the ALCI safety device trips (i.e., reset button pops out) during use, press the reset button. Should the hair dryer fail to reset, call 800-736-4648. Never operate this appliance if it has been dropped in water.
2. The dryer is designed to work on ordinary household current only (125 volts A.C., 60 Hz). It is not intended for commercial use.
3. This appliance is equipped with an automatic thermal limiter, which will cycle off when overheated and come back on when cooled down. If the appliance cycles off, unplug the cord for several minutes before restarting.
4. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.



THIS MESSAGE ABOUT

GROUND  
FAULT  
CIRCUIT  
INTERRUPTERS

CAN SAVE A LIFE!

If you must use your hair dryer in the bathroom, install a GFCI\* now!

Your local electrician can help you decide which type is best for you – a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCI's in bathrooms, garages, and outdoor outlets of all new homes.

Why do you need a GFCI?

Electricity and water do not mix. If your hair dryer falls in water while it is plugged in, the electric shock can kill you – even if the switch is “off.”

A regular fuse or circuit breaker will not protect you under these circumstances. A GFCI offers you greater protection.



A GFCI can save your life!  
Compared to that, the price is small!

Don't wait... install one now!

\*GFCI is a sensitive device that reacts immediately to a small electric current leak by stopping the electricity flow.

## Product Features

Please carefully read the instructions contained in this booklet, and keep these instructions in a safe place for future reference.

1. Air Inlet Grille
2. Cool Shot Button
3. Speed Setting Button
4. On/Off and Heat Setting Switch
5. Integrated Cord Storage
6. Styling Concentrator
7. Flyaway Tamer
8. Standard Diffuser\*
9. Duo Diffuser\*
10. Comb Attachment\*



\* May be sold separately.

## How to Use

### Basic Drying Techniques

1. Gently towel dry hair to remove excess water. Avoid rubbing hair with the towel, which creates split ends and frizziness. Detangle hair with a wide-tooth comb.
2. Select the medium heat and fast speed setting to rough dry hair. Remove some of the additional moisture from your hair by briskly blow drying the hair all over.

### Settings

#### Speed/Heat

1. Use the Speed Setting Button to select either a slow or fast speed setting.
2. Use the Heat Setting Switch to select low, medium, or high heat.

**NOTE:** If you are having difficulty with the heat settings, make sure the Cool Shot function is turned off.

#### Cool Shot

1. Press the Cool Shot Button once to turn the Cool Shot function on. The indicator light will illuminate.
2. Press the button again to turn the Cool Shot function off.

### Using the Attachments

1. Towel dry and detangle your hair.
2. Apply your favorite styling products as desired.
3. Section your hair for easier styling. Start styling the lowest section and work up towards the top layers.
4. Click or slide on the attachment of your choice.

### Flyaway Tamer

Use the Flyaway Tamer on dry hair or as a finishing tool.

1. To attach the tamer, gently push it onto the dryer and then turn to lock in place in the desired orientation.
2. To achieve the best results, select the high heat and fast speed setting.
3. Start with the attachment at the top of your head by your roots. Your hair will be attracted to the attachment.
4. Slowly run the dryer down the length of your hair.
5. Repeat around the crown of your head until the desired smoothing is achieved.



### Defining Curls with the Standard Diffuser


1. To attach the diffuser, gently push it onto the dryer and then turn to lock into place.
2. To achieve the best results, select the high heat and slow speed setting.
3. Start drying by gently hovering the diffuser over the roots.
4. If desired, place large sections of curls into the bowl of the diffuser and hold to define curls.
5. Repeat with each section until roots to tips are dry.

### Duo Diffuser: Gentle Drying Diffuser

1. To attach the Gentle Drying Diffuser, gently push it onto the dryer and then turn to lock in place.
2. Select the high heat and slow speed setting.
3. Start drying by hovering the diffuser bowl over your roots and then slowly move over your lengths until 100% dry.
4. The gentle diffused airflow speeds up air drying without making contact and disturbing your curls' natural shape.

### Duo Diffuser: Curl-Defining Diffuser

1. To attach the Curl-Defining Diffuser to the dryer, first attach the Gentle Drying Diffuser to the dryer. The Curl-Defining Diffuser is held in place over the Gentle Drying Diffuser with magnets.
2. Select the high heat and slow speed setting.
3. Turn your head upside down and gently place your hair into the diffuser bowl, slightly rotating the dryer as you style.

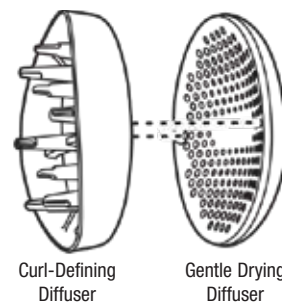

### Styling Concentrator

1. To attach the concentrator, simply push it onto the dryer.
2. Adjust the angle for comfortable styling.
3. The concentrator can be used effectively by itself or in combination with a brush of your choice.
4. To achieve the best results with the concentrator, select the high heat and fast speed setting to start and use the Cool Shot function to finish styling.
5. Start by drying at the roots and then section hair to fit the hair on your brush easily.
6. Direct airflow onto the hair that is on the brush.

### Comb Attachment

1. To attach the Comb Attachment, gently push it on the dryer and then turn to lock in place.
2. Use the switch on the Comb Attachment to choose between the wide-tooth comb configuration and the fine-tooth comb configuration. In general, use the wide-tooth comb for curlier and thicker hair and use the fine-tooth comb for straighter and thinner hair.
3. Select any heat setting and the slow speed setting.
4. Use the Comb Attachment for detangling wet or dry hair, to help stretch or elongate curls, and as a root booster.

## Hair Care Tips

- Place the dryer next to your head. Lessen the amount of heat or move the dryer farther away if the heat becomes uncomfortable.
- Always keep the dryer pointed down the the hair shaft to smooth the cuticle and create a silky, shiny style.
- To help prevent heat damage and add shine, spritz damp hair with heat protection spray before blow drying.
- To create a style with lots of body, apply volumizing mousse to towel-dried hair. Distribute it evenly from roots to ends and then blow dry as usual. Hair will be soft, shiny and full of volume.

## Cleaning and Maintenance

### Maintenance Instructions

- Keep all intake openings clear of dust accumulation. See "Cleaning Instructions" below. No other maintenance or lubrication is required.
- If the cord becomes twisted due to use, periodically straighten it. Store the dryer and cord where they will not be damaged. Do not wrap the cord around the dryer.
- Do not attempt to repair the dryer yourself.

### Cleaning Instructions

- The dryer needs maintenance to ensure the best performance and long life.
- The Air Intake Grille should be cleaned regularly, since a dirty or clogged grille will impair the efficiency of the dryer. To clean the Air Intake Grille, make sure the dryer is turned off and the plug is pulled out of outlet. Use a soft bristle brush or damp cloth to remove any particles that are lodged in the grille's top and bottom.

### Storage

When not in use, unplug the dryer. Allow it to cool, and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance because doing so will cause the cord to wear prematurely and break. Handle the cord carefully and avoid jerking, twisting, or straining it, especially at the plug connections. Gather the cord neatly and use the Integrated Cord Storage to wrap the cord around and secure the back onto the dryer.

## Warranty

### Limited Five-Year Warranty

Empower Brands, LLC warrants this product to the original purchaser against any defects that are due to faulty material or workmanship for a five-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address, and daytime phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648.

### KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

**EMPOWER BRANDS, LLC SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO FIVE YEARS FROM DATE OF ORIGINAL PURCHASE.**

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

**This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the disputed Crimea region.**

## Empower Brands, LLC Money-Back Offer

If within 30 days after you have purchased your Remington® branded product from an authorized source, you are not satisfied and would like a refund, return it with the sales receipt indicating purchase price and date of purchase to the retailer from whom it was purchased. Empower Brands, LLC will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S.

### Remington Guarantees Satisfaction After 30 Days!

### Remington 60-Day Money Back Guarantee<sup>1</sup>

If, within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, keep your receipt and contact us at [contactus@remingtonproducts.com](mailto:contactus@remingtonproducts.com) or call 800-736-4648 in the U.S. or Canada.<sup>2</sup>

<sup>1</sup>Applies to U.S. and Canadian customers' returns only.

<sup>2</sup>Terms and conditions apply.

1. Refund will be in the form of a check issued in U.S. dollars and will include applicable taxes, if any, paid by customer.
2. Please allow 4–6 weeks to receive your refund by check.

Please do not throw this product away with normal household waste. If possible, take it to an official collection point in your area that recycles this type of product. Thank you for considering the environment.

**125 VAC 60 Hz**      **Type: D31A**  
**Questions or comments:** Call 800-736-4648 in the U.S. or visit [RemingtonProducts.com](http://RemingtonProducts.com).

Dist. by: Empower Brands, LLC, Middleton, WI 53562  
© Registered Trademark and ™ Trademark of Empower Brands, LLC.  
© 2023 Empower Brands, LLC. All rights reserved. 5/23 29498

**Made in China.**  
**T22-7002914-A**

