

REMINGTON®

Use and Care Guide EC9001



Use and Care Guide

Register Your New Product Today!

By registering your new Remington® product, you will receive special offers.
Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.

DANGER

As with most electrical appliances, electrical parts are electrically live even when switch is off. To reduce the risk of death by electric shock:

- Always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- If an appliance falls into water, **unplug it immediately**. Do not reach into water.
- Unplug this appliance before cleaning it.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when it's plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities or special needs.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.

- Keep the cord away from heated surfaces. **Do not wrap the cord around the appliance.**
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, etc.
- Never use while sleeping.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not direct hot air toward eyes or other heat-sensitive areas.
- Do not place appliance on any surface while it is operating.
- While using the appliance, keep your hair out of it—keep your hair away from the air inlets.
- Do not use an extension cord or a voltage converter with this appliance.
- This appliance is for household use only.
- Attachments may be hot during use. Allow them to cool before handling.

SAVE THESE INSTRUCTIONS

Safety Instructions

ALCI Safety Device

This hair dryer is provided with an appliance leakage circuit interrupter (ALCI) safety device built into the plug. This device is designed to make the unit inoperable under some abnormal conditions, such as accidental immersion in water. The ALCI safety device is equipped with a test button so that its operation can be checked. This unit should be tested before each use to confirm that the safety device is operational.

To test:

After plugging in your hair dryer:

1. Press the reset button on the ALCI device.
2. Press the test button. The reset button will pop out. This verifies that the safety device is operating properly.
3. Press the reset button to reactivate your ALCI safety device.
4. Your hair dryer is now ready for use.

Note: This unit may automatically trip when unplugged. If so, the unit must be reset after it is plugged in. If the dryer doesn't reset after following the above testing procedure, call 800-736-4648.

1. Should the ALCI safety device trip (i.e., reset button pops out) during use, press the reset button. Should the hair dryer fail to reset, call 800-736-4648. Never operate this appliance if it has been dropped in water.
2. The dryer is designed to work on ordinary household current only, 125 volts A.C., 60 Hz. It is not intended for commercial use.
3. This appliance is equipped with an automatic thermal limiter, which will cycle off when overheated and come back on when cooled down. If the unit cycles off, unplug the cord for several minutes before restarting.
4. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.



THIS MESSAGE ABOUT

GROUND FAULT CIRCUIT INTERRUPTERS

CAN SAVE A LIFE!

If you must use your hair dryer in the bathroom, install a GFCI* now!

Your local electrician can help you decide which type is best for you – a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCI's in bathrooms, garages, and outdoor outlets of all new homes.

Why do you need a GFCI?

Electricity and water don't mix. If your hair dryer falls in water while it's plugged in, the electric shock can kill you— even if **the switch is "off."**

A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you greater protection.



A GFCI can save your life!
Compared to that, the price is small!

Don't wait... install one now!

*GFCI is a sensitive device that reacts immediately to a small electric current leak by stopping the electricity flow.

Product Features

Thank you for purchasing this Remington® Dryer. Please carefully read the instructions contained in this booklet, and keep them in a safe place for future reference.



PARTS

- | | |
|---|---------------------------|
| 1. Outlet grill with advanced conditioning technology | 6. HydraCare™ ON icon (⚡) |
| 2. Heat selector switch | 7. Slim concentrator |
| 3. Speed selector switch | 8. Styling concentrator |
| 4. Cool shot on/off switch | 9. Diffuser |
| 5. HydraCare™ on/off switch (⚡) | 10. Inlet grill |

How to Use

- Wash and condition your hair as normal.
 - Squeeze out excess moisture with a towel and comb through.
 - Hairsprays contain flammable material – do not use while using this product.
 - Fit accessory attachments by pushing it on to the front of the hairdryer. Take care when you do this because the attachments can become hot during use.
1. Plug the product into a power outlet.
 2. Switch your hairdryer on and select the desired speed setting (low or high) using the speed selector switch.
 3. Select the desired heat setting (low, medium, or high) using the heat selector switch.
 4. To use the HydraCare™ function see **Using the HydraCare™ Function** below.
 5. After use, turn the appliance off and unplug it.

Using the HydraCare™ Function

1. Select the HydraCare™ function using the HydraCare on/off switch (⚡).
2. The HydraCare icon (⚡) will illuminate during styling indicating the sensor is continuously regulating the temperature of the air directed to your hair, protecting against excessive heat build-up without compromising on your styling results.

Overheat Protection

In the event of overheating, the appliance may either stop unexpectedly or start to blow cold air. Overheating is usually caused by a blocked grill/filter. If this happens, immediately unplug the appliance and refer to STORAGE, CLEANING AND MAINTENANCE to clean the grill/filter. If, after doing this overheating continues to happen, stop using the appliance and contact Customer Service.

Hair Care Tips

Hair Care Tips

- For fast drying, use the high heat / high speed settings.
- To create smooth styles use the concentrator and a round hair brush (not included) whilst drying.
- To enhance natural curls and waves, attach the diffuser to the dryer. Turn your head upside down and gently place your hair into the diffuser bowl slightly rotating the dryer as you style.
- To create extra volume at the roots of the hair, keep your head upright and place the diffuser against the top of the head. Gently rotate the hairdryer allowing the diffuser fingers to gently massage the scalp being careful not to burn the scalp. Dry gently on a medium heat / low speed setting. Caution: Do not use the diffuser on the highest heat setting.
- To set your style, select the cool shot setting while styling.

Cleaning and Maintenance


Maintenance Instructions

The dryer needs minimum maintenance to ensure the best performance and long life.

- Do not attempt to repair the appliance yourself.
- Keep all intake openings clear of dust accumulation. See “Cleaning Instructions” below. No other maintenance or lubrication is required.
- If the cord becomes twisted due to use, periodically straighten it. Store appliance and cord where they will not be damaged. **Do not wrap cord around dryer.**

Let the appliance cool down before cleaning and storing

- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt from the inlet grill.
- Remove the grill as shown below, clean with a cloth or soft brush, then replace it.

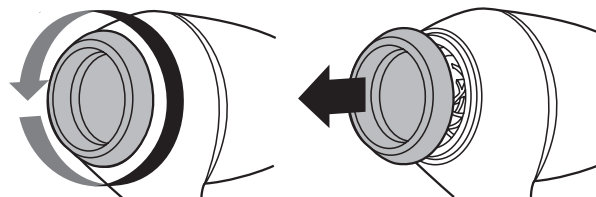

Storage

Storage

When not in use, unplug the unit. Allow it to cool, and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance. This will cause the cord to wear prematurely and break. Handle the cord carefully, and avoid jerking, twisting, or straining it, especially at plug connections.

Warranty

Limited Five-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a five-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the U.S. or Canada.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Any other conditions beyond our control

No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO FIVE YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic

sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the disputed Crimea region.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product from an authorized source, you are not satisfied and would like a refund, return it with the sales receipt indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

Remington Guarantees Satisfaction After 30 Days! Remington 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

*Applies to U.S. and Canadian customers' returns only.

**Terms and conditions apply.

1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® product:
 - a. The Remington® product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at **RemingtonProducts.com/60day**.
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:

Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4–6 weeks to receive your refund by check.

At the end of this product's life, you can mail it to Spectrum Brands at 507 Stokely Drive, Deforest, WI 53532 marked “Product Takeback: Please Recycle!”

125V~ 60Hz TYPE: D15A

Questions or comments: Call 800-736-4648 or visit **RemingtonProducts.com**

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

© Registered Trademark and Trademarks of Spectrum Brands, Inc.

© 2021 Spectrum Brands, Inc. All Rights Reserved.

1/21 28253

Made in China.

T22-7001900-A

