



COUNTERTOP OVEN

HORNO PARA MOSTRADOR

Customer Care Line:

USA 1-800-231-9786
Accesorios/Partes (USA)
 1-800-738-0245
 For **online customer service**
 and to **register** your product, go to
www.prodprotect.com/applica

Servicio para el cliente:

México 01-800 714-2503
Accesorios/Partes (EE.UU)
 1-800-738-0245
 Para **servicio al cliente** y para
registrar su garantía, visite
www.prodprotect.com/applica



MODELS/MODELOS

- **TR0480BS**
- **TR0480SS**
- **TR0480BSFF**

Please Read and Save this Use and Care Book.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock do not immerse cord, plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or in a manner return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to OFF, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use extreme caution when removing tray or disposing of hot grease.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Oversized foods or metal utensils must not be inserted in a toaster oven, as they may create a fire or risk of electric shock.

- A fire may occur if the toaster oven is covered or touching flammable material including curtains, draperies, walls and the like, when in operation.
- To switch off the appliance turn Toast/Timer knob to "OFF" position.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTIONS.

As a safety feature, this product is equipped with a grounded plug, which will only fit into a three-prong outlet. do not attempt to defeat this safety feature. Improper connection of the grounding conductor may result in the risk of electric shock. Consult a qualified electrician if you are in doubt as to whether the outlet is properly grounded.

TAMPER-RESISTANT SCREW

Warning: this appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover, to reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.


ELECTRICAL CORD

a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
 b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
 c) If a long detachable power-supply cord or extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance,
 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
 3) The longer cord should be arranged so that it will not drape over the counter-top or tabletop where it can be pulled on by children or tripped over.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel.

Note: † indicates consumer replaceable/removable parts

- † 10. Baking pan (Part# 480-06) (not shown)
- 9. Curved interior
- 8. Dual position rack slots
- 7. Reversible slide rack (Part# 480-05)
- † 6. Slide-out crumb tray (Part# 480-04)
- † 5. Timer/Toast shade control (Part# 480-03)
- 4. Power indicator light
- † 3. Cooking function selector knob (Part# 480-02)
- † 2. Temperature control knob (Part# 480-01)
- 1. Easy-view glass door

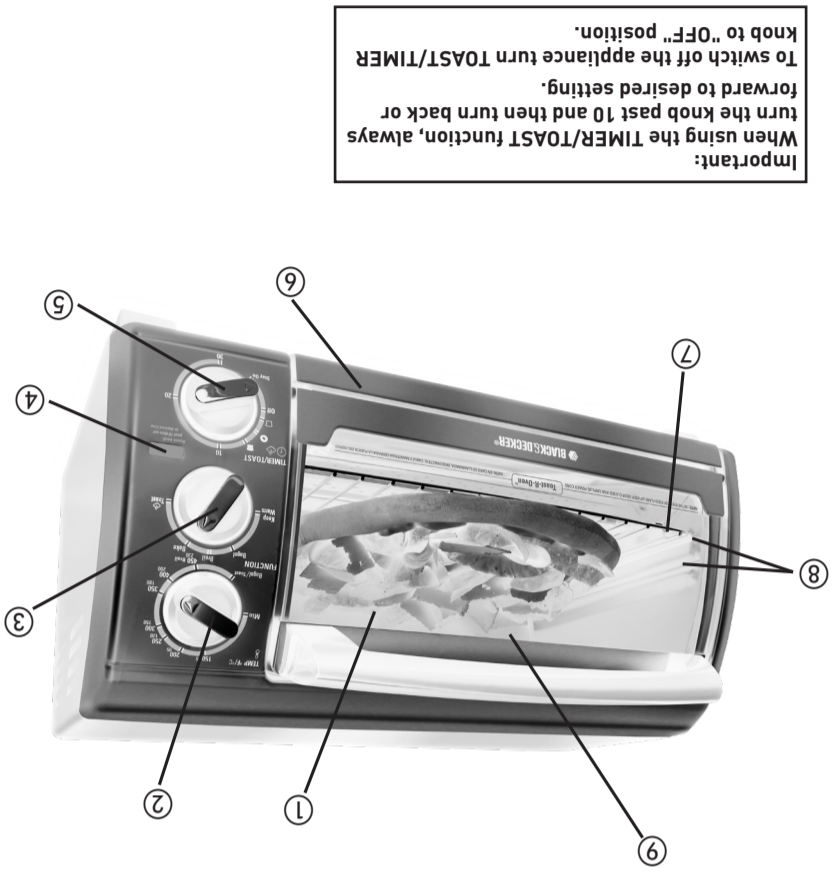

Important:
 When using the TIMER/TOAST function, always turn the knob past 10 and then turn back or forward to desired setting.
 To switch off the appliance turn TOAST/TIMER knob to "OFF" position.

Product may vary slightly from what is illustrated.

- Note:** Be sure the top edge of the food or container is at least 1½" (3.81 cm) away from the upper heating elements.
- Important: Food should not extend beyond the edges of the bake pan/drip tray to avoid drippings from falling onto the heating elements.**
5. Cook food according to recipe or package instructions and check at minimum time to see if it is done.
 6. When finished broiling, the signal bell sounds. Turn the TOAST/TIMER selector to the OFF position. The power indicator light goes off.
 7. Using an oven mitt or pot holder, slide out broiling rack together with bake pan to remove food.
 8. Unplug appliance when not in use.

BROILING CHART

Cooking times are approximate and should be adjusted to individual preferences.

FOOD	APPROXIMATE TIME
Chicken pieces (1-4)	30 - 40 minutes
Hamburguers (1-3)	8 – 22 minutes
Beef steaks (1-2)	18 – 25 minutes
Fish steaks (1-6)	10 – 18 minutes

Care and Cleaning

This product contains no user serviceable parts. Refer service to qualified service personnel.

CLEANING

Important: Before cleaning any part, be sure the oven is off, unplugged, and cool.

1. Clean the glass door with a sponge, soft cloth or nylon pad and sudsy water. do not use a spray glass cleaner.
2. To remove the slide rack, open the door, pull the rack forward and out. Wash the slide rack in sudsy water or in a dishwasher. To remove stubborn spots, use a polyester or nylon pad.
3. Wash the bake pan in sudsy water. To minimize scratching, use a polyester or nylon pad.
4. To open crumb tray, tip back oven, push the crumb tray knob away from you then down. Wipe with a dampened cloth or paper toweling and dry thoroughly. To close, pull the crumb tray knob forward, swing the crumb tray closed, and then pull knob in to lock into place before operating the oven.

EXTERIOR SURFACES

Wipe the top and exterior walls with a damp cloth or sponge. dry thoroughly.

1. Set temperature selector knob to Bagel/Toast position and the FUNCTION selector knob to Toast or Bagel.
2. Open oven door.
3. Insert slide rack.
4. Place desired pieces of bread or bagel to be toasted directly on slide rack and close the door.
5. Turn toast shade selector knob to 10 and then turn back to desired toast shade.
- Note:** You must set the toast shade selector knob as desired for the oven to begin toasting.
6. For best results, on first toasting cycle set the toast selector knob to medium which will be midway between light and dark setting, then re-adjust for next cycle to lighter or darker to suit your preference.
7. The on indicator light comes on and remains on until toasting cycle is complete.

TOAST FUNCTION

- It is not necessary to preheat the oven for toasting.
- You must set the timer or select STAY ON for the oven to function.
 - During first few minutes of use you may notice smoke and a slight odor. This is normal and should cause no concern.
 - This oven gets hot. When in use, always use oven mitts or potholders when touching any outer or inner surface of the oven.




IMPORTANT INFORMATION ABOUT YOUR OVEN

- Plug unit into electrical outlet.
- Remove all packing material and any stickers.
- Wash all removable parts as instructed in CARE AND CLEANING.
- Select a location where this unit is to be used, allowing enough space from back of the unit and the wall to allow heat to flow without damage to cabinets and walls.

GETTING STARTED

Caution: A fire may occur if the toaster oven is covered or touching flammable materials including curtains, draperies, walls and the like when in operation or after, when still hot. Do not place any of the following materials in the oven, on top of the oven, or in contact with the oven sides or bottom surfaces: paper, cardboard, plastic or the like.

Caution: Do not leave oven unattended when in operation. Food ignition may occur. If this happens, unplug unit but DO NOT open door. To reduce the risk of fire, keep oven interior completely clean and free of food residues, oil, grease and any other combustible materials.

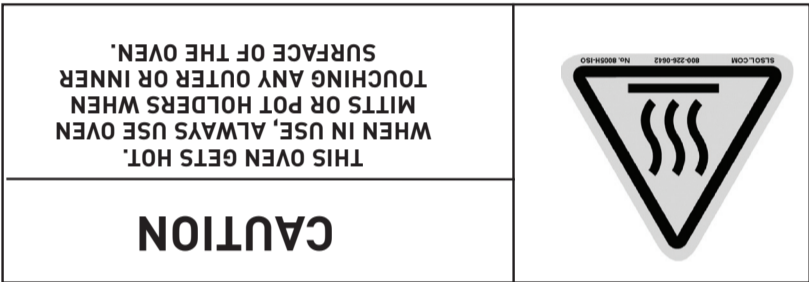

This product is for household use only.

How to Use

8. When toast cycle is complete, there will be an audible signal. The oven and the on indicator light will go off.
 9. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the bagel.
 10. Unplug appliance when not in use.
- ### BAKE FUNCTION
- Note:** For best results, when baking or cooking, always preheat the oven for at least 10 minutes at the desired temperature setting.
1. Set temperature control dial to the desired setting from 150 °F to 450 °F. Set cooking function selector knob to BAKE.
 2. Turn time selector knob to 10 and then turn back or forward to desired baking time, including preheat time. (Select STAY ON to bake longer than 30 minutes or to control cooking time yourself. Be sure to use a kitchen timer.)
 3. The indicator light comes on and will remain lit during the entire baking time.
 4. The heating elements will cycle on and off to maintain even heat distribution.
 5. Once oven has preheated, open oven door and insert food. Close oven door.

KEEP WARM

1. Turn temperature selector between 150°F to 200°F.
 2. Turn cooking function selector to KEEP WARM.
- Note:** This feature is designed to keep already cooked foods warm after they have been cooked. This function should only be used for short periods of time; to prevent food from drying out, cover with foil.
3. When cycle is complete, there is an audible signal. The oven and on indicator light go off.
 4. If not using the oven timer, turn the oven to Off once warming cycle is complete.

5. Unplug appliance when not in use.

- Note:** You can cook your food 3 ways:
- Use the bake pan/ drip tray pan placed on the slide rack.
 - Place the broil rack in the bake/broil pan.
 - Place the food directly on the rack.

- Note:** Be sure food does not extend past the outer limits of the bake pan to prevent grease dripping onto the heating elements.
6. The first time you use the oven, follow the manufacturer's or recipe directions and check for doneness at minimum suggested cooking time. If using the oven timer, there will be an audible signal once the baking cycle is complete. The oven turns off and the light goes out.
 7. If not using the oven timer, turn the oven to OFF once cooking cycle is complete.
 8. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the cooked food.
 9. Unplug appliance when not in use.

BROIL FUNCTION

- Note:** When broiling, preheat oven for 10 minutes.
1. Turn the temperature selector to 450/BROIL. Turn cooking function knob to BROIL.
 2. Open oven door and using the bake pan as a drip tray, insert it under the slide rack on the rack support rails.
 3. Set the timer to desired number of minutes including preheat time or to STAY ON if you want to control cooking time or need to cook your food longer than 30 minutes.
 4. Place food on the baking pan slide rack/broiling rack.

