

# BLACK+DECKER

Customer Care Line: 1-800-465-6070  
For online customer service:  
www.prodprotect.com/blackanddecker  
Línea de Atención del Cliente: 1-800-465-6070  
Para servicio al cliente en línea:  
www.prodprotect.com/blackanddecker  
Ligne Service à la Clientèle: 1-800-465-6070  
Pour le service à la clientèle en ligne:  
www.prodprotect.com/blackanddecker

32 OZ. CITRUS JUICER (1 LITER)  
EXPRIMIDOR DE CÍTRICOS DE 1 LITRO (32 OZ.)  
PRESSE-AGRUMES DE 1 L (32 OZ.)

use and care manual  
manual de uso y cuidado  
guide d'utilisation et d'entretien

CJ650



## PARTS AND FEATURES

1. Cover (Part # CJ650-01)
2. Juicing cone (Part # CJ650-02)
3. Pulp control basket (Part # CJ650-03)
4. Juice container (Part # CJ650-04)
5. Base
6. Cord storage (in base)



Product may vary slightly from what is illustrated.

## GETTING STARTED

- Remove all packing material, any stickers, and the plastic band around the power plug.
- Remove and save literature.
- Please go to [www.prodprotect.com/blackanddecker](http://www.prodprotect.com/blackanddecker) to register your warranty.
- Wash all removable parts.

## CARE AND CLEANING



**Note:** Always unplug the citrus juicer before assembling, disassembling, and cleaning.



To separate the juicing cone from the pulp control basket: Turn over and press on the tabs, while supporting both parts.

### CLEANING

- Wash cover, juicing cone, pulp control basket, and juice container with warm, soapy water or in the dishwasher (top rack only).

- Wipe the base clean with a damp cloth or sponge. Do not immerse base in water.

**Note:** Do not use scouring pads or abrasive cleansers to clean any parts.

## FRESH LEMONADE

Prep Time: 5 min.  
plus refrigeration

Servings: 8

### Ingredients:


- 6 lemons, halved
- 5 cups water
- 2 tsp. Stevia
- 1 lemon, sliced for garnish
- Fresh mint sprigs

### Directions:

Cut 6 lemons in half. Press each half face down on the juicing cone, lifting occasionally to reverse the direction of the cone.

Mix lemon juice, water, and Stevia in a pitcher. Cover and refrigerate 30 to 60 minutes to allow flavors to blend.

Serve over ice and garnish with lemon slices and fresh mint.

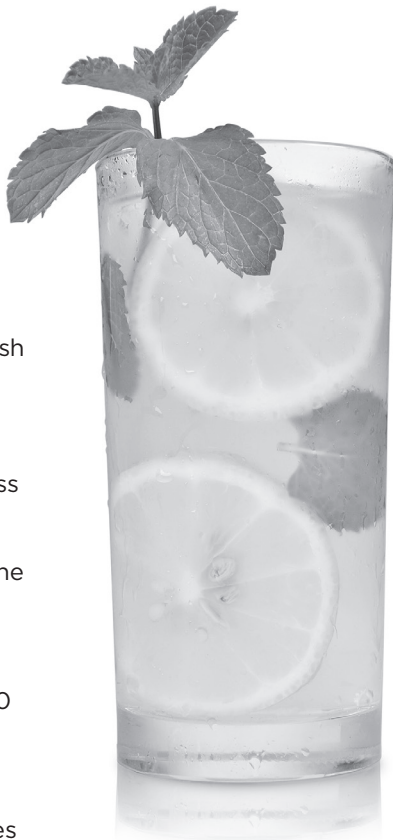

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- To protect against risk of electrical shock, do not immerse cord, plug or base unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the outlet when not in use, before putting on or taking off parts and before cleaning.
- Do not operate appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact Consumer Support at the toll-free number listed in the warranty section. This appliance has important markings on the plug blade. The attachment plug or entire cordset (if plug is molded onto cord) is not suitable for replacement. If damaged, the appliance must be replaced.
- The use of accessories or attachments not recommended by the manufacturer may cause fire, electric shock or injury.
- Do not use outdoors.
- Do not let cord hang over edge of the table or counter.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

## SAVE THESE INSTRUCTIONS.

This product is for household use only.

### POLARIZED PLUG (120V models only)

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

### TAMPER-RESISTANT SCREW

**Warning:** This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.


### ELECTRICAL CORD

- A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
  - Extension cords are available and may be used if care is exercised in their use.
    - The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance; and
    - The cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over.
- Note:** If the power cord is damaged, please contact the warranty department listed in these instructions.


## HOW TO USE



1 Make sure the juicer is unplugged. Place juice container onto the base. Rotate container clockwise to lock.

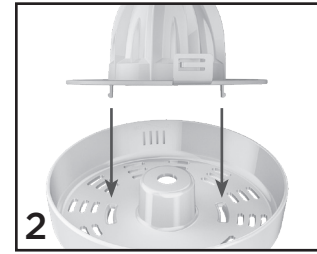

2 Line up the cone tabs and basket slots as shown and snap pieces together.

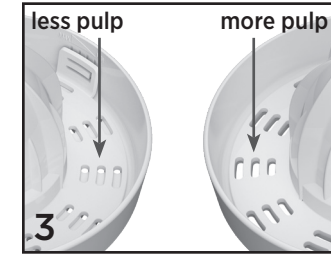

3 Hold basket steady and rotate cone to adjust the hole size/amount of pulp.



4 Place cone assembly into juice container.



5 Plug in citrus juicer.



6 Push down on the cone with halved citrus fruit. This will start the juicer.

### NOTES

- Do not operate this appliance for more than 10 minutes at a time.
- The motor stops automatically when the pressure is completely released.
- This juicer features auto-reverse; it automatically reverses reaming direction from time to time and when pressure is released from the juicing cone and reapplied.
- This juicer has a dual-purpose cone for juicing small citrus (limes) and large citrus (grapefruit).

## WARRANTY AND CUSTOMER SERVICE INFORMATION

### Two-Year Limited Warranty (Applies only in the United States and Canada)

For service, repair or any questions regarding your appliance, call the appropriate 800 number listed within this section. Please **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

### What does it cover?

- Any defect in material or workmanship provided; however, Spectrum Brands Inc's liability will not exceed the purchase price of product.

### For how long?

- Two years from the date of original purchase with proof of purchase.

### What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

### How do you get service?

- Save your receipt as proof of date of sale.
- Visit the online service website at [www.prodprotect.com/blackanddecker](http://www.prodprotect.com/blackanddecker), or call toll-free 1-800-465-6070, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

### What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

### How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

## INSTRUCCIONES IMPORTANTES DE SEGURIDAD

Por favor lea este instructivo antes de usar el producto.  
Cuando se usan aparatos eléctricos, siempre se deben respetar las siguientes medidas básicas de seguridad:

- Lea todas las instrucciones.
- A fin de protegerse contra el riesgo de un choque eléctrico, no sumerja el cable, el enchufe o la base del aparato en agua o cualquier otro líquido.
- La supervisión de un adulto es necesaria cuando el aparato es utilizado por niños o cerca de ellos.
- Desconecte el aparato de la toma de corriente cuando no esté en funcionamiento, antes de instalar o retirar las piezas y antes de limpiarlo.
- Evite el contacto con piezas o partes en movimiento.
- No opere el aparato con un cable o enchufe dañado, o después de presentar problemas de funcionamiento o si se ha dejado caer o se ha dañado de manera alguna. Comuníquese con el departamento de Servicio al Cliente, al número gratis que aparece en la sección de garantía.

garantía. Este aparato contiene marcas importantes en el contacto del enchufe. Ni el enchufe de accesorio ni el enchufe conector (si el enchufe está moldeado en el cable) es apto para ser reemplazado. Si se daña, el aparato debe ser reemplazado.

- El uso de accesorios no recomendados por el fabricante del aparato podría ocasionar incendios, choques eléctricos o lesiones personales.
- Este aparato no se debe utilizar a la intemperie.
- No permita que el cable cuelgue del borde de la mesa ni del mostrador.
- Este aparato no está diseñado para ser usado por personas (incluido niños) con capacidad limitada física, mental o sensoriales disminuidas y falta de experiencia o conocimiento que les impida utilizar el aparato con toda seguridad sin supervisión o instrucción.
- Se debe asegurar la supervisión de los niños para evitar que usen el aparato como juguete.

### CABLE ELÉCTRICO

- 1) Un cable de alimentación corto es provisto para reducir los riesgos de enredarse o tropezar con un cable más largo.
- 2) Existen cables de extensión disponibles y estos pueden ser utilizados si se toma el cuidado debido en su uso.
- 3) Si se utiliza un cable de extensión:
  - a) La clasificación eléctrica marcada del cable de extensión debe ser, como mínimo, igual a la clasificación eléctrica del aparato; y
  - b) El cable debe ser acomodado de manera que no cuelgue del mostrador o de la mesa para evitar que un niño tire del mismo o que alguien se tropiece sin darse cuenta.

**Note:** Si el cable de alimentación está dañado, por favor llame al número del departamento de garantía que aparece en estas instrucciones.

## CONSERVE ESTAS INSTRUCCIONES.

Este aparato eléctrico es para uso doméstico solamente.

### ENCHUFE POLARIZADO (Solamente los modelos de 120V)

Este aparato cuenta con un enchufe polarizado (un contacto es más ancho que el otro). A fin de reducir el riesgo de un choque eléctrico, este enchufe encaja en un tomacorriente polarizado en un solo sentido. Si el enchufe no entra en el tomacorriente, invértalo y si aun así no encaja, consulte con un electricista. Por favor no trate de alterar esta medida de seguridad.

### TORNILLO DE SEGURIDAD

**Advertencia:** Este aparato cuenta con un tornillo de seguridad para evitar la remoción de la cubierta exterior del mismo. A fin de reducir el riesgo de incendio o de choque eléctrico, por favor no trate de remover la cubierta exterior. Este producto no contiene piezas reparables por el consumidor. Toda reparación se debe llevar a cabo únicamente por personal de servicio autorizado

## PIEZAS Y CARACTERÍSTICAS

1. Tapa (pieza no. CJ650-01)
2. Cono exprimidor (pieza no. CJ650-02)
3. Cesta de control de pulpa (pieza no. CJ650-03)
4. Recipiente de jugo (pieza no. CJ650-04)
5. Base
6. Guardacable (en la base)



Este producto puede variar ligeramente del que aparece ilustrado.


## PRIMEROS PASOS

- Retire todo material de empaque, etiquetas y la tira plástica alrededor del enchufe.
- Retire y conserve la literatura.
- Por favor, visite [www.prodprotect.com/blackanddecker](http://www.prodprotect.com/blackanddecker) para registrar su garantía.
- Lave todas las piezas removibles.


## CÓMO USAR



1 Asegúrese de que el exprimidor de cítricos esté desenchufado. Coloque el recipiente de jugo sobre la base. Gire el recipiente hacia la derecha para asegurarlo.

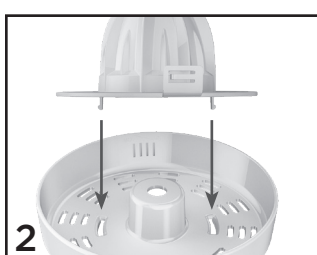

2 Alinee las lengüetas del cono con las ranuras de la cesta según es mostrado y junte las piezas utilizando presión.

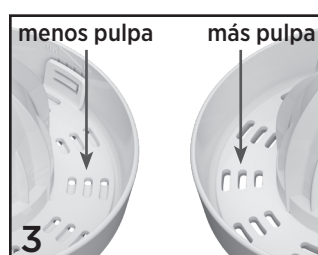

3 Sostenga la cesta de forma estable y gire el cono para ajustar el tamaño del orificio/cantidad de pulpa.



4 Coloque el montaje de cono dentro del recipiente de jugo.



5 Enchufe el exprimidor de cítricos.



6 Empuje hacia abajo sobre el cono con la fruta cítrica cortada a la mitad. Esto activará el exprimidor de cítricos.

### NOTAS

- No haga funcionar la unidad por más de 10 minutos a la vez.
- El motor se detiene automáticamente cuando se suelta la presión.
- Este exprimidor de cítricos está equipado con una función de rotación autoreversible, la cual automáticamente cambia la rotación del cono en dirección opuesta de vez en cuando y cuando se suelta la presión del cono exprimidor y se vuelve a aplicar.
- Este exprimidor de cítricos está equipado con un cono de doble función para exprimir frutas cítricas pequeñas (limas) y grandes (toronjas).

# BLACK+DECKER

Comercializado por:  
Spectrum Brands de México, SA de CV  
Autopista México Querétaro No 3069-  
C Oficina 004 Col. Centro Industrial  
Tlalneapantla CP 54030 Tlalneapantla, Estado  
de México  
Teléfono: 01-800-714-2503

Servicio y Reparación  
Art. 123 No. 95  
Col. Centro, C.P. 06050  
Deleg. Cuauhtemoc  
Servicio al Consumidor,  
Venta de Refacciones  
y Accesorios  
01 800 714 2503

Importado y Distribuido por:  
RAYOVAC ARGENTINA S.R.L. Humboldt  
2495 Piso 30 C1425FUG C.A.B.A.  
Argentina C.U.I.T. NO. 30-70706168-1

Importado por / Imported by:  
Spectrum Brands de México, SA de CV  
Autopista México Querétaro No 3069-  
C Oficina 004 Col. Centro Industrial  
Tlalneapantla CP 54030 Tlalneapantla, Estado  
de México

Para atención de garantía marque:  
01 (800) 714 2503  
Importado por / Imported by:  
Spectrum Brands En Chile,  
Household Products Chile Ltda  
Av. Del Valle 570, Ofic. 704  
Ciudad Empresarial, Huechuraba  
Santiago - Chile  
Fono: (562) 2571 3700

Importado por / Imported by:  
Spectrum Brands Colombia S.A.  
Carrera 17 No.89-40  
Bogotá, Colombia  
Línea de atención al cliente: 018000510012

Sello del Distribuidor:  
Fecha de compra:  
Modelo:

CJ650W-AR 220-240V - 50Hz 20W  
CJ650W-CL 220-240V - 50Hz 20W  
CJ650W 120V - 50Hz 30W

Código de fecha / Date Code / Le code de date:

BLACK+DECKER and the BLACK+DECKER logos and product names are trademarks of The Black & Decker Corporation, used under license. All rights reserved.

BLACK+DECKER y los logos y nombres de productos de BLACK+DECKER son marcas registradas de The Black & Decker Corporation, usados bajo licencia. Todos los derechos reservados.

BLACK+DECKER et les logos et noms de produits BLACK+DECKER sont des marques de commerce de The Black & Decker Corporation, utilisées sous licence. Tous droits réservés.

Made in China.  
Fabricado en China.  
Fabriqué en Chine.

© 2017 The Black & Decker Corporation and Spectrum Brands, Inc., Middleton, WI 53562

21334

T22-5003160

